INTEGRATED LED EMERGENCY EXIT/UNIT COMBO

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

WARNING: FAILURE TO FOLLOW THESE INSTRUCTIONS AND WARNINGS MAY RESULT IN DEATH, SERIOUS INJURY OR SIGNIFICANT PROPERTY DAMAGE. For your protection, read and follow these warnings and instructions carefully before installing or maintaining this equipment. These instructions do not attempt to cover all installation and maintenance situations. If you do not understand these instructions or additional information is required, contact LITHONIA LIGHTING or your local LITHONIA LIGHTING distributor.

WARNING: RISK OF ELECTRIC SHOCK - NEVER CONNECT TO, DISCONNECT FROM, OR SERVICE WHILE EQUIPMENT IS ENERGIZED.

WARNING: RISK OF FIRE. Lamps are hot. Keep combustible material away from hot parts. Observe lamp manufacturer's warnings, recommendations and restrictions on lamp operation and maintenance. Make sure lamps are correctly installed.

CAUTION: The battery in this unit may not be fully charged. After electricity is connected to unit, let battery charge for at least 24 hours, then normal operation of this unit should take effect. To check, press the TEST button. The lamps on the unit should turn on.



IMPORTANT SAFEGUARDS: When using electrical equipment, basic safety precautions should always be followed, including the following:


- Do not use outdoors.
- Consult local building code for approved wiring and installation.
- Disconnect AC power before servicing and installation.
- Do not mount near gas or electric heaters.
- Do not use this equipment for anything other than its intended use.
- The use of accessory equipment not recommended by the manufacturer will void product listing and warranty and may cause an unsafe condition.
- Any service on this equipment should be performed by qualified personnel only.
- Equipment should be mounted in locations and at heights where it will not be subject to tampering by unauthorized personnel.
- Use caution when servicing batteries.
- Cap unused wires with enclosed wire nuts or other approved method.
- Make sure wire terminations are secure and leads are properly tucked in appropriate wire channels.

INSTALLATION

NOTE: Max mounting height is 8 ft to achieve at least 1 ft-candle of illuminance in emergency mode.

BACK MOUNT INSTALLATION:

- 1. Remove lens on bottom of fixture, set aside.
- 2. Remove EXIT stencil from housing, set aside.
- 3. Drill or knock out appropriate knockouts on back plate to fit junction box mounting points.
- 4. Drill or knock out center hole in back plate for EXIT input wire leads.
- 5. Route EXIT input wires through center hole of the back plate and make wiring connection. For 120V, use black and white wires and for 277V, use red and white wires. WARNING: Properly insulate the unused lead with a wire nut (provided) or other approved means.
- 6. Secure back plate to junction box (hardware not included).
- 7. Remove proper chevron(s) as required. When removing chevrons it may be helpful to remove the color diffuser panel to allow easier access to the chevrons. If removing color diffuser panel it is important to remember to reinstall the diffuser panel once chevron(s) have been removed.
- 8. Connect battery only after continuous AC power can be provided to the unit.
- 9. Install lens removed in step 1 to bottom of fixture.
- 10. Apply continuous AC power and press "TEST" button to check operation. (See operation (battery back-up) for testing procedures)



TOP & SIDE MOUNT INSTALLATION:

- Remove lens on bottom of fixture, set aside.
- 2. Remove EXIT stencil from housing, set aside.
- 3. Place screws (provided) in holes on the canopy.
- 4. Remove the desired mounting hole plug located on the frame of the sign. For ceiling mount, hole plug will be located on the top of the housing. For wall mount, hole plug will be located on the side of the housing.
- 5. Route EXIT input wires through mounting hole of the housing, through the mounting canopy and through the center of the metal mounting plate. Dress wires carefully through housing.
- 6. Make wiring connection. For 120V, use black and white wires and for 277V, use red and white wires. WARNING: Properly insulate the unused lead with a wire nut (provided) or other approved means.
- 7. Push wire connections into the J-Box. Secure mounting plate to junction box (hardware not included).
- 8. Secure the canopy to the steel mounting plate with screws installed in step 2.
- 9. Remove proper chevron(s) as required. When removing chevrons it may be helpful to remove the color diffuser panel to allow easier access to the chevrons. If removing color diffuser panel it is important to remember to reinstall the diffuser panel once chevron(s) have been removed.
- 10. Connect battery only after continuous AC power can be provided to the unit.
- 11. Secure face plate(s) to the housing.
- 12. Install lens removed in step 1 to bottom of fixture.
- 13. Apply continuous AC power and press "TEST" button to check operation. (See operation (battery back-up) for testing procedures)

OPERATION (Lightbar Adjustment):

1. Rotate the light bar to set the direction of the light output by using a flat head screwdriver to turn the knob located next to the test switch on the side of the unit.

OPERATION (Battery Backup):

- 1. Apply AC power to the unit. The LED indicator will be RED.
- 2. After the battery has been left to charge for 24 hours, test the unit by pushing the switch. The LED indicator turns OFF and the LED board stays ON.
- When the switch is released, the LED indicator turns back to RED and the LED board stays ON.


MAINTENANCE:

Caution: Always turn OFF AC power to the equipment before servicing. Servicing should be performed only by a qualified service technician. Use only MANUFACTURER supplied replacement parts.

1. BATTERY: The battery supplied in this equipment requires no maintenance. However, it should be tested periodically and replaced when it no longer operates the connected sign for the duration of a 30-second or 90-minute test. The battery supplied in this equipment has a life expectancy of 5 years when used in a normal ambient temperature of 72°F.

WIRING DIAGRAMS:

High output with remote capacity

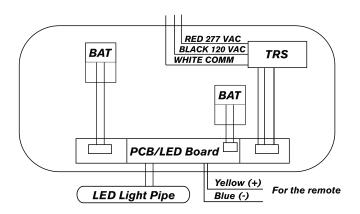



An **Scuity**Brands Company **Lithonia Emergency**

One Lithonia Way, Conyers GA 30012 Phone: 800-334-8694 www.lithonia.com

Part No. EMCSA00805 Rev. E 2017 06 20