


# Center Drain Washing Machine Outlet Box with Quarter Turn Hammer Arrester Valves

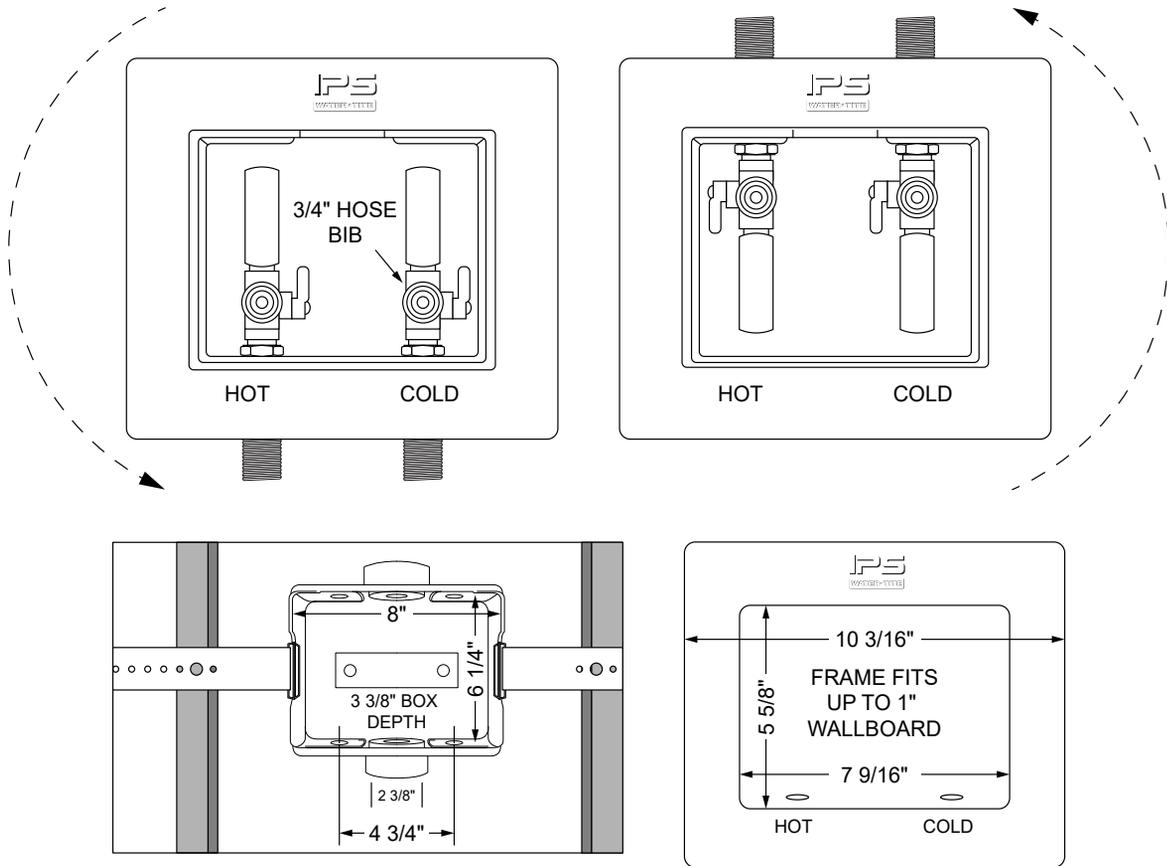

## W4700 Washing Machine Outlet Box Installation Instructions

- 1) Remove faceplate that is attached to the washing machine outlet box and save for future installation once sheet rock has been completed.
- 2) Using either nails or screws, mount the box to the stud.
- 3) The different length Mounting Flanges can be mounted on either side of the box.
- 4) Make sure washer box drain is above the water level of the washing machine, approximately 42".
- 5) Solvent weld appropriate pipe to the drain fitting stub integral to the box. All piping systems should be made to local codes which require a P-trap installation below washer box.
- 6) Connect the water supply piping to the washing machine box valves using appropriate piping for valve connections. Check all local codes.
- 7) Test all piping joints for leaks. Test drain line if required by local code.
- 8) After sheet rock has been installed, snap the faceplate onto the washing machine box.
- 9) Attach washing machine water supply hoses to the 3/4 hose bibb outlets on the front of the appropriate valves and insert the washing machine drain hose into opening of the 2" drain line from inside the washer box. Make sure drain hose is secured so it does not push out of the box due to the water being forced out of the hose from the washing machine.
- 10) Check all local codes for appropriate approvals and requirements.

See second page for replacement parts and item listing.

Part #	Description	Qty	Where used
89267	Faceplate	1	All 4700 Series Boxes
88351	Brass Qtr Turn Valve Sweat w/HA - Red Handle	1	Copper/Sweat Valves
88352	Brass Qtr Turn Valve Sweat w/HA - Blue Handle	1	Copper/Sweat Valves
88353	Brass Qtr Turn Valve F1807 w/HA - Red Handle	1	F1807 (PEX) Valves
88354	Brass Qtr Turn Valve F1807 w/HA - Blue Handle	1	F1807 (PEX) Valves
88358	Brass Qtr Turn Valve F1960 w/HA - Red Handle	1	F1960 (Wirsbo) Valves
88359	Brass Qtr Turn Valve F1960 w/HA - Blue Handle	1	F1960 (Wirsbo) Valves
88437	Brass Qtr Turn Valve Rehau w/HA - Red Handle	1	REHAU EVERLOC+™ Valves
88438	Brass Qtr Turn Valve Rehau w/HA - Blue Handle	1	REHAU EVERLOC+™ Valves
89917	1/2-14 Hex Locknut	2	All above Valves
88356	Brass Qtr Turn Valve CPVC w/HA - Red Handle	1	CPVC valves
88357	Brass Qtr Turn Valve CPVC w/HA - Blue Handle	1	CPVC valves

Item #	Product Description	Model #	Case Qty
85708	Brass Qtr-turn Arrester Valves, Installed, 1/2" Sweat Conx.	W4700HA	10
85711	Brass Qtr-turn Arrester Valves, Installed, 1/2" CPVC Conx.	W4701HA	10
85716	Brass Qtr-turn Arrester Valves, Installed, 1/2" PEX F1807 Conx.	W4702HA	10
85738	Brass Qtr-turn Arrester Valves, Installed, 1/2" Wirsbo F1960 Conx.	W4711HA	10
82754	Brass Qtr-turn Arrester Valves, Installed, REHAU EVERLOC+™ Conx.	W4705HA	10
<b>Contractor Pack</b>			
85709	Brass Qtr-turn Arrester Valves, Installed, 1/2" Sweat Conx.	W4700HACP	20
85713	Brass Qtr-turn Arrester Valves, Installed, 1/2" Wirsbo F1960 Conx., Less Frame	W4700HACPLF	20
85712	Brass Qtr-turn Arrester Valves, Installed, 1/2" CPVC Conx.	W4701HACP	20
85722	Brass Qtr-turn Arrester Valves, Installed, 1/2" PEX F1807 Conx.	W4702HACP	20
85739	Brass Qtr-turn Arrester Valves, Installed, 1/2" Wirsbo F1960 Conx.	W4711HACP	20
82755	Brass Qtr-turn Arrester Valves, Installed, REHAU EVERLOC+™ Conx.	W4705HACP	20



500 Distribution Parkway, Collierville, TN 38017 ▪ Phone: 800-888-8312 ▪ Fax: 901-853-5008 ▪ [www.ipscorp.com](http://www.ipscorp.com)