

EZ TRAP[®]

U.S. Patent Numbers 5,069,042 5,522,229

Model No.

83113

(EZT113)


3/4" Standard Condensate Trap. No Brush

1" DROP

Kit Contents

- 3/4" Standard Trap (1)
- 3/4" Cross (1)
- 3/4" Tee (1)
- Red Caps (3)
- Yellow Cleaning Label (1)

Scan for more info

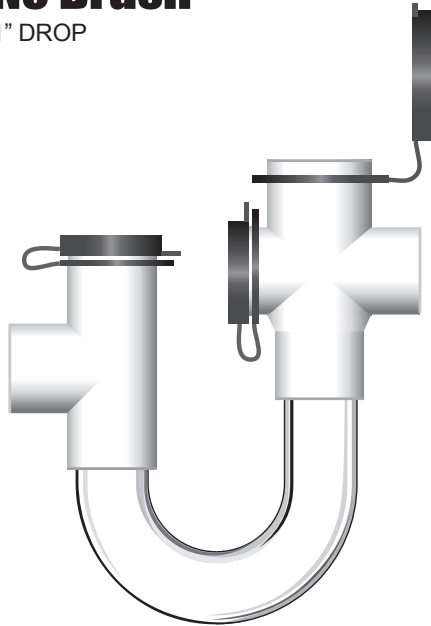

2 Year

LIMITED WARRANTY. RectorSeal[®] warrants to the original consumer purchaser ("Purchaser") of its product, EZ Trap[®], that it is free from defects in material or workmanship. If within two years (24 months) from the date of the original consumer purchase this product shall prove to be defective, it shall be repaired or replaced at RectorSeal's option. Your original receipt of purchase is required to determine warranty eligibility.

RectorSeal[®] 2601 Spenwick Drive - Houston, TX 77055
ph: 713.263.8001 - 800.231.3345 fax: 713.263.7577 - 800.441.0051
www.rectorseal.com - Like Us on Facebook



Installation Instructions


Model No.

83113

(EZT113)

Important:

Install in strict accordance with RectorSeal® instructions as well as all applicable local plumbing, drainage and electrical codes.

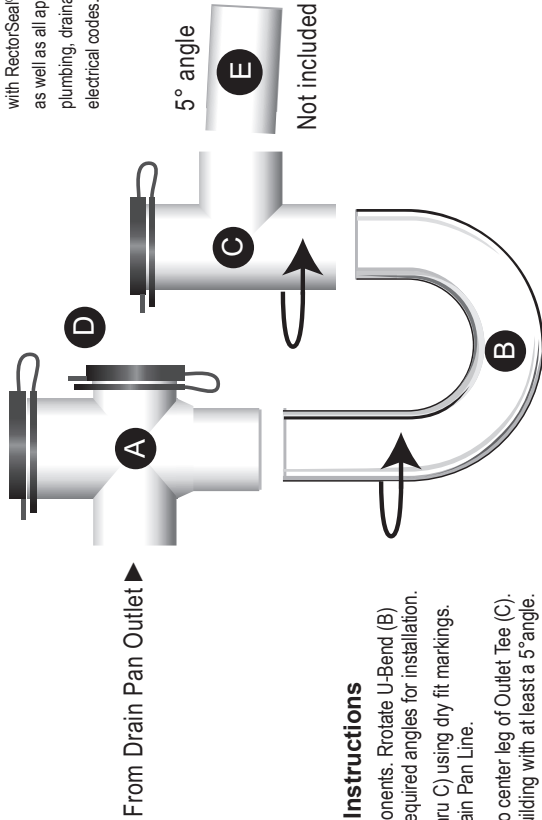

Trap Assembly Instructions

1. Dry fit, and mark components. Rotate U-Bend (B) and Outlet Tee (C) to required angles for installation.
2. Glue components (A thru C) using dry fit markings. Glue assembly into Drain Pan Line.
3. Glue Drain Line (E) into center leg of Outlet Tee (C). Drain Line must exit building with at least a 5° angle.
4. Check that Red Caps (D) are tightly secured.
5. Attach cleaning label as indicated.

Note: Insulation is required when trap is installed in unconditioned space where sweating can occur.