



SYMMONS® DS Creations

the smart choice™


SLW-8702-1.5 (S-2641-2) Two Handle Widespread Lavatory Faucet Installation Guide



Model Numbers	Specification
<input type="checkbox"/> SLW-8702-1.5 <i>Two Handle Widespread Lavatory Faucet</i>	Two Handle Widespread Lavatory Faucet featuring 8"-16" mounting configuration shall include ceramic cartridges, 1/2" IPS inlet connections, metal drain assembly and 1.5 gpm (5.7 L/min) aerator. Faucet shall be made from metal construction, plated in standard polished chrome finish.
Modifications	
<input type="checkbox"/> -1.0  1.0 gpm (3.8 L/min) flow restrictor Note: Append appropriate -suffix to model number.	
Warranty Limited Lifetime - to the original end purchaser in consumer/residential installations. 5 Years - for industrial/commercial installations. Refer to www.symmons.com/warranty for complete warranty information.	




Dimensions


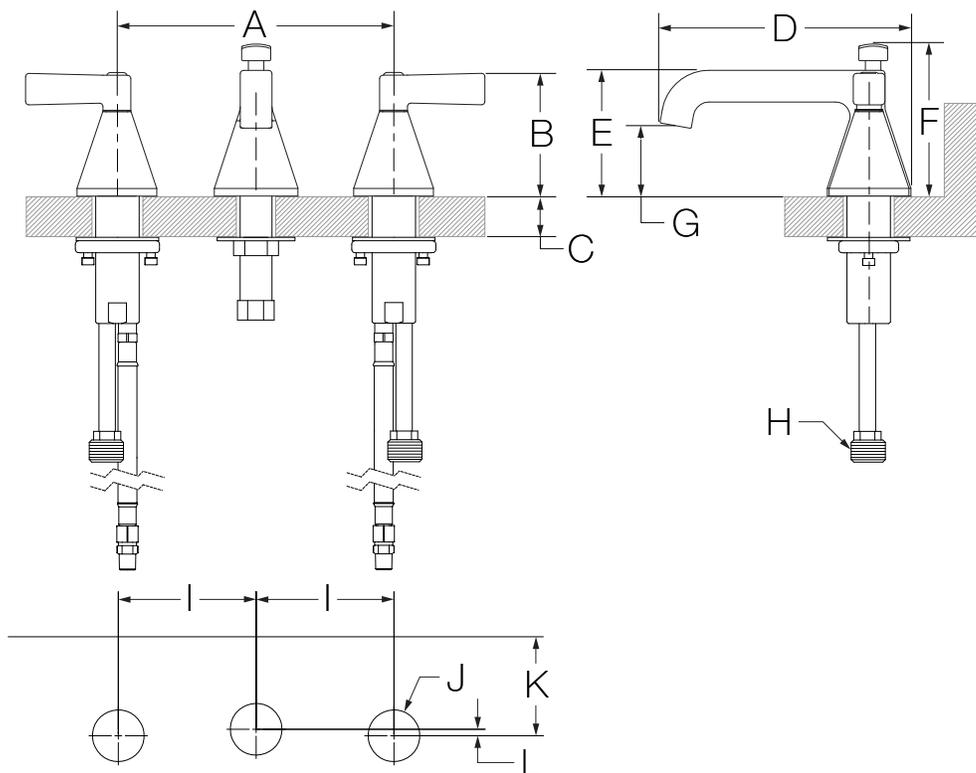


Measurements	
A	8", 203 mm
B	3-1/8", 79 mm
C	Deck Thickness Ref. Min. 1", 25 mm Max. 2", 51 mm
D	6-1/2", 165 mm
E	3-1/4", 83 mm
F	3-7/8", 98 mm
G	1-7/8", 48 mm
H	1/2-14 NPSM
I	4", 102 mm
J	(3x) Hole Size Max. Ø 1-1/2", 38 mm
K	To Backsplash Min. 2-7/8", 73 mm
L	3/16", 5 mm

Note: Dimensions subject to change without notice.

Parts Breakdown

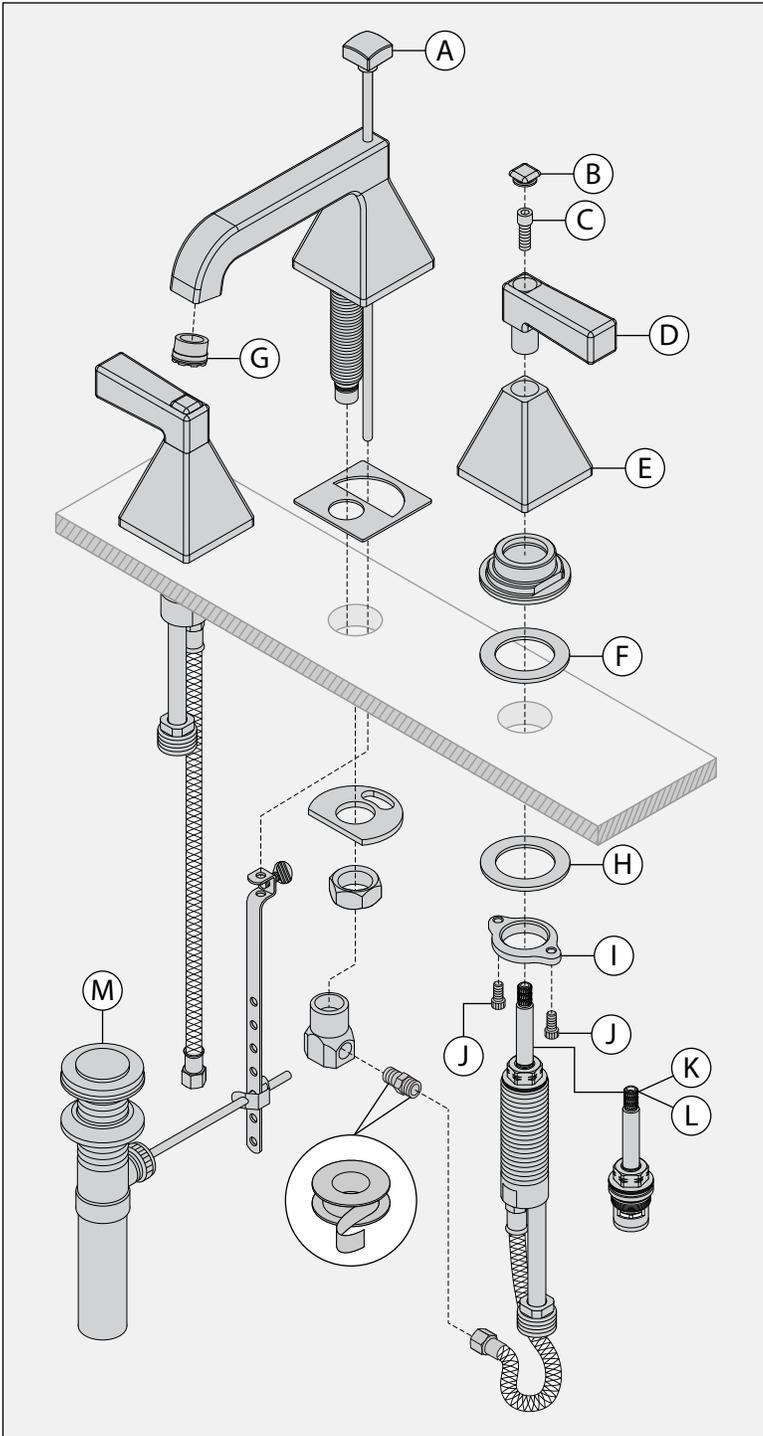

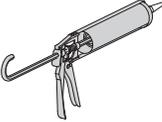Replacement Parts		
Item	Description	Part Number
A	Lift Rod	RL-047
B	Plug Button	RL-045
C	Set Screw	
D	Handle	
E	Escutcheon	
F	Washer	
E	Escutcheon	
G	1.5 Aerator 1.0 Aerator	FLR-102-1.5-KIT LN-742-KIT
H	Washer	RL-187
I	Mounting Nut	
J	Mounting Screws	
K	Cold Cartridge	KN-113E
L	Hot Cartridge	KN-114E
M	Metal Drain	RL-154LR
Tools Required for Installation		
Adjustable Wrench		
Allen Wrench: Handle (3 mm)		
Phillips Head Screwdriver		
Plumber Putty		
Plumber Tape		
Silicone		

Notes:

- 1) Apply a bead of silicone around the perimeter of trim installed flush to sink.
- 2) Apply plumber tape to all threaded connections.

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.