













Spectrum How To







Prepare for Use

<p>1</p>  <p>Turn lower cord wrap to release the cord. Plug in cord.</p>  <p>Set the brush height. <i>(Adjust height accordingly)</i></p>	<p>2</p>   <p>Adjust the handle by pushing the handle lock button then pull or push to a comfortable height.</p>	<p>3</p>  <p>Step on foot pedal to lower the handle.</p>  <p>If too much pull on the brush, or brush light ON, readjust brush height (step 2).</p>
--	---	---




Machine Operation

<p>1</p>  <p>Vacuum sections of carpeting in overlapping rows.</p>	<p>2</p>  <p>Edge clean by running Right side of machine along desired edge.</p>	<p>3</p>  <p>Lower the vacuum handle to the floor to vacuum under furniture.</p>
<p>4</p>  <p>Lift or carry upstairs or over threshold by grabbing the large lifting handle.</p>	<p>5</p>  <p>For above floor cleaning, set the machine upright, remove the wand and attach appropriate tool.</p>	<p>6</p>  <p>Install the crevice tool for extended performance for those hard to reach areas.</p>


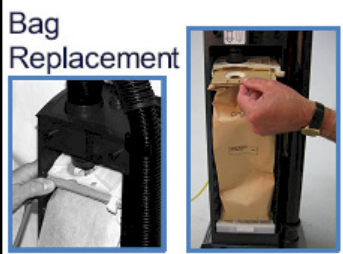
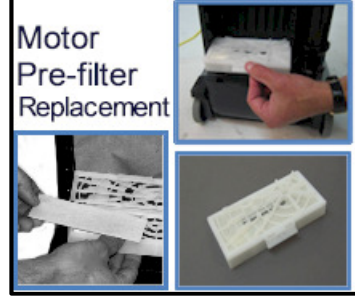
Spectrum How To Clearing a Clog

1	 <p>Restricted airflow light indicator comes on, please check the following things.</p>	2	 <p>Check to see if bag is full or if the tube, hose or nozzle is blocked. Replace bag if needed.</p>	3	 <p>Remove the upper hose and wand to inspect for clogged debris. Detach the wand receptacle.</p>
4	 <p>Release and remove the brush cover by unlocking the bearing lock then pull brush out.</p>	5	 <p>Inspect lower hose by looking through the wand receptacle to the brush housing area. <i>(You should have a clear view. If not, there is a clog)</i></p>	6	 <p>Remove debris by pushing it forward via the brush opening <i>(use a long narrow object if needed)</i>. Reinstall brush and brush cover. Reattach wand receptacle.</p>

Spectrum How To Store The Machine

1	 <p>Return wand to holster and all tools to storage compartment.</p>	2	 <p>Unplug cord and wrap cord on cord wrap or hang from upper cord wrap.</p>	3	 <p>Check the brush house. Remove any built-up carpet fibers or debris from the brush and the brush housing.</p>
----------	---	----------	---	----------	---

Routine Maintenance

1	 <p>If bag light ON: 1) Check the bag to see if it's full. 2) Check pre-motor filter for cleanliness. 3) Check for clogs.</p>	2	 <p>Bag Replacement</p> <ol style="list-style-type: none"> 1) Pull latch to open back cover. 2) Lower bag bracket by pushing down on left side. 3) Pull bag out from bracket. 4) Replace bag, sliding cardboard piece along track. Push into place. 5) Raise plastic bag bracket until it clicks into place. 6) Replace cover 	3	 <p>Motor Pre-filter Replacement</p> <p>Replace or clean pre-filter every 5 to 10 bag changes or if light is ON. Find in a cassette just below filter bag. Clean with water or vacuum. Allow to dry. Do NOT operate the vacuum without pre-filter.</p>
----------	---	----------	---	----------	---