



INSTALLATION AND USER GUIDE FOR VB60W PUSH-BUTTON TIMER

READ AND SAVE THESE INSTRUCTIONS


The illustrations in this document are generic; your push button appearance may be slightly different from the ones shown.

⚠ WARNING


Always disconnect the unit before making any connections. Failure in disconnecting power could result in electric shock or damage of the wall control or electronic module inside the unit.

- ❶ Unplug the ventilation unit.

- ❷ Cut a $2\frac{3}{8}$ " x $1\frac{3}{8}$ " hole in a wall, at a convenient location for the push button. Route a cable (type 22/4) for the push-button from the unit to this hole. See figure at right.

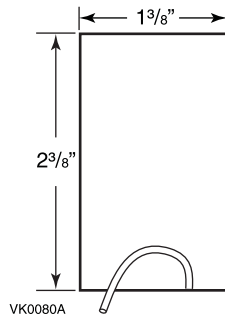


- ❸ Temporarily place the push button over the hole and mark both mounting screw hole positions.

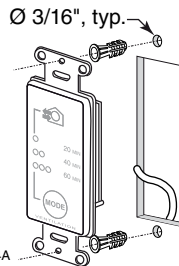


- ❹ Remove the push button, drill both screw holes ($3/16$ " Ø) in wall and insert the wall anchors (included).

- ❺ Strip the end of the cable to access the wires.
NOTE: Although this is a 4-wire cable, only 3 of them will be used for connection.
Strip the end of 3 wires. Connect wires to the terminals, regardless of the wire color: one wire to "OL", another one to "OC" and a last one to "I". **Note which wire color has been chosen for each terminal.** See illustration below.


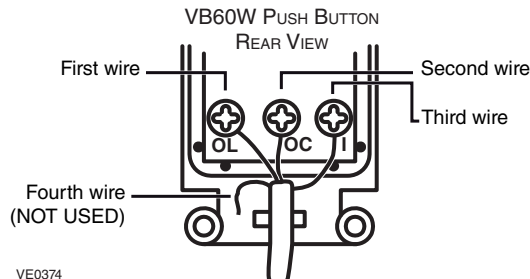


- ❻ Mount the push button to the wall.

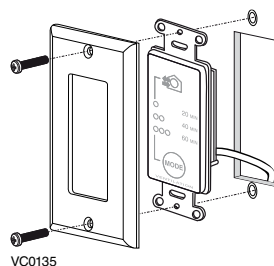

- ❼ Perform the electrical connection to the terminal connector (A or B) of the unit, as shown below. For more details, refer to the installation manual of the ventilation unit.

NOTE: To avoid miswiring, refer to the notes about the color of the wires taken on step ❺.

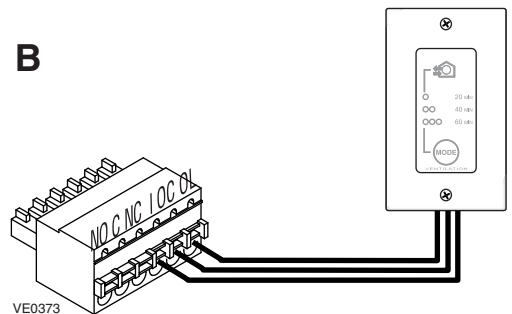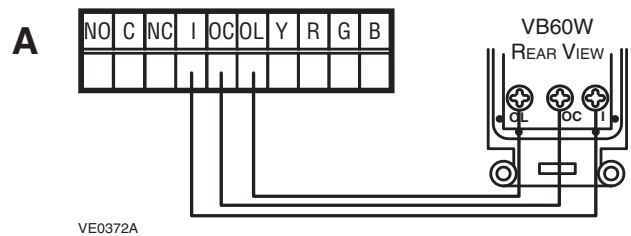

- ❽ Plug the ventilation unit and test the push button.

High speed activation times are in multiples of 20 minutes.

- Within two seconds, push once for 20-minute, twice for 40-minute, or three times for 60-minute activation. Indicator then lights up and the system exchanges air at high speed.
- Every five seconds, the indicator light flashes once to indicate a 20-minute selection, twice for a 40-minute and three times for a 60-minute selection.
- Push once more to stop activation. Unit then returns to its previous setting.

