



Instructions for Assembling RACO® Crushed Corner Covers


STEP 1. If your cover includes the threaded break off tabs, remove them with a pliers.

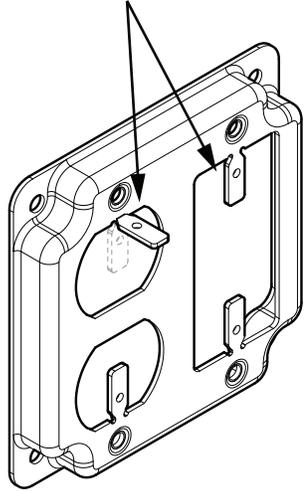

STEP 2. Remove and retain the mounting screws included with the device. These screws will be used to secure the device to the cover.

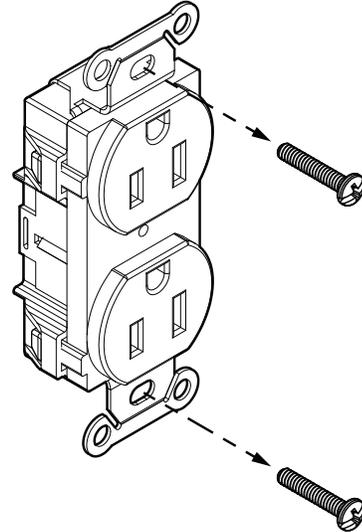

STEP 3. Prepare the device for mounting by removing the ears from the mounting strap or yoke by bending back and forth a few times at the perforation. For most receptacle also remove the ends of the strap at the perforation.

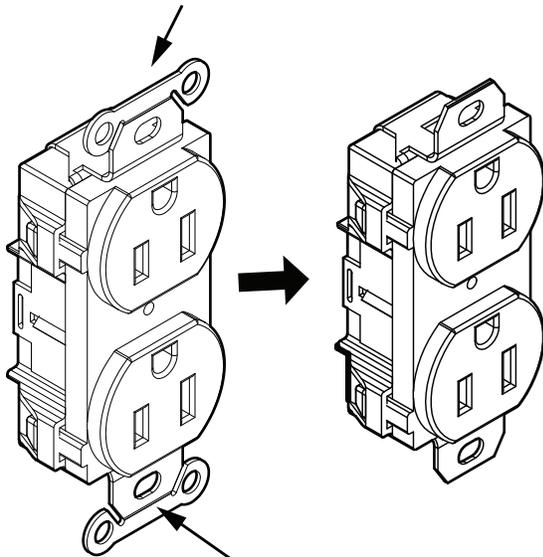

NOTE: If you don't see the perforation it might be necessary to snip the pieces off with a cutting tool. Avoid removing too much strap to maintain the integrity of the device mounting holes.

STEP 4. Now wire the device or devices per manufacturer instructions.

STEP 5. Secure the device to the cover using the device mounting screws that come with the cover or device. The threaded tabs wedge against the edge of the cover allowing for a tight connection without holding a nut.

