

# model **7610S**

AXION® MSR Sink Mount Eye/Face Wash

### **FEATURES & BENEFITS**

#### VALVE

Units pull-down to activate design produces a full continuous flow of water and provides an easy start to the irrigation process.

#### **SAFETY**

 $8" \times 10-3/4"$  (20.3 x 27.3 cm) universal emergency sign make the unit easily detected in an emergency. Test card to record weekly checks helps maintain the unit's best working quality.

#### MOUNTING

Unit mounts at the back of sink, or on a wall so when the unit is not in use, it is as far out of the way as possible.

#### **EYE/FACE WASH**

AXION® MSR eye/face wash head uses an inverted directional laminar flow to sweep contaminants away from the vulnerable nasal cavity.

### **OPTIONS**

- Emergency Alarm System: Model 9001.5, 1/2" 120 VAC emergency alarm and light system. Buzzer and flashing light are activated by a 1/2" IPS double pole, double throw flow switch.
- □ Thermostatic Mixing Valve: Model 9201EFE AXION® Emergency Tempering Valve thermostatically mixes hot and cold water to provide a safe fluid supply for a single emergency eye/face wash, with a flow rate of 12 gpm (38.8 L).
- ☐ Test Tag: SP170 is a green waterproof test card with space for date and initials of inspector. Used to record weekly testing of emergency equipment.
- □ Thermostatic Mixing Valve: Model 9201EW AXION® Emergency Tempering Valve thermostatically mixes hot and cold water to provide a safe fluid supply for a single emergency eye/face wash, with a flow rate of 10 gpm (38.8 L).

For more information, visit www.hawsco.com or call (888) 640-4297.



## **SPECIFICATIONS**

Model 7610S sink/counter top or wall mount eye/face wash shall include the AXION® MSR eye/face wash head with inverted directional laminar flow for Zero Vertical Velocity™ supplied by an integral 4.2 gpm flow control. The 13 inch drop-down length of the Axion head assembly fits nicely into most standard sinks. For wheel-chair accessibility, the Haws model 7610 with a 16-1/2 inch length reach is available. Also included; polished chrome brass single action pull-down valve body, universal sign, and 1/2" O.D. (1.3 cm) slip joint inlet.


## **APPLICATIONS**

Where safety is of the utmost importance and the eyes of any person may be exposed to injurious or corrosive materials, suitable facilities for quick flushing and cleansing of the eyes must be provided within the work area for immediate emergency use. When installed properly, the stable construction, counter top design of the 7610S is space efficient with its rear mounting location. Model is certified by CSA to meet the ANSI Z358.1 Standard for Emergency Eyewash and Shower Equipment.



#### NOTES:

- 1. WHEN INSTALLING THIS UNIT, LOCAL, STATE, OR FEDERAL CODES SHOULD BE ADHERED TO FOR INSTALLATION DIMENSIONS (LOCATIONS), WASTE AND SUPPLY REQUIREMENTS OTHER THAN SHOWN.
- 2. TO COMPLY WITH ANSI Z358.1-2014 FOR EMERGENCY EYEWASH OR EYE/FACE WASH: EYEWASH OR EYE/FACE WASH SHALL BE POSITIONED SUCH THAT FLUSHING FLUID PATTERN IS NOT LESS THAN 33" (838mm), NO GREATER THAN 53" (1346mm) FROM SURFACE ON WHICH USER STANDS, AND 6.0" (153mm) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
- 3 HEIGHT IS DETERMINED BY WATER FLOW PATTERN HEIGHT SHOWN, WHICH IN TURN, IS DEPENDENT ON IN-LINE SUPPLY PRESSURE.
- 4 DRILL ONE Ø7/8" [22mm] HOLE AND TWO Ø5/32" HOLES WHERE UNIT IS TO BE INSTALLED. REFER TO MOUNTING HOLE DETAIL ON SHEET 2 OF 3 OR 3 OF 3.
- 5 ASSEMBLE EYE/FACE WASH TO ARM; ORIENT TAB ON ASSEMBLY AWAY FROM USER.
- 6. DIMENSIONS MAY VARY BY ±1/2" (13 mm).

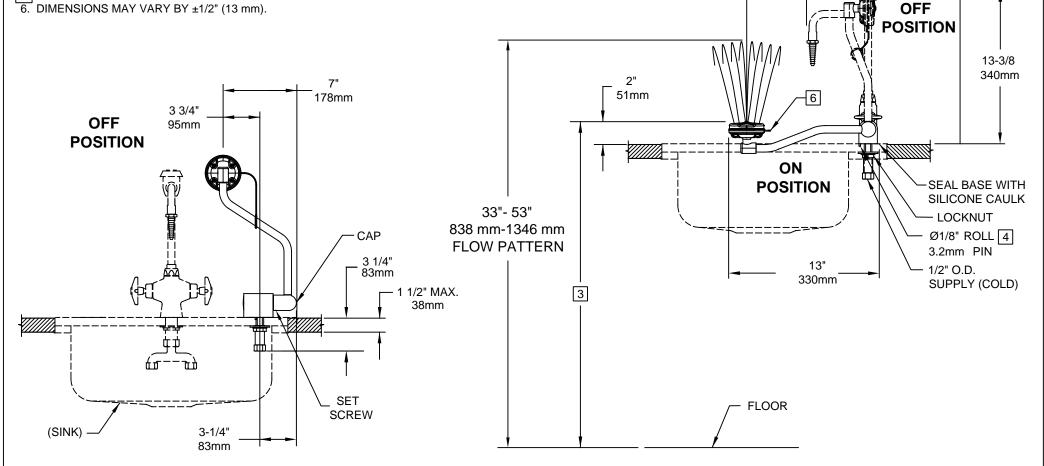

## **7610S DECK MOUNTED CONFIGURATION**

(SEE SHEET 3 FOR 7610S DECK MOUNTED DETAIL) (SEE SHEET 2 FOR 7610S WALL MOUNTED CONFIGURATION)



2-3/8"


60mm


WALL

152mm

MIN.

**CLEARANCE** 

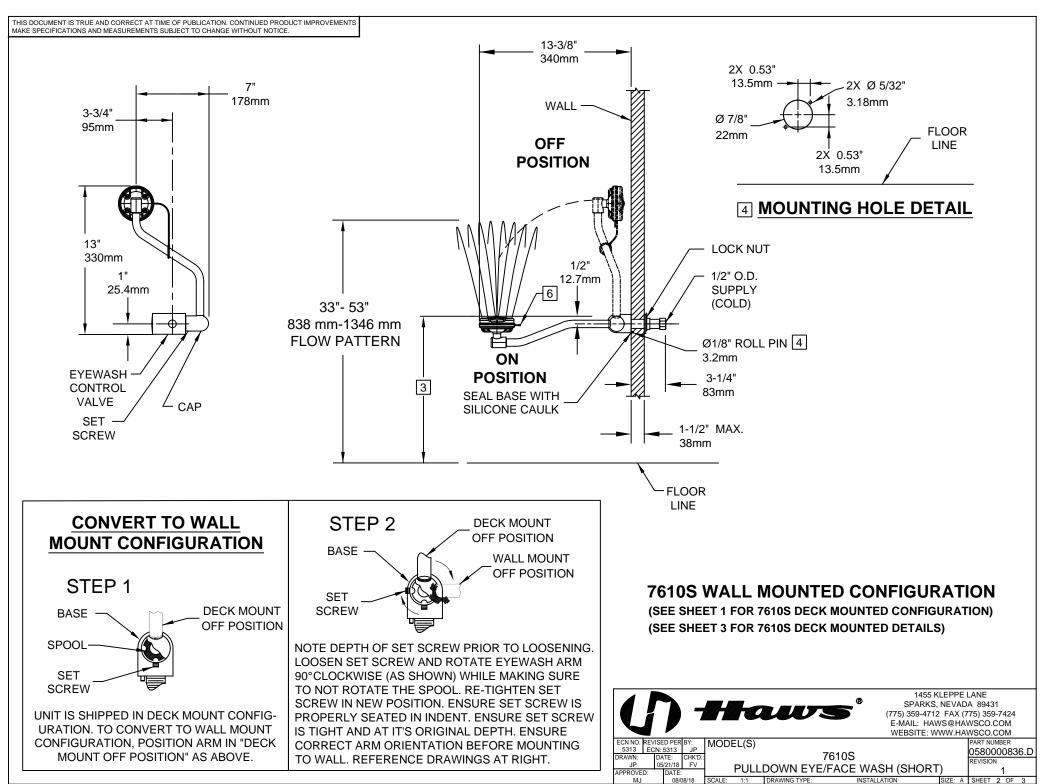

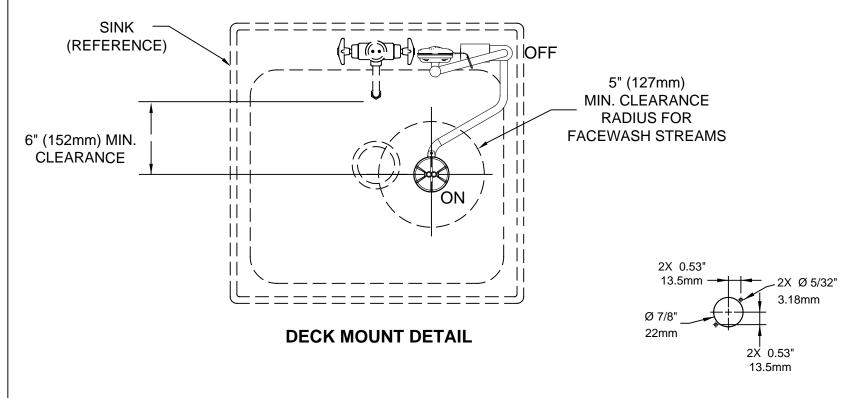

## **4 MOUNTING HOLE DETAIL**

## **7610S DECK MOUNTED CONFIGURATION**

(SEE SHEET 1 FOR 7610S DECK MOUNTED CONFIGURATION) (SEE SHEET 2 FOR 7610S WALL MOUNTED CONFIGURATION)

