INSTALLATION INSTRUCTIONS

DRAIN KIT

Model: 1582.000.YYY FOR FREESTANDING TUB 2691, 2692

Model: 1582,200, YYY FOR FREESTANDING TUB 2549

Thank you for selecting American Standard...the benchmark of fine quality for over 100 years. To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

BEFORE YOU BEGIN....

Local building codes vary by location. Observe all local plumbing and building codes.

Slip Joint Pliers

Caulking Gun

· Personal Safety Equipment

Your new bath is shipped to you after careful inspection.

To insure maximum performance and pleasure from this product, please follow the instructions and cautions.

A NOTE: Take extra care in handling surfaces of the bath. Use only non-abrasive cloths to avoid scratching.

TOOLS & MATERIALS MAY BE REQUIRED

TOOLS:

- Level Square
- Tape Measure
- Pipe Wrench


MATERIALS:

- Silicone Caulking
- Tub & Tile Caulk


KIT INCLUDES:



OVERFLOW COVER (NOT INCLUDED WITH 1582.200)








Snap "Overflow" cover into overflow of tub. Ensure it is securely in place. (See Fig. 1)

NOTE: Skip this step for kit 1582.200



OVERFLOW COVER

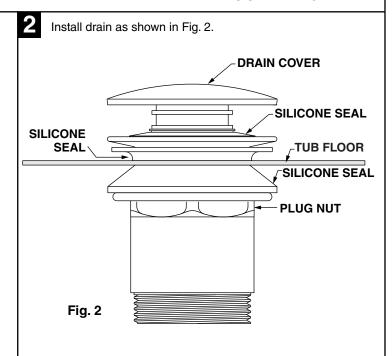



Ш

3

Tighten drain nut using a pipe wrench and plug wrench. Make sure all of the silicone seals are in the proper location (as shown in Fig. 2) and there is no water leaking.

4

INSTALLING THE 1-1/2" DIAMETER TAIL PIECE ASSEMBLY INTO P-TRAP

A slip-joint nut and a flanged, 1-1/2" diameter tail piece are recommended. (See Fig. 3)


Slide the slip-joint nut over tail piece towards the flanged end as shown.

Slide the P-trap slip-joint nut and seal over the tail piece as shown.

Insert the tail piece into the P-trap.

The flange of the tail piece should be approximately 2" (51mm) above the finished floor when fully inserted to the P-trap.

The tail piece can be cut if necessary.

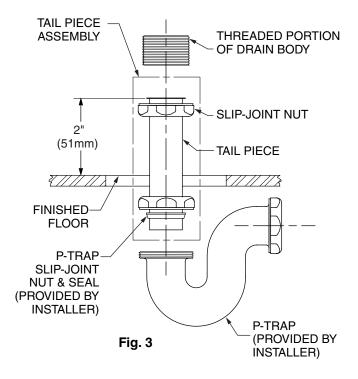

5

Install the tub by following the instructions included with the tub.

In the United States:

American Standard Brands 1 Centennial Ave. Piscataway, New Jersey 08854 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 442-1902

www.americanstandard.com

In Canada:

AS Canada, ULC 5900 Avebury Rd. Mississauga, Ontario Canada L5R 3M3

Toll Free: (800) 387-0369

www.americanstandard.ca

In Mexico:

American Standard B&K Mexico S. de R.L. de C.V. Via Morelos #330 Col. Santa Clara Ecatepec 55540 Edo. Mexico

Toll Free: 01-800-839-1200

www.americanstandard.com.mx