

5822 Dehumidifier Hanging Kit

Installation Instructions

A CAUTION

- **1.** Hanging kit is designed for attic and crawl space residential use only.
- **2.** 200 lb maximum total load.
- **3.** Not intended for overhead use in an occupied space.

PARTS INCLUDED:

- 1. Ratchet rope (4)
- **2.** Brackets (4)
- **3.** Eye bolts (4)


TOOLS REQUIRED:

- Tape measure
- Level
- · Screw driver
- Drill with 13/64" (max) bit

INSTALLING BRACKETS

The brackets are designed to attach to the dehumidifier using the leveling feet.

- **1.** Tip the dehumidifier enough to remove one foot.
- **2.** Slide the foot through the large hole in the bracket.
- Screw the foot back into the base of the dehumidifier. Fully tighten foot. See FIGURE 1.
- **4.** Repeat with remaining feet.

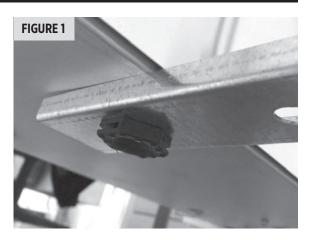

INSTALLING EYE BOLTS


Eye bolts should be screwed into floor joists horizontally.


- **1.** Measure the distance between the centers of the clip mounting holes in bracket, along the length of the dehumidifier.
- **2.** Use that dimension to determine eye bolt spacing. Eye bolts should be installed horizontally.
- **3.** Use a drill and 13/64" (max) drill bit to drill pilot holes.
- **4.** Use a screw driver to turn in eye bolts until no threads are visible. See **FIGURE 2**.



INSTALLING RATCHET ROPES

- 1. Clip the carabiners connected to the ratchet to the eye bolts. See **FIGURE 3**.
- **2.** Use the release lever to lengthen the rope to the hanging bracket.
- 3. Clip the carabiners on the knotted end of the rope to the hanging brackets. See FIGURE 4.
- **4.** Pull down on the free end to take out any slack in the hanging rope.
- **5.** To raise unit, simultaneously pull up on the rope attached to the brackets or support the weight of the corner being adjusted, and pull down on the free end of rope.
- **6.** Make 6" or less vertical adjustments on each rope until unit is at desired height.
- **7.** Use a level to make sure unit is level in both front to back and side to side directions.

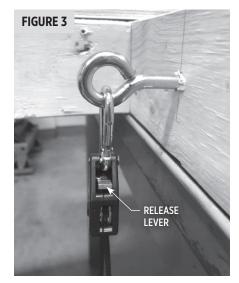

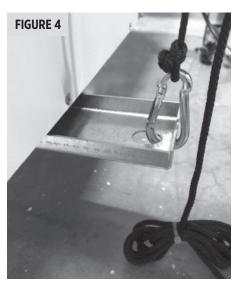



P.O. Box 1467 Madison, WI 53701-1467 800.334.6011 F: 608.257.4357

