



The tekmar Two Stage Setpoint Control 152 is a microprocessor-based control that can be programmed with two independent setpoint temperatures to cycle heating or cooling devices on and off.

This reliable and versatile control has adjustable differentials, time delays, and a very wide setpoint range that makes it useable in many different applications. The control has a digital LCD window that normally shows the actual sensor temperature and can be used to view the setpoints and other programmed settings.

A Universal Sensor 071 sensor is supplied with the control. The wire to the sensor may be extended up to 500 ft. (150m) by standard 18 AWG low voltage wire. The control can operate as a two stage setpoint control with a single sensor connected or as two independent one stage setpoint controls with two sensors connected. The display will indicate a sensor fault whenever a sensor is either open or short circuited.


Technical Data

Technical specifications

Dimensions	— 2-7/8" x 4-3/4" x 7/8" (74 x 120 x 22 mm)
Gross Weight	— 1 lb (450g)
Ambient	— -20 to 120 °F (-30 to 50 °C) < 90% RH non-condensing
Power supply	— 20 to 28Vac, 60 Hz, 3VA, class II transformer
Relay capacity	— SPST, 24Vac, 10 amp resistive
Sensor	— 10 kΩ @ 77°F (25° ± 0.2°C), curve 3, NTC thermistor accurate with up to 500 ft. (150m) of 18 gauge wire
Control accuracy	— ± 0.5° F (± 0.3°C) at 70°F (21°C)

Settings

Temperature Display	— -85 to 302°F (-65 to 150°C)
Setpoint 1	— -40 to 239°F (-40 to 115°C)
Differential 1	— 1 to 40°F (1 to 22°C)
Time delay 1	— 0 to 19 min 50 sec
Operating mode 1	— Heating/Cooling
Setpoint 2	— -40 to 239°F (-40 to 115°C)
Differential 2	— 1 to 40°F (1 to 22°C)
Time delay 2	— 0 to 19 min 50 sec
Operating mode 2	— Heating/Cooling
Temperature scale	— Fahrenheit/Celsius
Programmed settings	— Ten year memory backup

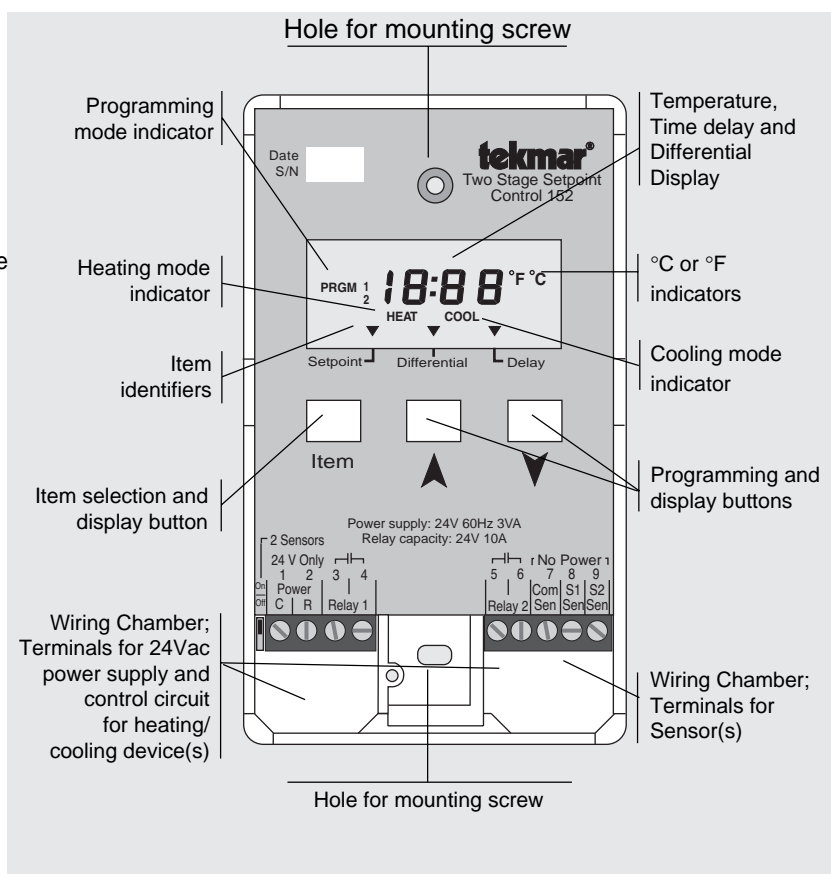

Sequence of Operation


- When the Two Stage Setpoint Control 152 is powered-up the digital display will show all of the display elements. The control will then monitor either sensor (S1) or sensor (S2) temperature and display the temperature on the digital display. Pressing and releasing the Item button will toggle between the sensor (S1) and sensor (S2) temperature readings when two sensors are used. (See diagram)

Two Sensor Operating Mode



When two sensors are used, sensor (S1) controls output relay 1 and sensor (S2) controls output relay 2.

- If the control setpoint 1 and/or 2 is programmed for "Heat" the control turns on the relay and shows the "HEAT" display element when the sensor temperature is (a) — 1/2 the differential setting below the setpoint, and (b) — the delay has timed out. When the sensor temperature rises 1/2 the differential setting above the setpoint, the relay switches off and the delay starts to time out.

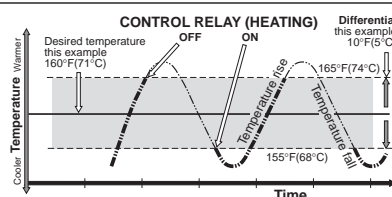


- If the control setpoints 1 and/or 2 are programmed for "Cool" the control turns on the relay and shows the "COOL" display element when the sensor temperature is (a) — 1/2 the differential setting above the setpoint, and (b) — the delay has timed out. When the sensor temperature drops 1/2 the differential setting below the setpoint, the control switches its relay off and the delay starts to time

Single Sensor Mode


- 2 Sensors

Dip Switch Down

When using a single sensor, the sensor controls the action of both output relays. Any combination of "HEAT/HEAT", "HEAT/COOL", "COOL/COOL" may be utilized. When using the Two Stage Setpoint Control 152 in a "HEAT/COOL" installation with only a single sensor, a 3 °F difference must be programmed between the heat setpoint plus 1/2 its differential, and the cool setpoint minus 1/2 its differential for operation. This ensures that the heating and cooling systems cannot operate at the same time.

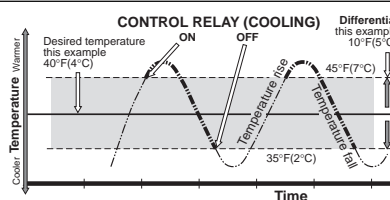

Programming Examples

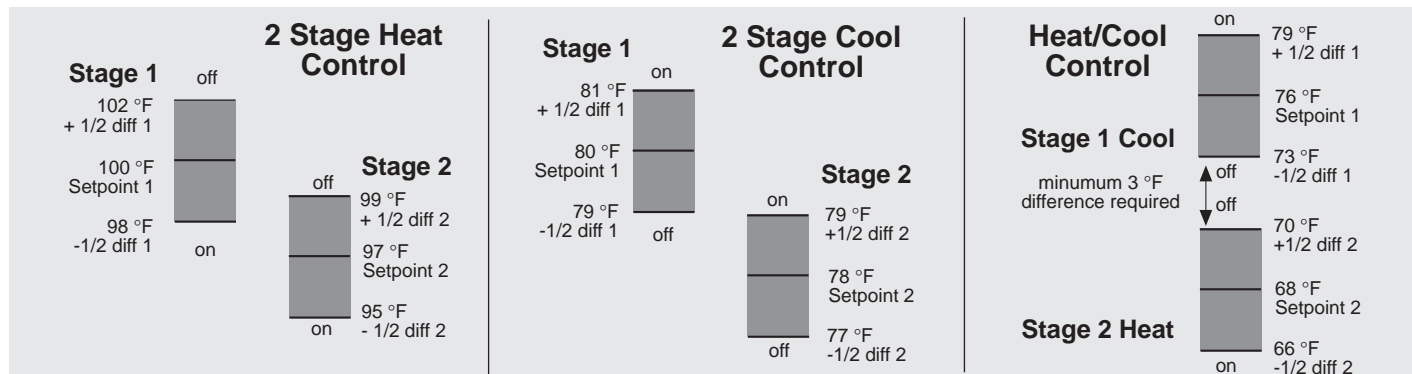

Installation

Caution

Improper installation and operation of this control could result in damage to equipment and possibly even personal injury. It is your responsibility to ensure that this control is safely installed according to all applicable codes and standards.

Step One Getting ready

Check the contents of this package. If any of the contents listed are missing or damaged, please refer to the Limited Warranty and Product Return Procedure on the back of this brochure and contact your wholesaler or tekmar sales agent for assistance.

Type 152 includes:

- One Control 152 • One Universal Sensor 071
- One Data Brochure D 152 • One Data Brochure D 001

Other information available:

- Essay E 001

Note: Carefully read the Sequence of Operation section in this brochure to ensure that you have chosen the proper control and understand its functions within the operational requirements of your system.

Step Two Mounting

The control is mounted in accordance with the instructions in the Data Brochure D 001.

Step Three Rough-in wiring

All electrical wiring terminates in the two wiring chambers at the bottom front of the control. If the control is to be mounted on an electrical box, the wiring can be roughed-in at the electrical box prior to installation of the control (see Brochure D 001). Standard 18 AWG solid wire is recommended for all low voltage wiring to this control.

Caution: Power should not be applied to any of the wires during this rough-in wiring stage.

- Install the Universal Sensor(s) 071 according to the instructions in Data Brochure D 001 and run the wiring back to the control but do not connect.
- Install a 24Vac Class II transformer with a minimum 5VA rating close to the control, and run the wiring from the transformer to the control. A Class II transformer must be used. Do not connect any of the transformer terminals to ground.
- Install the wiring from the heating/cooling device(s) control circuit(s) to the appropriate relay on the control.

Step Four Testing and connecting the wiring

Caution

These tests are to be performed using standard testing practices and procedures and should only be carried out by a properly trained and experienced technician. A good quality electrical test meter, capable of reading from at least 0 — 200 Volts AC, and at least 0 — 2,000,000 Ohms, is essential to properly test this control. At no time should voltages in excess of 28Vac be measured at any of the wires connected to this control.

Test the sensor (s)

This test must be performed *before* power is applied to the control and *before* a sensor is connected to the terminal strip. Test the sensor(s) according to the instructions printed in the enclosed Data Brochure D 001.

Test the power supply

- Ensure that the wires from the power supply transformer are not touching each other, any other wires or ground. Turn on the power and, using an AC voltmeter, you should measure between 20 and 28 volts at the secondary side of the transformer.
- Turn off the power and complete the electrical connections to the terminal strip of the control.


Electrical connections

Power and output connections — **Caution, Maximum 24 Volts A.C.**

- Connect:
- the transformer to terminals **C — R** (1 and 2)
 - the heating/cooling device circuit 1 to terminals **Relay 1** (3 and 4)
 - the heating/cooling device circuit 2 to terminals **Relay 2** (5 and 6)

Sensor connection(s) — **Caution, voltage is never applied to these terminals**

- Connect:
- Sensor 071 to terminals **S1 Sen and Com** (7 and 8)
 - Sensor 071 to terminals **S2 Sen and Com** (7 and 9) **Optional**

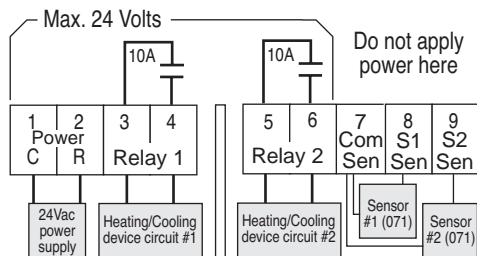

Settings


The digital display on the Two Stage Setpoint Control 152 has the following uses:

- To display the actual temperature(s) during normal operating mode.
- To allow the user to view and program the various control settings.
- To display control operation. ("HEAT" display element comes on when either relay closes to operate a heat source and "COOL" display element comes on when either relay closes to operate a cooling device.)
- To display sensor faults. (Display will show "Err" when a sensor is either disconnected, short circuited or out of temperature range.)
- To display program faults. (Display will show "Prgm Err" when the "Heat/Cool" single sensor mode is incorrectly programmed.)

The following diagram illustrates how to operate the keypad buttons in order to view settings and program the control.

POWER ON

When the control is powered-up, all display elements turn on.

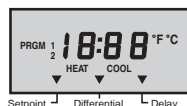

After approximately 5 seconds, the control automatically goes into operating mode.


OPERATING MODE

When in operating mode, the actual sensor temperature(s) are displayed.




-2 Sensors
If two sensors are in use.
Dip Switch Up

Push and Release the "Item" button. The display will toggle between sensor 1 and 2.

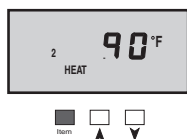


DISPLAY MODE


Push and Hold the "Item" button. The programmed Setpoint 1 and then Setpoint 2 will be displayed.

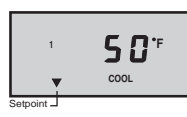

Push and Hold the ▲ button. The programmed Differential 1 and then Differential 2 will be displayed.

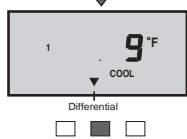

Push and Hold the ▼ button. The programmed Delay 1 and then Delay 2 will be displayed.

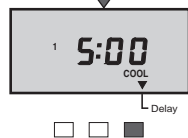

PROGRAM MODE

Push all three buttons at the same time. "PRGM 1" will appear and the Setpoint (1) pointer will flash. The control will be in programming mode.








Pushing the "Item" button changes the flashing pointer to **Differential (1)**




Pushing the "Item" button changes the flashing pointer to **Delay (1)**




Pushing the "Item" button allows **Heating or Cooling (1)** operation to be selected

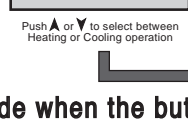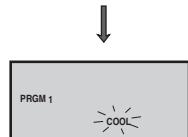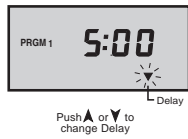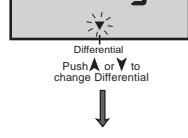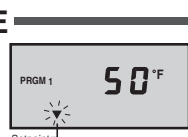

Pushing the "Item" button, "PRGM 2" appears, and the Setpoint (2) pointer will flash.

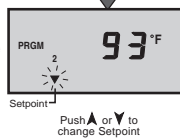


Pushing the "Item" button changes the flashing pointer to **Differential (2)**

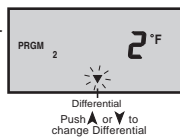


Pushing the "Item" button changes the flashing pointer to **Delay (2)**



Pushing the "Item" button allows **Heating or Cooling (2)** operation to be selected

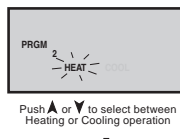

Pushing the "Item" button allows the Fahrenheit or Celsius scale to be selected

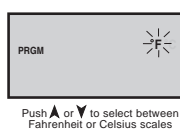

The control automatically goes back to operating mode when the buttons are left alone for 20 seconds

Differential

Setting the Differential on any control depends entirely on the actual operating characteristics of heating/cooling equipment in a specific application. Differential settings should normally be set as small as possible for greatest accuracy, but care must be taken to avoid short cycling of equipment. Experience, plus trial and error during actual operating conditions is usually the way most installers determine the correct differential setting.

Delay

Setting the Time Delay also depends on the actual operating characteristics of heating/cooling equipment in a specific application. With some equipment, time delays are unnecessary and the delay setting can be set to zero time delay. Other types of equipment depend on a fixed off delay to prevent damage to equipment components, particularly in the case of certain types of refrigeration equipment. Consult the manufacturer's operating and installation instructions for advice on recommended time delays.

Testing and Troubleshooting

If troubleshooting becomes necessary with the Two Stage Setpoint Control 152, follow the testing procedure in step four of the installation procedure on page 2 of this brochure.

If the display window shows "Err 1" or "Err 2", sensor (S1) or (S2) is either open circuited, short circuited, or the sensor temperature is outside the temperature range of the control. If this type of fault occurs, the control will turn off its relays in order to shut down the heating or cooling equipment it is controlling.

If the display window flashes "prgm Err" when using a single sensor, the "heat/cool" differential setting is too small. Check setpoints and differentials to ensure that at least 3 °F exists between the heating setpoint plus 1/2 its differential and the cooling setpoint minus 1/2 its differential.

If you do not think the control is operating properly, check to see that the settings have been made correctly and that the problem is not a result of external causes. Make sure that all wiring connections are solid and the sensor(s) is located in the correct location.

Before you leave

- Install the wiring cover over the wiring chamber and secure it with the screw provided.
- Place the front cover on the control to cover the setting dials and snap it into place.
- Place this brochure, and all other brochures relating to the installation, in the protective plastic bag supplied with the control.
- Place the bag in a conspicuous location near the control for future reference.
- It is important to explain the operation of this control within the system to the end user, and anyone else who may be operating the system.

Limited Warranty and Product Return Procedure

Limited Warranty: tekmar warrants to the original purchaser each tekmar product against defects in workmanship and materials when the product is installed and used in compliance with tekmar's instructions. This limited warranty covers the cost of parts and labour provided by tekmar to correct defects in materials and/or workmanship. Returned products that are fully operational are not considered a warranty case. tekmar also does not cover parts or labour to remove, transport or reinstall a defective product. tekmar will not be liable for any damage other than repair or replacement of the defective part or parts and such repair or replacement shall be deemed to be the sole remedy from tekmar. This warranty shall not apply to any defects caused or repairs required as a result of unreasonable or negligent use, neglect, accident, improper installation, or unauthorized repair or alterations. In case of defect, malfunction or failure to conform to warranty, tekmar will, for a warranty period of 24 months from the date of invoice to the original purchaser or 12 months from the date of installation of the product, whichever occurs first, repair, exchange or give credit for the defective product. Any express or implied warranty which the purchaser may have, including merchantability and fitness for a particular purpose, shall not extend beyond 24 months from the date of invoice or 12 months from the date of installation of the product, whichever occurs first.

Replacements: tekmar can send replacement products if requested. All replacements are invoiced. Any possible credit for the replacement will only be issued once the replaced product has been returned to tekmar.

Product Return Procedure: Products that are believed to have failed must be returned to tekmar Control Systems Ltd. 4611-23rd Street, Vernon B.C. Canada V1T 4K7 when agreed to by tekmar. The installer or other qualified service person must,

at the owner's expense, determine which component has failed. The product must be returned complete with all of its components (sensors, base, etc.). Products must be returned together with the proof of purchase to the original purchaser who then returns the product to tekmar after receiving a Return Goods Authorization (RGA) number from tekmar.

Please include the following information with the product. The full address of the original purchaser, the RGA number and a description of the problem.

From the U.S.A., in order to avoid customs charges, products must be returned via US Post with the package clearly marked with the RGA number, product type and the statement "Canadian Product returned for repair". For shipping purposes the product can be valued at one half list price.

- 1) If returned during the warranty period and the product is defective, tekmar will issue full credit for the returned product less cost of missing parts.
- 2) If returned during the warranty period and the product is fully operational, tekmar will return the product to the original purchaser for a testing cost of \$30.00 plus postage.
- 3) If returned during the warranty period and the product is not damaged and is fully operational, tekmar can take back the product for a return charge of 40% of the product's net value. This request has to be specified otherwise the product will be returned with a testing cost of \$30.00 plus postage.
- 4) If returned after the warranty period and the product needs repair, tekmar will repair and return the product. Repair and postage costs will be invoiced. tekmar's repair costs are calculated at \$30.00 / hour plus the cost of parts. If the repair costs will be more than \$60.00 a repair estimate will be sent to the original purchaser.

In North America:	tekmar Control Systems Ltd., Canada tekmar Control Systems, Inc., U.S.A. Head office: 4611 - 23rd Street Vernon, B.C. Canada V1T 4K7 Tel. (604) 545-7749 Fax. (604) 545-0650
--------------------------	--