



INSTALLATION INSTRUCTIONS

HEAT PUMP UNIT INSTALLATION & SERVICE REFERENCE DZ16TC & DZ18TC

IMPORTANT SAFETY INSTRUCTIONS

The following symbols and labels are used throughout this manual to indicate immediate or potential safety hazards. It is the owner's and installer's responsibility to read and comply with all safety information and instructions accompanying these symbols. Failure to heed safety information increases the risk of personal injury, property damage, and/or product damage.



WARNING

HIGH VOLTAGE!
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



WARNING

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE OR REPAIR(HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT. THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT.
IMPROPER INSTALLATION, ADJUSTMENT, SERVICING OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



CAUTION

SCROLL EQUIPPED UNITS SHOULD NEVER BE USED TO EVACUATE THE AIR CONDITIONING SYSTEM. VACUUMS THIS LOW CAN CAUSE INTERNAL ELECTRICAL ARCING RESULTING IN A DAMAGED OR FAILED COMPRESSOR.

PROP 65 WARNING FOR CALIFORNIA CONSUMERS



Cancer and Reproductive Harm - www.P65Warnings.ca.gov

0140M00517-A



"Proper sizing and installation of equipment is critical to achieving optimal performance. Split system air conditioners and heat pumps must be matched with appropriate coil components to meet ENERGY STAR® criteria. Ask your contractor for details or visit www.energystar.gov."

ASK ABOUT
ENERGY STAR

"**IMPORTANT - This product has been designed and manufactured to meet ENERGY STAR® criteria for energy efficiency when matched with appropriate coil components. However, proper refrigerant charge and proper air flow are critical to achieve rated capacity and efficiency. Installation of this product should follow the manufacturer's refrigerant charging and air flow instructions. Failure to confirm proper charge and air flow may reduce energy efficiency and shorten equipment life.**"

Our continuing commitment to quality products may mean a change in specifications without notice.

©2013 - 2020 **DAIKIN MANUFACTURING COMPANY, L.P.**

19001 Kermier Rd. Waller, Tx 77484

www.daikincomfort.com

IOD-4009K
07/2020



SHIPPING INSPECTION

Always keep the unit upright; laying the unit on its side or top may cause equipment damage. Shipping damage, and subsequent investigation is the responsibility of the carrier. Verify the model number, specifications, electrical characteristics, and accessories are correct prior to installation. The distributor or manufacturer will not accept claims from dealers for transportation damage or installation of incorrectly shipped units.

CODES & REGULATIONS

This product is designed and manufactured to comply with national codes. Installation in accordance with such codes and/or prevailing local codes/regulations is the responsibility of the installer. The manufacturer assumes no responsibility for equipment installed in violation of any codes or regulations. Rated performance is achieved after 20 hours of operation. Rated performance is delivered at the specified airflow. See outdoor unit specification sheet for split system models or product specification sheet for packaged and light commercial models. Specification sheets can be found at www.daikincomfort.com for Daikin brand products. Within the website, please select the residential or commercial products menu and then select the submenu for the type of product to be installed, such as air conditioners or heat pumps, to access a list of product pages that each contain links to that model's specification sheet.

The United States Environmental Protection Agency (EPA) has issued various regulations regarding the introduction and disposal of refrigerants. Failure to follow these regulations may harm the environment and can lead to the imposition of substantial fines. Should you have any questions please contact the local office of the EPA.

If replacing a condensing unit or air handler, the system must be manufacturer approved and Air Conditioning, Heating and Refrigeration Institute (AHRI) matched.

NOTE: INSTALLATION OF UNMATCHED SYSTEMS IS STRONGLY DISCOURAGED.

Outdoor units are approved for operation above 55°F in cooling mode. Operation below 55°F requires the use of an approved low ambient kit.

Damage to the unit caused by operating the unit in a structure that is not complete (either as part of new construction or renovation) is not covered under the warranty.


FEATURES

This air conditioner is a part of the Daikin Communicating family of products. It may be installed as part of a "legacy" system using a standard 24 VAC thermostat. However, with the Daikin Communicating thermostat kit, this air conditioner may be installed as part of a digitally communicating system. The Daikin Communicating system provides enhanced setup features, and enhanced diagnostics. It also reduces the number of thermostat wires to a maximum of four and a minimum of two.

INSTALLATION CLEARANCES

Special consideration must be given to location of the condensing unit(s) in regard to structures, obstructions, other units, and any/all other factors that may interfere with air circulation. Where possible, the top of the unit should be completely unobstructed; however, if vertical conditions require placement beneath an obstruction **there should be a minimum of 60 inches between the top of the unit and the obstruction(s).** The specified dimensions meet requirements for air circulation only. Consult all appropriate regulatory codes prior to determining final clearances.

Another important consideration in selecting a location for the unit(s) is the angle to obstructions. Either side adjacent the valves can be placed toward the structure provided the side away from the structure maintains minimum service clearance. Corner installations are strongly discouraged.

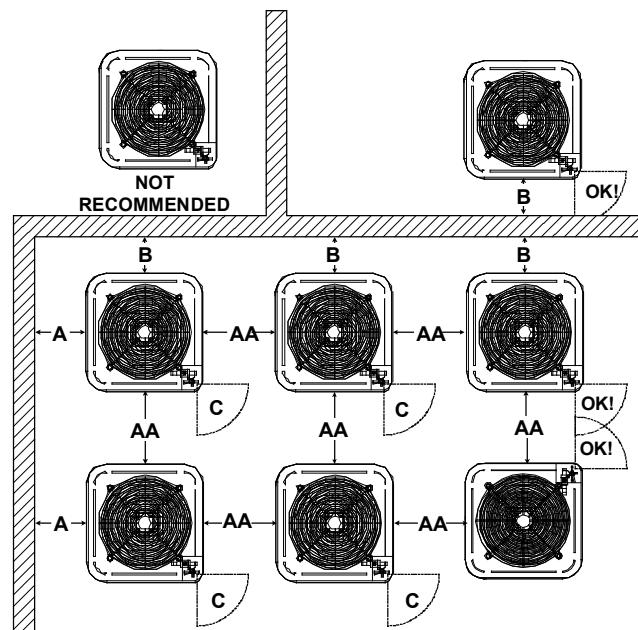

Minimum Airflow Clearance				
Model Type	A	B	C	AA
Residential	10"	10"	18"	20"
Light Commercial	12"	12"	18"	24"

TABLE 1

This unit can be located at ground floor level or on flat roofs. At ground floor level, the unit must be on a solid, level foundation that will not shift or settle. To reduce the possibility of sound transmission, the foundation slab should not be in contact with or be an integral part of the building foundation. Ensure the foundation is sufficient to support the unit. A concrete slab raised above ground level provides a suitable base.

ROOFTOP INSTALLATIONS

If it is necessary to install this unit on a roof structure, ensure the roof structure can support the weight and that proper consideration is given to the weather-tight integrity of the roof. Since the unit can vibrate during operation, sound vibration transmission should be considered when installing the unit. Vibration absorbing pads or springs can be installed between the condensing unit legs or frame and the roof mounting assembly to reduce noise vibration.

NOTE: THESE UNITS REQUIRE SPECIAL LOCATION CONSIDERATION IN AREAS OF HEAVY SNOW ACCUMULATION AND/OR AREAS WITH PROLONGED CONTINUOUS SUBFREEZING TEMPERATURES. HEAT PUMP UNIT BASES HAVE CUTOUTS UNDER THE OUTDOOR COIL THAT PERMIT DRAINAGE OF FROST ACCUMULATION. SITUATE THE UNIT TO PERMIT FREE UNOBSTRUCTED DRAINAGE OF THE DEFROST WATER AND ICE. A MINIMUM 3" CLEARANCE UNDER THE OUTDOOR COIL IS REQUIRED IN THE MILDER CLIMATES.

In more severe weather locations, it is recommended that the unit be elevated to allow unobstructed drainage and air flow. The following elevation minimums are recommended:

Design Temperature	Suggested Minimum Elevation
+15° and above	2 1/2"
-5° to +14°	8"
below -5°	12"

SAFE REFRIGERANT HANDLING

While these items will not cover every conceivable situation, they should serve as a useful guide.



WARNING

TO AVOID POSSIBLE INJURY, EXPLOSION OR DEATH, PRACTICE SAFE HANDLING OF REFRIGERANTS.



WARNING

REFRIGERANTS ARE HEAVIER THAN AIR. THEY CAN "PUSH OUT" THE OXYGEN IN YOUR LUNGS OR IN ANY ENCLOSED SPACE. TO AVOID POSSIBLE DIFFICULTY IN BREATHING OR DEATH:

- **NEVER PURGE REFRIGERANT INTO AN ENCLOSED ROOM OR SPACE. BY LAW, ALL REFRIGERANTS MUST BE RECLAIMED.**
- **IF AN INDOOR LEAK IS SUSPECTED, THOROUGHLY VENTILATE THE AREA BEFORE BEGINNING WORK.**
- **LIQUID REFRIGERANT CAN BE VERY COLD. TO AVOID POSSIBLE FROSTBITE OR BLINDNESS, AVOID CONTACT AND WEAR GLOVES AND GOGGLES. IF LIQUID REFRIGERANT DOES CONTACT YOUR SKIN OR EYES, SEEK MEDICAL HELP IMMEDIATELY.**
- **ALWAYS FOLLOW EPA REGULATIONS. NEVER BURN REFRIGERANT, AS POISONOUS GAS WILL BE PRODUCED.**



WARNING

TO AVOID POSSIBLE EXPLOSION, USE ONLY RETURNABLE (NOT DISPOSABLE) SERVICE CYLINDERS WHEN REMOVING REFRIGERANT FROM A SYSTEM.

- **ENSURE THE CYLINDER IS FREE OF DAMAGE WHICH COULD LEAD TO A LEAK OR EXPLOSION.**
- **ENSURE THE HYDROSTATIC TEST DATE DOES NOT EXCEED 5 YEARS.**
- **ENSURE THE PRESSURE RATING MEETS OR EXCEEDS 400 PSIG. WHEN IN DOUBT, DO NOT USE CYLINDER.**



WARNING

TO AVOID POSSIBLE EXPLOSION:

- **NEVER APPLY FLAME OR STEAM TO A REFRIGERANT CYLINDER. IF YOU MUST HEAT A CYLINDER FOR FASTER CHARGING, PARTIALLY IMMERSE IT IN WARM WATER.**
- **NEVER FILL A CYLINDER MORE THAN 80% FULL OF LIQUID REFRIGERANT.**
- **NEVER ADD ANYTHING OTHER THAN R-22 TO AN R-22 CYLINDER OR R-410A TO AN R-410A CYLINDER. THE SERVICE EQUIPMENT USED MUST BE LISTED OR CERTIFIED FOR THE TYPE OF REFRIGERANT USED.**
- **STORE CYLINDERS IN A COOL, DRY PLACE. NEVER USE A CYLINDER AS A PLATFORM OR A ROLLER.**

REFRIGERANT LINES



CAUTION

THE COMPRESSOR POE OIL FOR R-410A UNITS IS EXTREMELY SUSCEPTIBLE TO MOISTURE ABSORPTION AND COULD CAUSE COMPRESSOR FAILURE. DO NOT LEAVE SYSTEM OPEN TO ATMOSPHERE ANY LONGER THAN NECESSARY FOR INSTALLATION.

Use only refrigerant grade (dehydrated and sealed) copper tubing to connect the condensing unit with the indoor evaporator. After cutting the tubing, install plugs to keep refrigerant tubing clean and dry prior to and during installation. Tubing should always be cut square keeping ends round and free from burrs. Clean the tubing to prevent contamination.

Do NOT let refrigerant lines come in direct contact with plumbing, ductwork, floor joists, wall studs, floors, and walls. When running refrigerant lines through a foundation or wall, openings should allow for sound and vibration absorbing material to be placed or installed between tubing and foundation. Any gap between foundation or wall and refrigerant lines should be filled with a pliable silicon-based caulk, RTV or a vibration damping material. Avoid suspending refrigerant tubing from joists and studs with rigid wire or straps that would come in contact with the tubing. Use an insulated or suspension type hanger. Keep both lines separate and always insulate the suction line.

These sizes are suitable for line lengths of 79 feet or less. If a run of more than eighty feet is required, refer to Remote Cooling Service Manual, or TP-106 Long Line Set Application R-22, or TP-107 Long Line Set Application R-410A or contact your distributor for assistance.

RECOMMENDED INTERCONNECTING TUBING (Ft)						
Cond Unit	0-24		25-49		50-79*	
	Line Diameter (In. OD)					
Tons	Suct	Liq	Suct	Liq	Suct	Liq
1 1/2	5/8	1/4	3/4	3/8	3/4	3/8
2	5/8	1/4	3/4	3/8	3/4	3/8
2 1/2	5/8	1/4	3/4	3/8	7/8	3/8
3	3/4	3/8	7/8	3/8	1 1/8	3/8
3 1/2	7/8	3/8	1 1/8	3/8	1 1/8	3/8
4	7/8	3/8	1 1/8	3/8	1 1/8	3/8
5	7/8	3/8	1 1/8	3/8	1 1/8	3/8

* Lines greater than 79 feet in length refer to TP-107 Long Line Set Application Guideline or contact your distributor for assistance.


NOTE: The maximum vertical difference between the outdoor unit and indoor unit is 25 feet for two stage units.

Insulation is necessary to prevent condensation from forming and dropping from the suction line. Armflex (or satisfactory equivalent) with 3/8" min. wall thickness is recommended. In severe conditions (hot, high humidity areas) 1/2" insulation may be required. Insulation must be installed in a manner which protects tubing from damage and contamination.

EXISTING LINE SETS

Where possible, drain as much residual compressor oil from existing systems, lines, and traps; pay close attention to low areas where oil may collect. Use of an approved flushing agent is recommended followed by a nitrogen purge to remove any remaining flushing agent from the lines or indoor coil. Replacement of indoor coil is recommended.

NOTE: IF USING EXISTING INDOOR COIL AND CHANGING REFRIGERANT TYPES, ENSURE THE INDOOR COIL AND METERING DEVICE ARE COMPATIBLE WITH THE TYPE OF REFRIGERANT BEING USED. IF NEW INDOOR COIL IS REQUIRED CHECK SPEC SHEET OR AHRI FOR APPROVED COIL. IF SYSTEM IS BEING REPLACED DUE TO COMPRESSOR ELECTRICAL FAILURE, ASSUME ACID IS IN SYSTEM. REFER TO SERVICE PROCEDURE S-115 COMPRESSOR BURNOUT IN SERVICE MANUAL FOR CLEAN-UP PROCEDURE.

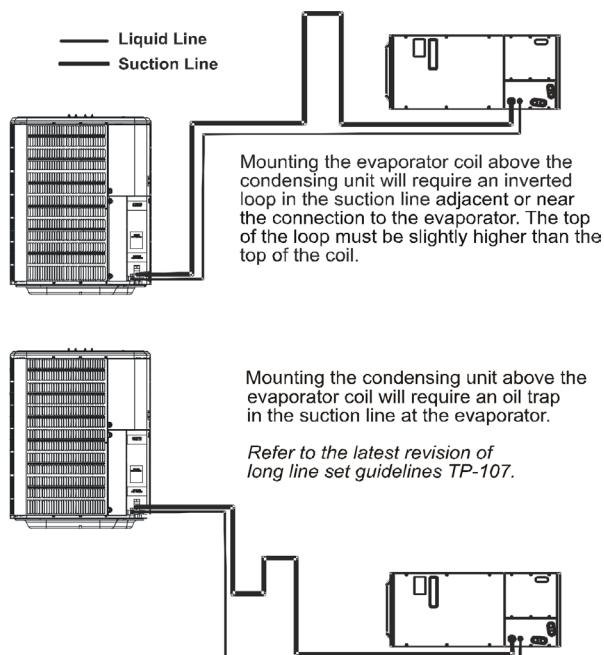

BURYING REFRIGERANT LINES

If burying refrigerant lines can not be avoided, use the following checklist:

1. Insulate liquid and suction lines separately.
2. Enclose all underground portions of the refrigerant lines in waterproof material (conduit or pipe) sealing the ends where tubing enters/exits the enclosure.
3. If the lines must pass under or through a concrete slab, ensure lines are adequately protected and sealed.

REFRIGERANT LINE CONNECTIONS

IMPORTANT

To avoid overheating the service valve, TXV valve, or filter drier while brazing, wrap the component with a wet rag, or use a thermal heat trap compound. Be sure to follow the manufacturer's instruction when using the heat trap compound. Note: Remove Schrader valves from service valves before brazing tubes to the valves. Use a brazing alloy of 2% minimum silver content. Do not use flux.

Torch heat required to braze tubes of various sizes is proportional to the size of the tube. Tubes of smaller size require less heat to bring the tube to brazing temperature before adding brazing alloy. Applying too much heat to any tube can melt the tube. Service personnel must use the appropriate heat level for the size of the tube being brazed. NOTE: The use of a heat shield when brazing is recommended to avoid burning the serial plate or the finish on the unit.

1. The ends of the refrigerant lines must be cut square, deburred, cleaned, and be round and free from nicks or dents. Any other condition increases the chance of a refrigerant leak.
2. "Sweep" the refrigerant line with nitrogen or inert gas during brazing to prevent the formation of copper-oxide inside the refrigerant lines. The POE oils used in R-410A applications will clean any copper-oxide present from the inside of the refrigerant lines and spread it throughout the system. This may cause a blockage or failure of the metering device.
3. After brazing, quench the joints with water or a wet cloth to prevent overheating of the service valve.
4. Ensure the filter drier paint finish is intact after brazing. If the paint of the steel filter drier has been burned or chipped, repaint or treat with a rust preventative. This is especially important on suction line filter driers which are continually wet when the unit is operating.

NOTE: BE CAREFUL NOT TO KINK OR DENT REFRIGERANT LINES. KINKED OR DENTED LINES WILL CAUSE POOR PERFORMANCE OR COMPRESSOR DAMAGE.

Do NOT make final refrigerant line connection until plugs are removed from refrigerant tubing.

NOTE: BEFORE BRAZING, VERIFY INDOOR PISTON SIZE BY CHECKING THE PISTON KIT CHART PACKAGED WITH INDOOR UNIT.

LEAK TESTING (NITROGEN OR NITROGEN-TRACED)

WARNING

TO AVOID THE RISK OF FIRE OR EXPLOSION, NEVER USE OXYGEN, HIGH PRESSURE AIR OR FLAMMABLE GASES FOR LEAK TESTING OF A REFRIGERATION SYSTEM.

WARNING

TO AVOID POSSIBLE EXPLOSION, THE LINE FROM THE NITROGEN CYLINDER MUST INCLUDE A PRESSURE REGULATOR AND A PRESSURE RELIEF VALVE. THE PRESSURE RELIEF VALVE MUST BE SET TO OPEN AT NO MORE THAN 150 PSIG.

Pressure test the system using dry nitrogen and soapy water to locate leaks. If you wish to use a leak detector, charge the system to 10 psi using the appropriate refrigerant then use nitrogen to finish charging the system to working pressure then apply the detector to suspect areas. If leaks are found, repair them. After repair, repeat the pressure test. If no leaks exist, proceed to system evacuation.

SYSTEM EVACUATION

Condensing unit liquid and suction valves are closed to contain the charge within the unit. The unit is shipped with the valve stems closed and caps installed. **Do not open valves until the system is evacuated.**

WARNING

REFRIGERANT UNDER PRESSURE!

FAILURE TO FOLLOW PROPER PROCEDURES MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.


NOTE: SCROLL COMPRESSORS SHOULD NEVER BE USED TO EVACUATE OR PUMP DOWN A HEAT PUMP OR AIR CONDITIONING SYSTEM.

CAUTION

PROLONGED OPERATION AT SUCTION PRESSURES LESS THAN 20 PSIG FOR MORE THAN 5 SECONDS WILL RESULT IN OVERHEATING OF THE SCROLLS AND PERMANENT DAMAGE TO THE SCROLL TIPS, DRIVE BEARINGS AND INTERNAL SEAL.

1. Connect the vacuum pump with 250 micron capability to the service valves.
2. Evacuate the system to 250 microns or less using suction **and** liquid service valves. Using both valves is necessary as some compressors create a mechanical seal separating the sides of the system.

- Close pump valve and hold vacuum for 10 minutes. Typically pressure will rise during this period.
 - If the pressure rises to 1000 microns or less and remains steady the system is considered leak-free; proceed to startup.
 - If pressure rises above 1000 microns but holds steady below 2000 microns, moisture and/or noncondensables may be present or the system may have a small leak. Return to step 2: If the same result is encountered check for leaks as previously indicated and repair as necessary then repeat evacuation.
 - If pressure rises above 2000 microns, a leak is present. Check for leaks as previously indicated and repair as necessary then repeat evacuation.

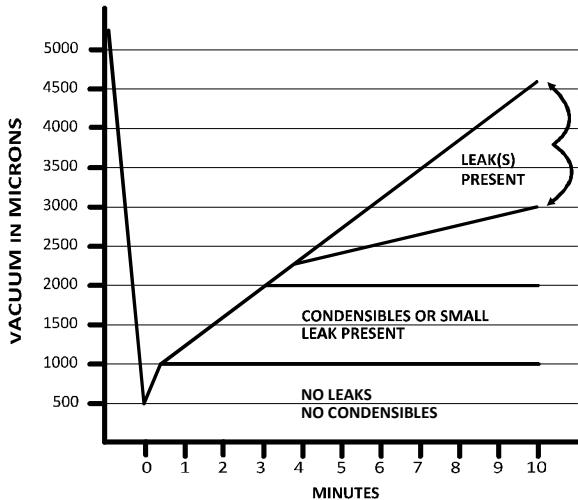

ELECTRICAL CONNECTIONS



WARNING

HIGH VOLTAGE!
DISCONNECT ALL POWER BEFORE SERVICING.
MULTIPLE POWER SOURCES MAY BE PRESENT.
FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK. **WIRING MUST CONFORM WITH NEC OR CEC AND ALL LOCAL CODES.**
UNDERSIZED WIRES COULD CAUSE POOR EQUIPMENT PERFORMANCE, EQUIPMENT DAMAGE OR FIRE.



The condensing unit rating plate lists pertinent electrical data necessary for proper electrical service and overcurrent protection. Wires should be sized to limit voltage drop to 2% (max.) from the main breaker or fuse panel to the condensing unit. Consult the NEC, CEC, and all local codes to determine the correct wire gauge and length.

Local codes often require a disconnect switch located near the unit; do not install the switch on the unit. Refer to the installation instructions supplied with the indoor furnace/air handler for specific wiring connections and indoor unit configuration. Likewise, consult the instructions packaged with the thermostat for mounting and location information.

OVERCURRENT PROTECTION

The following overcurrent protection devices are approved for use.

- Time delay fuses
- HACR type circuit breakers

These devices have sufficient time delay to permit the motor-compressor to start and accelerate its load.

HIGH VOLTAGE CONNECTIONS

Route power supply and ground wires through the high voltage port and terminate in accordance with the wiring diagram provided inside the control panel cover.

LOW VOLTAGE CONNECTIONS


This heat pump is equipped with a factory-installed transformer to power the outdoor controls when installed as part of a fully communicating HVAC system utilizing a Daikin communicating indoor unit. In this configuration only two low voltage control wires are required between the outdoor unit and indoor unit.

The unit also has legacy 24 VAC inputs to support non-communicating systems. When this configuration is used, the transformer in the outdoor unit must be disconnected from the low voltage and line voltage connections. The transformer connecting wires can then be discarded. Route control wires through the low voltage port and terminate in accordance with the wiring diagram provided inside the control panel cover.



WARNING


TO AVOID THE RISK OF FIRE OR EQUIPMENT DAMAGE, USE COPPER CONDUCTORS.

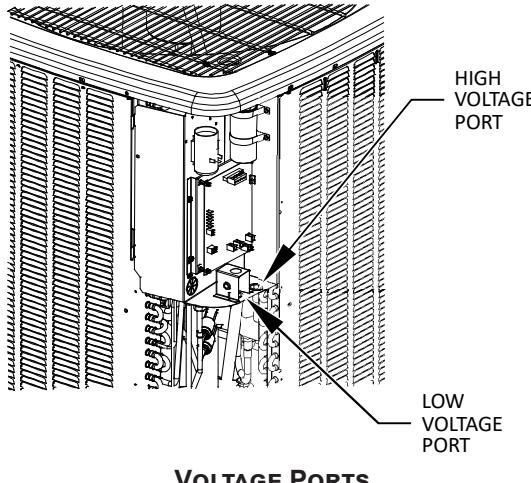

NOTE: IF THE HEAT PUMP UNIT IS WIRED IN THE COMMUNICATING MODE TOGETHER WITH THE COMPATIBLE COMMUNICATING INDOOR UNIT, THE COMMUNICATING EQUIPMENT IS ABLE TO SEARCH AND IDENTIFY THE CONDENSING UNIT WHEN POWER IS APPLIED TO THE SYSTEM. REFER TO THE INSTALLATION MANUAL OF THE COMMUNICATING INDOOR EQUIPMENT FOR MORE INFORMATION.

LEGACY CONTROLS WIRING

The integrated control board on this unit is factory equipped with a 4-pin connector for low voltage controls wiring for communicating systems. If the system is installed as a non-communicating (legacy) system, remove the 4-pin connector and disconnect the transformer low voltage and line voltage wiring. Then, install the 7-pin connector that is supplied in the literature/accessories bag into the integrated control board in the appropriate location indicated by the color-coded labels found on both the control board and pin connector plug.

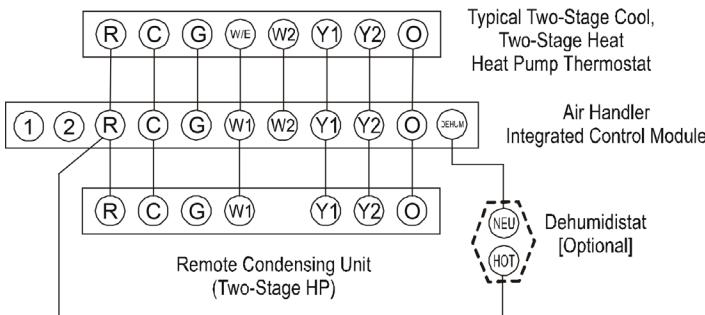


CONTROL WIRING

NOTE: REFER TO SECTION *ELECTRICAL CONNECTIONS - HIGH VOLTAGE CONNECTIONS* FOR 208/230 VOLT LINE CONNECTIONS TO THE AIR CONDITIONER.

NOTE: A REMOVABLE PLUG CONNECTOR IS PROVIDED WITH THE CONTROL TO MAKE THERMOSTAT WIRE CONNECTIONS. THIS PLUG MAY BE REMOVED, WIRE CONNECTIONS MADE TO THE PLUG, AND REPLACED. IT IS STRONGLY RECOMMENDED THAT YOU DO NOT CONNECT MORE THAN TWO WIRES INTO A SINGLE TERMINAL IN THE FIELD BECAUSE THERE IS A RISK OF THE WIRES BECOMING LOOSE. FAILURE TO DO SO MAY RESULT IN INTERMITTENT OPERATION.

To wire the system components, it is strongly recommended to use the same type and the same gauge for the wires prepared in the field (for best results use 18 AWG).

NOTE: WHEN INSTALLED AS A COMMUNICATING SYSTEM, ONLY DATA LINES 1 AND 2 ARE REQUIRED BETWEEN THE INDOOR AND OUTDOOR UNITS.

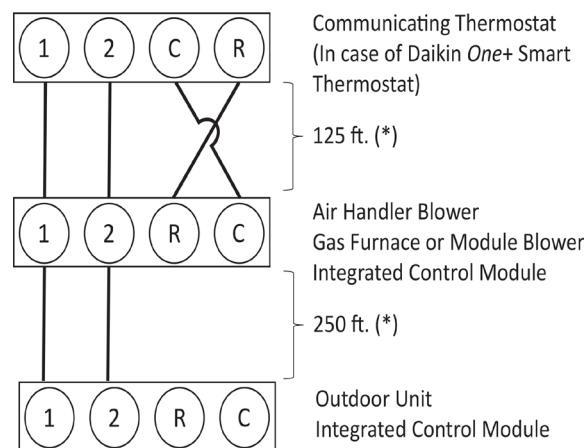



(*) Allowable Maximum Length

SYSTEM WIRING

DEFROST

Use the dipswitch to select defrost time interval (30, 60, 90, 120 minutes; see chart below).

Factory default setting is 30 minutes. The maximum defrost cycle time is 10 minutes.

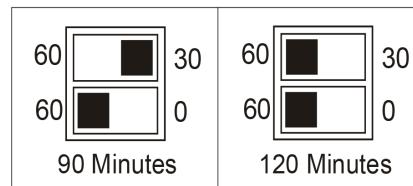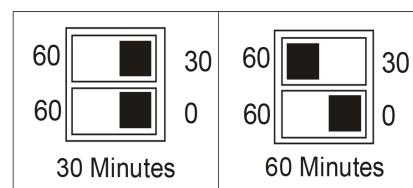

DIPSWITCH SETTINGS FOR SELECTION OF DEFROST TIME

SYSTEM START UP

For a detailed procedure, please visit the Daikin One+ Smart Thermostat website at <http://www.daikinone.com>

If installing with a CTK04 thermostat, please see Daikin Communicating System Advanced Features section for further instructions.



CAUTION

POSSIBLE REFRIGERANT LEAK!

TO AVOID A POSSIBLE REFRIGERANT LEAK, OPEN THE SERVICE VALVES UNTIL THE TOP OF THE STEM IS 1/8" FROM THE RETAINER.

NOTE: POWER MUST BE SUPPLIED TO THE 18 SEER OUTDOOR UNITS CONTAINING ECM MOTORS BEFORE THE POWER IS APPLIED TO THE INDOOR UNIT. SENDING A LOW VOLTAGE SIGNAL WITHOUT HIGH VOLTAGE POWER PRESENT AT THE OUTDOOR UNIT CAN CAUSE MALFUNCTION OF THE CONTROL MODULE ON THE ECM MOTOR.

Adequate refrigerant charge for the matching HSVTC evaporator coil and 15 feet of lineset is supplied with the condensing unit. If using evaporator coils other than HSVTC coil it maybe necessary to add or remove refrigerant to attain proper charge. If line set exceeds 15 feet in length, refrigerant should be added at .6 ounces per foot of liquid line.

NOTE: CHARGE SHOULD ALWAYS BE CHECKED USING SUPERHEAT WHEN USING A PISTON AND SUBCOOLING WHEN USING TXV EQUIPPED INDOOR COIL TO VERIFY PROPER CHARGE.

Open the suction service valve first! If the liquid service valve is opened first, oil from the compressor may be drawn into the indoor coil TXV, restricting refrigerant flow and affecting operation of the system.

When opening valves with retainers, open each valve only until the top of the stem is 1/8" from the retainer. To avoid loss of refrigerant, DO NOT apply pressure to the retainer. When opening valves without a retainer remove service valve cap and insert a hex wrench into the valve stem and back out the stem by turning the hex wrench counterclockwise. Open the valve until it contacts the rolled lip of the valve body.

NOTE: THESE ARE NOT BACK-SEATING VALVES. IT IS NOT NECESSARY TO FORCE THE STEM TIGHTLY AGAINST THE ROLLED LIP.

After the refrigerant charge has bled into the system, open the liquid service valve. The service valve cap is the secondary seal for the valves and must be properly tightened to prevent leaks. Make sure cap is clean and apply refrigerant oil to threads and sealing surface on inside of cap. Tighten cap finger-tight and then tighten additional 1/6 of a turn (1 wrench flat) to properly seat the sealing surfaces.

Do not introduce liquid refrigerant from the cylinder into the crankcase of the compressor as this may damage the compressor.

1. Break vacuum by fully opening liquid and suction base valves.
2. Set thermostat to call for cooling. Check indoor and outdoor fan operation and allow system to stabilize for 10 minutes for fixed orifices and 20 minutes for expansion valves.

CHARGE VERIFICATION



WARNING

REFRIGERANT UNDER PRESSURE!

- **DO NOT OVERCHARGE SYSTEM WITH REFRIGERANT.**
- **DO NOT OPERATE UNIT IN A VACUUM OR AT NEGATIVE PRESSURE.**

FAILURE TO FOLLOW PROPER PROCEDURES MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



CAUTION

USE REFRIGERANT CERTIFIED TO AHRI STANDARDS. USED REFRIGERANT MAY CAUSE COMPRESSOR DAMAGE, AND IS NOT COVERED UNDER THE WARRANTY. MOST PORTABLE MACHINES CANNOT CLEAN USED REFRIGERANT TO MEET AHRI STANDARDS.

NOTICE

VIOLATION OF EPA REGULATIONS MAY RESULT IN FINES OR OTHER PENALTIES.



CAUTION

DAMAGE TO THE UNIT CAUSED BY OPERATING THE COMPRESSOR WITH THE SUCTION VALVE CLOSED IS NOT COVERED UNDER THE WARRANTY AND MAY CAUSE SERIOUS COMPRESSOR DAMAGE.

FINAL CHARGE ADJUSTMENT

The outdoor temperature must be 60°F or higher. Set the room thermostat to COOL, fan switch to AUTO, and set the temperature control well below room temperature.

After system has stabilized per startup instructions, check subcooling and superheat as detailed in the following section.

EXPANSION VALVE SYSTEM



CAUTION

TO PREVENT PERSONAL INJURY, CAREFULLY CONNECT AND DISCONNECT MANIFOLD GAUGE HOSES. ESCAPING LIQUID REFRIGERANT CAN CAUSE BURNS. DO NOT VENT REFRIGERANT INTO THE ATMOSPHERE. RECOVER ALL REFRIGERANT DURING SYSTEM REPAIR AND BEFORE FINAL UNIT DISPOSAL.

NOTE: UNITS MATCHED WITH INDOOR COILS EQUIPPED WITH NON-ADJUSTABLE TXV SHOULD BE CHARGED BY SUBCOOLING ONLY.

SUPERCOOLING FORMULA = SATURATED LIQUID LINE TEMP. - LIQUID LINE TEMP.

Run the outdoor unit in low stage cooling mode for 10 minutes until refrigerant pressures stabilize. Use the following guidelines and methods to check unit operation and ensure that the refrigerant charge is within limits.

NOTE: CHARGE THE UNIT ON LOW STAGE.

1. Purge the gauge lines and connect the service gauge manifold to the base valve service ports.
2. Clamp a pipe clamp thermometer on the liquid line near the liquid line service valve.
 - a. Ensure the thermometer makes adequate contact to obtain the best possible readings.
 - b. The temperature read with the thermometer should be lower than the saturated condensing temperature.
3. The difference between the measured saturated condensing temperature and the liquid line temperature is the liquid Subcooling value.
4. TXV-based systems should have a Subcooling value of 6°F +/- 1°F.
5. Add refrigerant to increase Subcooling and remove refrigerant to decrease Subcooling.

NOTE: UNITS MATCHED WITH INDOOR COILS EQUIPPED WITH A TXV SHOULD BE CHARGED BY SUBCOOLING ONLY. SUPERHEAT CAN ALSO BE UTILIZED TO BEST VERIFY CHARGE LEVELS WITH AN ADJUSTABLE TXV AND MAKE ADJUSTMENTS WHEN NEEDED IN UNIQUE APPLICATIONS DUE TO REFRIGERANT LINE LENGTH, DIFFERENCES IN HEIGHT BETWEEN THE INDOOR AND OUTDOOR UNIT AND REFRIGERANT TUBING SIZES. THESE ADJUSTMENTS SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL.

ADVANCED ADJUSTMENT RECOMMENDATIONS

Superheat Formula = Suction Line Temp. - Saturated Suction Temp.

1. Clamp a pipe clamp thermometer near the suction line service valve at the outdoor unit.
 - a. Ensure the thermometer makes adequate contact for the best possible readings.
 - b. The temperature read with the thermometer should be higher than the saturated suction temperature.
2. The difference between the measured saturated suction temperature and the suction line temperature is the Superheat value.
3. TXV-based systems should have a Superheat value of 8°F +/- 1°F.
4. Adjust Superheat by turning the TXV valve stem clockwise to increase and counterclockwise to decrease.
 - a. If Subcooling and Superheat are low, adjust the TXV to 8°F +/- 1°F, and then check Subcooling.
 - b. If Subcooling is low and Superheat is high, add charge to raise Subcooling to 6°F +/- 1°F then check Superheat.
 - c. If Subcooling and Superheat are high, adjust the TXV valve to 8°F +/- 1°F Superheat, then check the Subcooling value.
 - d. If Subcooling is high and Superheat is low, adjust the TXV valve to 8°F +/- 1°F Superheat and remove charge to lower the Subcooling to 6°F +/- 1°F.

NOTE: DO NOT ADJUST THE CHARGE BASED EXCLUSIVELY ON SUCTION PRESSURE UNLESS FOR GENERAL CHARGING IN THE CASE OF A GROSS UNDERCHARGE.

NOTE: CHECK THE SCHRADER PORTS FOR LEAKS AND TIGHTEN VALVE CORES IF NECESSARY. INSTALL CAPS FINGER-TIGHT.

SATURATED SUCTION PRESSURE TEMPERATURE CHART		
SUCTION PRESSURE	SATURATED SUCTION TEMPERATURE °F	
PSIG	R-22	R-410A
50	26	1
52	28	3
54	29	4
56	31	6
58	32	7
60	34	8
62	35	10
64	37	11
66	38	13
68	40	14
70	41	15
72	42	16
74	44	17
76	45	19
78	46	20
80	48	21
85	50	24
90	53	26
95	56	29
100	59	31
110	64	36
120	69	41
130	73	45
140	78	49
150	83	53
160	86	56
170	90	60

SATURATED LIQUID PRESSURE TEMPERATURE CHART		
LIQUID PRESSURE	SATURATED LIQUID TEMPERATURE °F	
PSIG	R-22	R-410A
200	101	70
210	105	73
220	108	76
225	110	78
235	113	80
245	116	83
255	119	85
265	121	88
275	124	90
285	127	92
295	130	95
305	133	97
325	137	101
355	144	108
375	148	112
405	155	118
415	157	119
425	n/a	121
435	n/a	123
445	n/a	125
475	n/a	130
500	n/a	134
525	n/a	138
550	n/a	142
575	n/a	145
600	n/a	149
625	n/a	152

HEAT PUMP - HEATING CYCLE

The proper method of charging a heat pump in the heat mode is by weight with the additional charge adjustments for line size, line length, and other system components. To achieve maximum performance, adjust the OD TXV to 4°F +/- 1°F superheat and subcool below 40° F at 4-6" from the compressor. Make final charge adjustments in the cooling cycle.

LOW SPEED LOCK-OUT

The outdoor system has a low speed lockout feature. In communicating mode, below 37°F outdoor ambient, the system locks out low stage and operates only in high stage to provide maximum heating capacity.

AIRFLOW CONSIDERATIONS

Airflow demands are managed differently in a fully communicating system than they are in a legacy wired system. The system operating mode (as determined by the thermostat) determines which unit calculates the system airflow demand. If the indoor unit is responsible for determining the airflow demand, it calculates the demand and sends it to the ECM motor. If the outdoor unit or thermostat is responsible for determining the demand, it calculates the demand and transmits the demand along with a fan request to the indoor unit. The indoor unit then sends the demand to the ECM motor. The following table lists the various Daikin Communicating systems, the operating mode, and airflow demand source.


System	System Operating Mode	Airflow Demand Source
Heat Pump + Air Handler	Cooling	Heat Pump
	Heat Pump Heating Only	Heat Pump
	HP + Electric Heat Strips	> of Heat Pump or Air Handler Demand
	Electric Heat Strips Only	Air Handler
	Continuous Fan	Thermostat
Heat Pump + Furnace	Cooling	Heat Pump
	Heat Pump Heating Only	Heat Pump
	Auxiliary Heating	Furnace
	Continuous Fan	Thermostat

For example, assume the system is a heat pump matched with an air handler. With a call for low stage cooling, the heat pump will calculate the system's low stage cooling airflow demand. The heat pump will then send a fan request along with the low stage cooling airflow demand to the air handler. Once received, the air handler will send the low stage cooling airflow demand to the ECM motor. The ECM motor then delivers the low stage cooling airflow. The table at right lists the nominal high and low stage airflow for the Daikin Communicating heat pumps.

Models	Cooling		Heating	
	High	Low	High	Low
DZ16TC0241	800	600	800	600
DZ16TC0361	1200	800	1200	800
DZ16TC0481	1550	1100	1550	1100
DZ16TC0601	1800	1210	1800	1210
DZ18TC0241	850	550	850	550
DZ18TC0361	1250	850	1250	850
DZ18TC0481	1550	1210	1550	1210
DZ18TC0601	1750	1210	1750	1210



HIGH VOLTAGE!
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS
UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO
DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

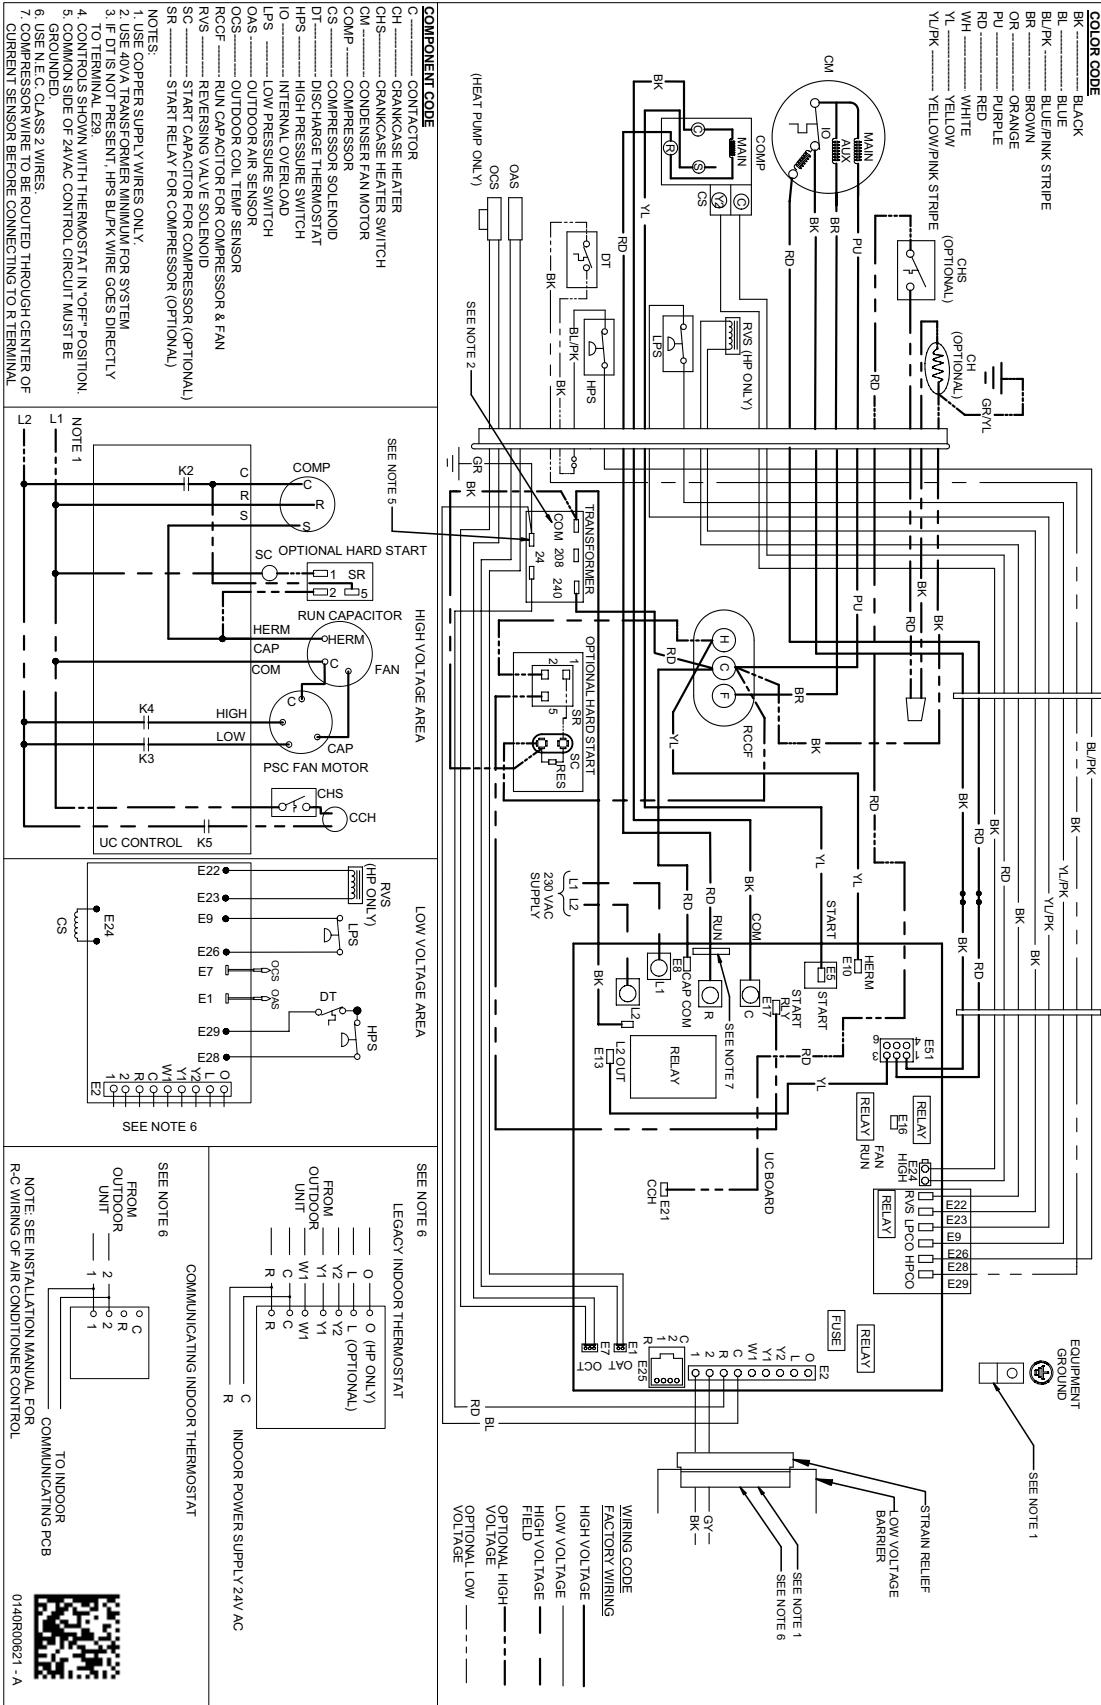

TROUBLESHOOTING

NETWORK TROUBLESHOOTING

If a network communication error code has occurred, use the following steps to help troubleshoot the system. (For network communication error codes, refer to the table below and the tables of error codes for outdoor unit and indoor unit.)

After any wiring changes have been made or DS1 dip switches on the outdoor unit control board have been changed, apply power to the system and see if the error codes have cleared.


1. Confirm low voltage wiring is correct per installation instructions. Check for mis-wiring. (i.e. Terminal 1 and 2 is reversed)

NOTE: A REMOVABLE PLUG CONNECTOR IS PROVIDED WITH THE CONTROL TO MAKE THERMOSTAT WIRE CONNECTIONS. THIS PLUG MAY BE REMOVED, WIRE CONNECTIONS MADE TO THE PLUG, AND REPLACED. IT IS STRONGLY RECOMMENDED THAT YOU DO NOT CONNECT MORE THAN TWO WIRES INTO A SINGLE TERMINAL IN THE FIELD BECAUSE THERE IS A RISK OF THE WIRES BECOMING LOOSE. FAILURE TO DO SO MAY RESULT IN INTERMITTENT OPERATION.

2. Check wires for damage (i.e. Broken wire at terminal, broken inside wire nuts or damaged cable between units.)
3. Perform continuity check on wires to make sure cable is ok. Replace the cable if necessary.
4. Change both dip switches of DS1 on the outdoor unit control board to the opposite position. See image below.

The integrated control module has some onboard tools that can be used to troubleshoot the network. These tools are: red communications LED, green receive (Rx) LED, and the learn button.

- Red communications LED - Indicates the status of the network. The table below indicates the LED status and the corresponding potential problem.
- Green receive LED - Indicates network traffic. The table below indicates the LED status and the corresponding potential problem.
- LEARN button - Used to reset the network. Press the button for approximately 5 seconds to reset the network.

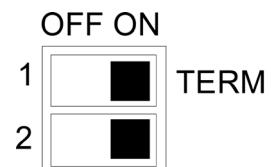

COMMUNICATIONS TROUBLESHOOTING CHART

LED	LED Status	Indication	Possible Causes	Corrective Action(s)	Notes & Cautions
Red Communications LED	Off	• Normal condition	• None	• None	• None
	1 Flash	• Communications Failure	• Communications Failure	• Depress LEARN Button	• Depress once quickly for a power-up reset • Depress and hold for 2 seconds for an out-of-box reset
	2 Flashes	• Out-of-box reset	• Control power up • Learn button depressed	• None	• None
Green Receive LED	Off	• No power • Communications error	• No power to furnace • Open fuse • Communications error	• Check fuses and circuit breakers; replace/reset • Replace blown fuse • Check for shorts in low voltage wiring in system • Reset network by depressing learn button • Check data 1/ data 2 voltages	• Turn power OFF prior to repair
	1 Steady Flash	• No network found	• Broken/ disconnected data wire(s) • AC/HP is installed as a legacy/ traditional system	• Check communications wiring (data 1/ data 2 wires) • Check wire connections at terminal block • Verify installation type (legacy/ traditional or communicating) • Check data 1/ data 2 voltages	• Turn power OFF prior to repair • Verify wires at terminal blocks are securely twisted together prior to inserting into terminal block
	Rapid Flashing	• Normal network traffic	• Control is "talking" on network as expected	• None	• None
	On Solid	• Data 1/ Data 2 miss-wire	• Data 1 and data 2 wires reversed at indoor unit, thermostat, or CT compatible outdoor unit • Short between data 1 and data 2 wires • Short between data 1 or data 2 wires and R (24 VAC) or C (24 VAC common)	• Check communications wiring (data 1/ data 2 wires) • Check wire connections at terminal block • Check data 1/ data 2 voltages	• Turn power OFF prior to repair • Verify wires at terminal blocks are securely twisted together prior to inserting into terminal block

TROUBLESHOOTING INFORMATION: CONDENSING UNIT

Complaint	No Cooling				Unsatisfactory Cooling/Heating			System Operating Pressures	Test Method Remedy														
POSSIBLE CAUSE DOTS IN ANALYSIS GUIDE INDICATE "POSSIBLE CAUSE"	SYMPTOM	System will not start	Compressor will not start - fan runs	Comp. and Cond. Fan will not start	Evaporator fan will not start	Condenser fan will not start	Compressor runs - goes off on overheat	Compressor cycles on overload	System runs continuously - little cooling/heat	Too cool and then too warm	Not cool enough on warm days	Certain areas too cool, others to warm	Compressor is noisy	System runs - blows cold air in heating	Unit will not defrost	Unit will not defrost	Low suction pressure	High head pressure	High suction pressure	High head pressure			
Power Failure	●																				Test Voltage		
Blown Fuse	●	●	●	●																	Inspect Fuse Size & Type		
Unbalanced Power, 3PH	●	●					●	●													Test Voltage		
Loose Connection	●	●	●	●	●	●	●	●													Inspect Connection - Tighten		
Shorted or Broken Wires	●	●	●	●	●	●	●	●													Test Circuits With Ohmmeter		
Open Fan Overload				●	●																Test Continuity of Overload		
Faulty Thermostat	●	●	●							●											Test Continuity of Thermostat & Wiring		
Faulty Transformer	●	●																			Check Control Circuit with Voltmeter		
Shorted or Open Capacitor	●	●	●	●	●	●	●	●													Test Capacitor		
Internal Compressor Overload Open	●										◆										Test Continuity of Overload		
Shorted or Grounded Compressor	●						●														Test Motor Windings		
Compressor Stuck	●						●	●				◆									Use Test Cord		
Faulty Compressor Contactor	●						●	●													Test Continuity of Coil & Contacts		
Faulty Fan Relay			●																		Test Continuity of Coil And Contacts		
Open Control Circuit		●																			Test Control Circuit with Voltmeter		
Low Voltage	●			●	●																Test Voltage		
Faulty Evap. Fan Motor			●										●				◆				Repair or Replace		
Shorted or Grounded Fan Motor				●										●							Test Motor Windings		
Improper Cooling Anticipator					●	●															Check Resistance of Anticipator		
Shortage of Refrigerant					●	●						◆									Test For Leaks, Add Refrigerant		
Restricted Liquid Line					●	●							●	●							Remove Restriction, Replace Restricted Part		
Open Element or Limit on Elec. Heater							◆					◆									Test Heater Element and Controls		
Dirty Air Filter							●	●	●				●			◆					Inspect Filter-Clean or Replace		
Dirty Indoor Coil							●	●	●				●			◆					Inspect Coil - Clean		
Not enough air across Indoor Coil							●	●	●							◆					Check Blower Speed, Duct Static Press, Filter		
Too much air across Indoor Coil																◆					Reduce Blower Speed		
Overcharge of Refrigerant			●	●						●	◆					●	●				Recover Part of Charge		
Dirty Outdoor Coil			●	●						●						●					Inspect Coil - Clean		
Noncondensables					●	●					◆					●					Recover Charge, Evacuate, Recharge		
Recirculation of Condensing Air						●				●						●					Remove Obstruction to Air Flow		
Infiltration of Outdoor Air							●	●	●												Check Windows, Doors, Vent Fans, Etc.		
Improperly Located Thermostat			●				●														Relocate Thermostat		
Air Flow Unbalanced							●	●	●												Readjust Air Volume Dampers		
System Undersized							●	●													Refigure Cooling Load		
Broken Internal Parts										●	◆										Replace Compressor		
Broken Valves							●			●											Test Compressor Efficiency		
Inefficient Compressor							●				◆										Test Compressor Efficiency		
Wrong Type Expansion Valve							●	●	●							●	●	◆			Replace Valve		
Expansion Device Restricted							●	●	●							●	●	●			Remove Restriction or Replace Expansion Device		
Oversized Expansion Valve								●								●					Replace Valve		
Undersized Expansion Valve							●	●	●							●					Replace Valve		
Expansion Valve Bulb Loose										●							●					Tighten Bulb Bracket	
Inoperative Expansion Valve								●	●								●					Check Valve Operation	
Loose Hold-down Bolts											●							●					Tighten Bolts
Faulty Reversing Valve								●				◆	◆	◆			●	●	●			Replace Valve or Solenoid	
Faulty Defrost Control								●				◆	◆	◆			●	●	●			Test Control	
Faulty Defrost Thermostat											◆	◆	◆	◆			●	●	●			Test Defrost Thermostat	
Flow Rator Not Seating Properly									●								●	●	●			Check Flow rator & Seat or Replace Flow rator	

● Cooling or Heating Cycle (Heat Pump) ◆ Heating Cycle Only (Heat Pump)

For detailed service information refer to the Remote Condensing Unit Service manual.

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

If you are attempting to install a Daikin One+ Communicating Thermostat, please visit the Daikin One+ Smart Thermostat website at <http://www.daikinone.com>

If installing with a CTK04 thermostat, please continue reading for further instructions.

SPLIT SYSTEMS

AIR CONDITIONING AND HEAT PUMP HOMEOWNER'S ROUTINE MAINTENANCE RECOMMENDATIONS

We strongly recommend a bi-annual maintenance checkup be performed before the heating and cooling seasons begin by a qualified servicer.

REPLACE OR CLEAN FILTER

IMPORTANT NOTE: Never operate unit without a filter installed as dust and lint will build up on internal parts resulting in loss of efficiency, equipment damage and possible fire.

An indoor air filter must be used with your comfort system. A properly maintained filter will keep the indoor coil of your comfort system clean. A dirty coil could cause poor operation and/or severe equipment damage.

Your air filter or filters could be located in your furnace, in a blower unit, or in "filter grilles" in your ceiling or walls. The installer of your air conditioner or heat pump can tell you where your filter(s) are, and how to clean or replace them.

Check your filter(s) at least once a month. When they are dirty, replace or clean as required. Disposable type filters should be replaced. Reusable type filters may be cleaned.

You may want to ask your dealer about high efficiency filters. High efficiency filters are available in both electronic and non-electronic types. These filters can do a better job of catching small airborne particles.

COMPRESSOR

The compressor motor is hermetically sealed and does not require additional oiling.

MOTORS

Indoor and outdoor fan motors are permanently lubricated and do not require additional oiling.

CLEAN OUTSIDE COIL (QUALIFIED SERVICER ONLY)

WARNING

HIGH VOLTAGE!

DISCONNECT ALL POWER BEFORE SERVICING.
MULTIPLE POWER SOURCES MAY BE PRESENT.
FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE,
PERSONAL INJURY OR DEATH.



Air must be able to flow through the outdoor unit of your comfort system. Do not construct a fence near the unit or build a deck or patio over the unit without first discussing your plans with your dealer or other qualified servicer. Restricted airflow could lead to poor operation and/or severe equipment damage.

Likewise, it is important to keep the outdoor coil clean. Dirt, leaves, or debris could also restrict the airflow. If cleaning of the outdoor coil becomes necessary, hire a qualified servicer. Inexperienced people could easily puncture the tubing in the coil. Even a small hole in the tubing could eventually cause a large loss of refrigerant. Loss of refrigerant can cause poor operation and/or severe equipment damage.

Do not use a condensing unit cover to "protect" the outdoor unit during the winter, unless you first discuss it with your dealer. Any cover used must include "breathable" fabric to avoid moisture buildup.

BEFORE CALLING YOUR SERVICER

- Check the thermostat to confirm that it is properly set.
- Wait 15 minutes. Some devices in the outdoor unit or in programmable thermostats will prevent compressor operation for awhile, and then reset automatically. Also, some power companies will install devices which shut off air conditioners for several minutes on hot days. If you wait several minutes, the unit may begin operation on its own.

- Check the electrical panel for tripped circuit breakers or failed fuses. Reset the circuit breakers or replace fuses as necessary.
- Check the disconnect switch near the indoor furnace or blower to confirm that it is closed.
- Check for obstructions on the outdoor unit. Confirm that it has not been covered on the sides or the top. Remove any obstruction that can be safely removed. If the unit is covered with dirt or debris, call a qualified servicer to clean it.
- Check for blockage of the indoor air inlets and outlets. Confirm that they are open and have not been blocked by objects (rugs, curtains or furniture).
- Check the filter. If it is dirty, clean or replace it.
- Listen for any unusual noise(s), other than normal operating noise, that might be coming from the outdoor unit. If you hear unusual noise(s) coming from the unit, call a qualified servicer.

CAUTION


TO AVOID THE RISK OF EQUIPMENT DAMAGE OR FIRE, INSTALL THE SAME AMPERAGE BREAKER OR FUSE AS YOU ARE REPLACING. IF THE CIRCUIT BREAKER OR FUSE SHOULD OPEN AGAIN WITHIN THIRTY DAYS, CONTACT A QUALIFIED SERVICER TO CORRECT THE PROBLEM.
IF YOU REPEATEDLY RESET THE BREAKER OR REPLACE THE FUSE WITHOUT HAVING THE PROBLEM CORRECTED, YOU RUN THE RISK OF SEVERE EQUIPMENT DAMAGE.

CTK04 ADDENDUM

OR

TWO-WIRE OUTDOOR, FOUR-WIRE INDOOR WIRING

Low voltage wiring consists of two wires between the indoor unit and heat pump and four wires between the indoor unit and thermostat. The required wires are data lines 1 and 2, "R" (24 VAC hot) and "C" (24 VAC common). Never connect the power wiring to communication terminal (1, 2, R, C)

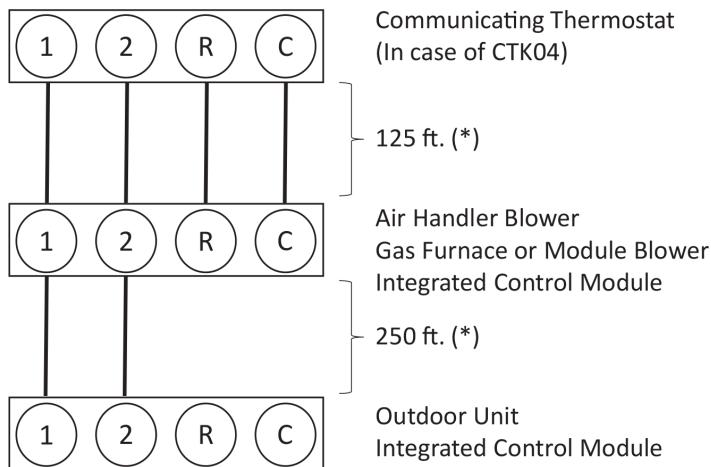

(*) Allowable Maximum Length

SYSTEM WIRING

ATTENTION INSTALLER - IMPORTANT NOTICE!

Please read carefully before installing this unit with the CTK04 thermostat.

- For DX16TC & DX18TC, do not install the 24 Volt Transformer that is included with the CTK04 Thermostat in the Condensing Unit; it is not needed.
- Do not attach any wires to the R & C Terminals on the Condensing Unit, as they are not needed for a communicating system setup.
- Data line terminals #1 and #2 are polarity sensitive. Only the data lines, 1 and 2, are required between the indoor and outdoor units.
- Data line terminal #1 from outdoor unit must connect to terminal #1 on indoor unit and data line terminal #2 from outdoor unit must connect to terminal #2 on indoor unit. Verify wires are not reversed.
- To wire the system components, it is strongly recommended to use the same type and the same gauge for the wires prepared in the field (for best results use 18 AWG).
- It is strongly recommended that you do not connect more than two wires into a single terminal in the field because there is a risk of the wires becoming loose.
- Calculate the Liquid Line Set length and weigh in 0.6 ounces per foot of R410A refrigerant for any length over 15 feet.

- Charge by Sub-cooling.

Sub-cooling should be $8^{\circ}\text{F} \pm 1^{\circ}\text{F}$. After adjusting charge, please allow at least 20 minutes for the system to stabilize before making further charge adjustment.

CHARGE VERIFICATION



WARNING

REFRIGERANT UNDER PRESSURE!

- **DO NOT OVERCHARGE SYSTEM WITH REFRIGERANT.**
- **DO NOT OPERATE UNIT IN A VACUUM OR AT NEGATIVE PRESSURE.**

FAILURE TO FOLLOW PROPER PROCEDURES MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



CAUTION

**USE REFRIGERANT CERTIFIED TO AHRI STANDARDS.
USED REFRIGERANT MAY CAUSE COMPRESSOR DAMAGE, AND IS NOT COVERED UNDER THE WARRANTY.
MOST PORTABLE MACHINES CANNOT CLEAN USED REFRIGERANT TO MEET AHRI STANDARDS.**

NOTICE

VIOLATION OF EPA REGULATIONS MAY RESULT IN FINES OR OTHER PENALTIES.



CAUTION

DAMAGE TO THE UNIT CAUSED BY OPERATING THE COMPRESSOR WITH THE SUCTION VALVE CLOSED IS NOT COVERED UNDER THE WARRANTY AND MAY CAUSE SERIOUS COMPRESSOR DAMAGE.

FINAL CHARGE ADJUSTMENT

The outdoor temperature must be 60°F or higher. Set the room thermostat to COOL, fan switch to AUTO, and set the temperature control well below room temperature.

After system has stabilized per startup instructions, check subcooling and superheat as detailed in the following section.

**CAUTION**

TO PREVENT PERSONAL INJURY, CAREFULLY CONNECT AND DISCONNECT MANIFOLD GAUGE HOSES. ESCAPING LIQUID REFRIGERANT CAN CAUSE BURNS. DO NOT VENT REFRIGERANT INTO THE ATMOSPHERE. RECOVER ALL REFRIGERANT DURING SYSTEM REPAIR AND BEFORE FINAL UNIT DISPOSAL.

NOTE: UNITS MATCHED WITH INDOOR COILS EQUIPPED WITH NON-ADJUSTABLE TXV SHOULD BE CHARGED BY SUBCOOLING ONLY.

**SUPERCOOLING FORMULA =
SATURATED LIQUID LINE TEMP. - LIQUID LINE TEMP.**

Run the outdoor unit in low stage cooling mode for 10 minutes until refrigerant pressures stabilize. Use the following guidelines and methods to check unit operation and ensure that the refrigerant charge is within limits.

NOTE: CHARGE THE UNIT ON LOW STAGE.

1. Purge the gauge lines and connect the service gauge manifold to the base valve service ports.
2. Clamp a pipe clamp thermometer on the liquid line near the liquid line service valve.
 - a. Ensure the thermometer makes adequate contact to obtain the best possible readings.
 - b. The temperature read with the thermometer should be lower than the saturated condensing temperature.
3. The difference between the measured saturated condensing temperature and the liquid line temperature is the liquid Subcooling value.
4. TXV-based systems should have a Subcooling value of 6°F +/- 1°F.
5. Add refrigerant to increase Subcooling and remove refrigerant to decrease Subcooling.

NOTE: UNITS MATCHED WITH INDOOR COILS EQUIPPED WITH A TXV SHOULD BE CHARGED BY SUBCOOLING ONLY. SUPERHEAT CAN ALSO BE UTILIZED TO BEST VERIFY CHARGE LEVELS WITH AN ADJUSTABLE TXV AND MAKE ADJUSTMENTS WHEN NEEDED IN UNIQUE APPLICATIONS DUE TO REFRIGERANT LINE LENGTH, DIFFERENCES IN HEIGHT BETWEEN THE INDOOR AND OUTDOOR UNIT AND REFRIGERANT TUBING SIZES. THESE ADJUSTMENTS SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL.

**Superheat Formula =
Suction Line Temp. - Saturated Suction Temp.**

1. Clamp a pipe clamp thermometer near the suction line service valve at the outdoor unit.
 - a. Ensure the thermometer makes adequate contact for the best possible readings.
 - b. The temperature read with the thermometer should be higher than the saturated suction temperature.
2. The difference between the measured saturated suction temperature and the suction line temperature is the Superheat value.
3. TXV-based systems should have a Superheat value of 8°F +/- 1°F.
4. Adjust Superheat by turning the TXV valve stem clockwise to increase and counterclockwise to decrease.
 - a. If Subcooling and Superheat are low, adjust the TXV to 8°F +/- 1°F, and then check Subcooling.
 - b. If Subcooling is low and Superheat is high, add charge to raise Subcooling to 6°F +/- 1°F then check Superheat.
 - c. If Subcooling and Superheat are high, adjust the TXV valve to 8°F +/- 1°F Superheat, then check the Subcooling value.
 - d. If Subcooling is high and Superheat is low, adjust the TXV valve to 8°F +/- 1°F Superheat and remove charge to lower the Subcooling to 6°F +/- 1°F.

NOTE: DO NOT ADJUST THE CHARGE BASED EXCLUSIVELY ON SUCTION PRESSURE UNLESS FOR GENERAL CHARGING IN THE CASE OF A GROSS UNDERCHARGE.

NOTE: CHECK THE SCHRADER PORTS FOR LEAKS AND TIGHTEN VALVE CORES IF NECESSARY. INSTALL CAPS FINGER-TIGHT.

SATURATED SUCTION PRESSURE TEMPERATURE CHART		
SUCTION PRESSURE	SATURATED SUCTION TEMPERATURE °F	
PSIG	R-22	R-410A
50	26	1
52	28	3
54	29	4
56	31	6
58	32	7
60	34	8
62	35	10
64	37	11
66	38	13
68	40	14
70	41	15
72	42	16
74	44	17
76	45	19
78	46	20
80	48	21
85	50	24
90	53	26
95	56	29
100	59	31
110	64	36
120	69	41
130	73	45
140	78	49
150	83	53
160	86	56
170	90	60

SATURATED LIQUID PRESSURE TEMPERATURE CHART		
LIQUID PRESSURE	SATURATED LIQUID TEMPERATURE °F	
PSIG	R-22	R-410A
200	101	70
210	105	73
220	108	76
225	110	78
235	113	80
245	116	83
255	119	85
265	121	88
275	124	90
285	127	92
295	130	95
305	133	97
325	137	101
355	144	108
375	148	112
405	155	118
415	157	119
425	n/a	121
435	n/a	123
445	n/a	125
475	n/a	130
500	n/a	134
525	n/a	138
550	n/a	142
575	n/a	145
600	n/a	149
625	n/a	152

HEAT PUMP - HEATING CYCLE

The proper method of charging a heat pump in the heat mode is by weight with the additional charge adjustments for line size, line length, and other system components. To achieve maximum performance, adjust the OD TXV to 4°F +/- 1°F superheat and subcool below 40° F at 4-6" from the compressor. Make final charge adjustments in the cooling cycle.

LOW SPEED LOCK-OUT

The outdoor system has a low speed lockout feature. In communicating mode, below 37°F outdoor ambient, the system locks out low stage and operates only in high stage to provide maximum heating capacity.

COMFORTNET™ SYSTEM

OVERVIEW

The ComfortNet system (or CT system) is a system that includes a ComfortNet compatible air handler/furnace/modular blower and air conditioner or heat pump with a CTK0* thermostat. Any other system configurations are considered invalid ComfortNet systems and must be connected as a tradition (or legacy) system.

A ComfortNet heating/air conditioning system differs from a legacy/traditional system in the manner in which the indoor unit, outdoor unit and thermostat interact with one another. In a traditional system, the thermostat sends commands to the indoor and outdoor units via analog 24 VAC signals. It is a one-way communication path in that the indoor and outdoor units typically do not return information to the thermostat.

On the other hand, the indoor unit, outdoor unit, and thermostat comprising a ComfortNet system "communicate" digitally with one another. It is now a two-way communications path. The thermostat still sends commands to the indoor and outdoor units. However, the thermostat may also request and receive information from one another to optimize system performance.

Two-way digital communications is accomplished using only two wires between the indoor and outdoor units. The heat pump control board is powered by 24 VAC, which is supplied by the factory-installed transformer in the heat pump control box.

AIRFLOW CONSIDERATIONS

Airflow demands are managed differently in a fully communicating system than they are in a legacy wired system. The system operating mode (as determined by the thermostat) determines which unit calculates the system airflow demand. If the indoor unit is responsible for determining the airflow demand, it calculates the demand and sends it to the ECM motor. If the outdoor unit or thermostat is responsible for determining the demand, it calculates the demand and transmits the demand along with a fan request to the indoor unit. The indoor unit then sends the demand to the ECM motor. The following table lists the various Daikin Communicating systems, the operating mode, and airflow demand source.

System	System Operating Mode	Airflow Demand Source
Heat Pump + Air Handler	Cooling	Heat Pump
	Heat Pump Heating Only	Heat Pump
	HP + Electric Heat Strips	> of Heat Pump or Air Handler Demand
	Electric Heat Strips Only	Air Handler
	Continuous Fan	Thermostat
Heat Pump + Furnace	Cooling	Heat Pump
	Heat Pump Heating Only	Heat Pump
	Auxiliary Heating	Furnace
	Continuous Fan	Thermostat

For example, assume the system is a heat pump matched with an air handler. With a call for low stage cooling, the heat pump will calculate the system's low stage cooling airflow demand. The heat pump will then send a fan request along with the low stage cooling airflow demand to the air handler. Once received, the air handler will send the low stage cooling airflow demand to the ECM motor. The ECM motor then delivers the low stage cooling airflow. The table at right lists the nominal high and low stage airflow for the Daikin Communicating heat pumps.

Models	Cooling		Heating	
	High	Low	High	Low
DZ16TC0241	800	600	800	600
DZ16TC0361	1200	800	1200	800
DZ16TC0481	1550	1100	1550	1100
DZ16TC0601	1800	1210	1800	1210
DZ18TC0241	850	550	850	550
DZ18TC0361	1250	850	1250	850
DZ18TC0481	1550	1210	1550	1210
DZ18TC0601	1750	1210	1750	1210

DAIKIN COMMUNICATING SYSTEM ADVANCED FEATURES

The Daikin Communicating system permits access to additional system information, advanced setup features, and advanced diagnostic/troubleshooting features. See indoor equipment installation manual for directions on how to access the menus.

DIAGNOSTICS

Accessing the air conditioner/heat pump's diagnostics menu provides ready access to the last six faults detected by the air conditioner/heat pump. Faults are stored most recent to least recent. Any consecutively repeated fault is stored a maximum of three times. Example: The power supply to the air conditioner/heat pump is continuously below 187 VAC. The control will only store this fault the first three consecutive times the fault occurs.

NOTE: IT IS HIGHLY RECOMMENDED THAT THE FAULT HISTORY BE CLEARED AFTER PERFORMING MAINTENANCE OR SERVICING THE HEAT PUMP.

IDENTIFICATION

Model Number, Serial Number and Software Version are displayed within this menu. A model number check will help determine if the equipment shared data is correct for the unit. *If the model number is not correct, even though very rare, a memory card is available to load the proper data.*


SENSORS

The outdoor ambient temperature and coil temperature are displayed in the Sensor Menu. This information can be used for troubleshooting purposes.


COOL SET-UP

This menu allows for the adjustment of several cooling performance variables. Cool Airflow Trim (range from -10% to 10% in 2% increments), Cool Airflow Profiles, Cool Fan ON Delay, Cool Fan OFF Delay and Dehumidification Select (enable or disable dehumidification) can be adjusted in this menu. See the following images showing the four cooling airflow profiles. pump is continuously below 187 VAC. The control will only store this fault the first three consecutive times the fault occurs.


- **Profile A** (default) provides only an OFF delay of one (1) minute at 100% of the cooling demand airflow.

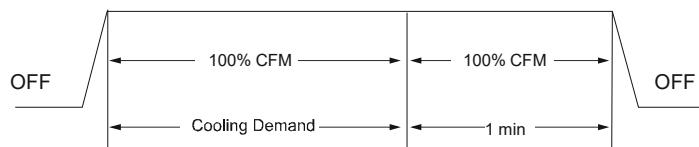


- **Profile B** ramps up to full cooling demand airflow by first stepping up to 50% of the full demand for 30 seconds. The motor then ramps to 100% of the required airflow. A one (1) minute OFF delay at 100% of the cooling airflow.

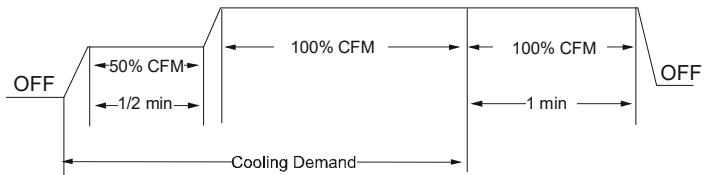

- **Profile C** ramps up to 82% of the full cooling demand airflow and operates there for approximately 7 1/2 minutes. The motor then steps up to the full demand airflow. Profile C also has a one (1) minute 100% OFF delay.

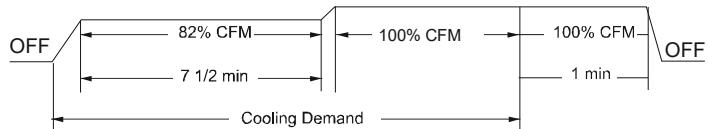

- **Profile D** ramps up to 50% of the demand for 1/2 minute, then ramps to 82% of the full cooling demand airflow and operates there for approximately 7 1/2 minutes. The motor then steps up to the full demand airflow. Profile D has a 1/2 minute at 50% airflow OFF delay.

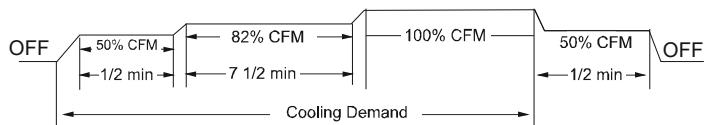

AIRFLOW TABLES

STATUS

The current system operational mode and requested indoor CFM is reported in this menu. This information can be used for troubleshooting purposes.

HEAT SET-UP

This menu allows for the adjustment of several heating performance variables. Heat Airflow Trim (range from -10% to 10% in 2% increments), Heat Fan ON Delay, Heat Fan OFF Delay, Defrost Interval and Compressor Delay can be adjusted in this menu. Defrost Interval determines the amount of compressor run time between defrost cycles. Compressor delay selects a compressor off time after a reversing valve shift.

THERMOSTAT MENU

If this heat pump is installed with a CT compatible furnace, the system is recognized as a dual fuel system. The balance point temperature should be set via the thermostat. See thermostat instruction manual for details on how to set the balance point.

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

UNITARY DIAGNOSTIC CODES

Symptoms of Abnormal Operation (Legacy & Daikin Communicating Thermostat)	Diagnostic/Status LED Display Codes			Fault Description	Daikin Communicating Thermostat Only		Possible Causes	Corrective Actions	Notes & Cautions
	Digit 3	Digit 2	Digit 1		Message	Code			
• Integrated control module diagnostic/status LED display shows the indicated code. • Daikin Communicating thermostat displays '-' in the temperature display area.	BLANK	A	2	• Outdoor air temp sensor fault	AIR SENSOR FLT	A2	• Shorted sensor • Open sensor • Sensor disconnected • Sensor out of range	• Check sensor connection • Replace open/shorted sensor	• Turn power OFF prior to repair • Replace with correct replacement part
• Heat pump fails to operate in heating mode • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	A	3	• Outdoor coil temp sensor fault	COIL SENSOR FLT	A3	• Shorted sensor • Open sensor • Sensor disconnected • Sensor out of range	• Check sensor connection • Replace open/shorted sensor	• Turn power OFF prior to repair • Replace with correct replacement part
• Air conditioner/heat pump fails to operate • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	E	5	• Open fuse	BLOWN FUSE	E5	• Short in low voltage wiring	• Locate and correct short in low voltage wiring	• Turn power OFF prior to repair • Replace fuse with 3-amp automotive type
• Air conditioner/heat pump fails to operate • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	E	E	• Board mis-operation	INTERNAL FAULT	EE	• Compressor relay contacts welded	• Replace control	• Turn power OFF prior to repair • Replace with correct replacement part
• Air conditioner/heat pump fails to operate • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	b	0	• Circulator blower motor is not running when it should be running	MOTOR NOT RUN	b0	• Indoor blower motor problem • Communications error between indoor and outdoor unit	• Check indoor blower motor • Check indoor blower motor wiring • Check indoor unit control • Repair/replace any faulty wiring • Repair/replace indoor blower motor or control	• Turn power OFF prior to repair • Applies only to fully communicating system using Daikin Communicating thermostat • Replace with correct replacement part
• Air conditioner/heat pump operates at reduced performance • Air conditioner/heat pump operating at low stage when expected to operate at high stage • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	b	9	• Airflow is lower than demanded	LOW ID AIRFLOW	b9	• Indoor blower motor problem • Blocked filters • Restrictive/undersized ductwork • Indoor/outdoor unit mismatch	• Check indoor blower motor • Check filters; clean/replace as needed • Check ductwork; resize as needed • Verify indoor and outdoor units are properly matched	• Turn power OFF prior to repair • Applies only to fully communicating system using Daikin Communicating thermostat • Replace with correct replacement part. See specification sheet(s) for airflow requirements and maximum external static pressure • See specification sheets for approved system matches

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

UNITARY DIAGNOSTIC CODES

Symptoms of Abnormal Operation (Legacy & Daikin Communicating Thermostat)	Diagnostic/Status LED Display Codes			Fault Description	Daikin Communicating Thermostat Only	Possible Causes	Corrective Actions	Notes & Cautions
	Digit 3	Digit 2	Digit 1					
• Air conditioner/heat pump fails to operate • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	d	0	• Data not yet on Network	NO NET DATA	d0	• Air conditioner/heat pump is wired as part of a communicating system and integrated control module does not contain any shared data	• Verify system type (communicating or legacy) • Populate shared data using memory card • Wire system as legacy system • Turn power OFF prior to repair • Use memory card for your specific model • Insert memory card BEFORE turning power ON. Memory card may be removed after data is loaded. Turn power OFF before removing memory card • Error code will be cleared once data is loaded. Applies only to fully communicating system using Daikin Communicating thermostat
• Air conditioner/heat pump fails to operate • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	d	1	• Invalid Data on Network	INVALID DATA	d1	• Air conditioner/heat pump is wired as part of a communicating system and integrated control module contains invalid shared data or network data is invalid for the integrated control module	• Verify system type (communicating or legacy) • Populate shared data using memory card • Wire system as legacy system • Turn power OFF prior to repair • Use memory card for your specific model • Insert memory card BEFORE turning power ON. Memory card may be removed after data is loaded. Turn power OFF before removing memory card • Error code will be cleared once data is loaded. Applies only to fully communicating system using Daikin Communicating thermostat
• Air conditioner/heat pump fails to operate • Air conditioner/heat pump operating at reduced performance • Air conditioner/heat pump operating at low stage when expected to operate at high stage • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	d	2	• System mismatch	INVALID SYSTEM	d2	• Air conditioner/ heat pump is wired as part of a communicating system and outdoor unit requires airflow greater than indoor unit's airflow capability • Shared data is incompatible with the system or missing parameters • Verify system type (communicating or legacy) • Verify shared data is correct for your specific model; repopulate data if required • Wire system as legacy system	• Turn power OFF prior to repair • Use memory card for your specific model • Insert memory card BEFORE turning power ON. Memory card may be removed after data is loaded. Turn power OFF before removing memory card • Error code will be cleared once data is loaded. Applies only to fully communicating system using Daikin Communicating thermostat

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

UNITARY DIAGNOSTIC CODES

Symptoms of Abnormal Operation (Legacy & Daikin Communicating Thermostat)	Diagnostic/Status LED Display Codes			Fault Description	Daikin Communicating Thermostat Only		Possible Causes	Corrective Actions	Notes & Cautions
	Digit 3	Digit 2	Digit 1		Message	Code			
• Air conditioner/ heat pump fails to operate • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	d	3	• Configuration Mis-match	INVALID CONFIG	d3	• Shared data sent to integrated control module does not match hardware configuration	• Verify system type (communicating or legacy) • Verify shared data is correct for your specific model; repopulate data if required • Wire system as legacy system	• Turn power OFF prior to repair • Use memory card for your specific model • Insert memory card BEFORE turning power ON. Memory card may be removed after data is loaded. Turn power OFF before removing memory card. • Error code will be cleared once data is loaded. Applies only to fully communicating system using Daikin Communicating thermostat
• Air conditioner/ heat pump fails to operate • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	d	4	• Invalid Memory Card Data	INVALID MC DATA	d4	• Shared data on memory card has been rejected	• Verify system type (communicating or legacy) • Verify shared data is correct for your specific model; repopulate data if required • Wire system as legacy system	• Turn power OFF prior to repair • Use memory card for your specific model • Insert memory card BEFORE turning power ON. Memory card may be removed after data is loaded. Turn power OFF before removing memory card. • Error code will be cleared once data is loaded
• Very long run time • Four consecutive compressor protector trips with average run time between trips greater than 3 hours • Compressor operating at high speed and outdoor fan operating at low speed • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	0	1	• Low Side Fault	LOW SIDE FAULT	01	• Low refrigerant charge • Restriction in liquid line • Indoor blower motor failure • Indoor thermostat set extremely low	• Verify refrigerant charge; adjust as needed • Check for restricted liquid line; repair/replace as needed • Check indoor blower motor; repair/replace as needed • Check indoor thermostat setting	• Turn power OFF prior to repair • Fault will clear after 30 consecutive normal cycles • Fault may be cleared by cycling 24VAC to control • Replace with correct replacement part(s)
• Compressor and outdoor fan are off • Thermostat demand is present • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	0	1	• Low Pressure Cut Out Trip	LPS OPEN	01	• Low refrigerant charge • Restriction in liquid line • Indoor blower motor failure • Indoor thermostat set extremely low	• Verify refrigerant charge; adjust as needed • Check for restricted liquid line; repair/replace as needed • Check indoor blower motor; repair/replace as needed • Check low pressure switch; repair/replace as needed • Check indoor thermostat setting	• Turn power OFF prior to repair • Replace with correct replacement part(s)

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

UNITARY DIAGNOSTIC CODES

Symptoms of Abnormal Operation (Legacy & Daikin Communicating Thermostat)	Diagnostic/Status LED Display Codes			Fault Description	Daikin Communicating Thermostat Only	Possible Causes	Corrective Actions	Notes & Cautions
	Digit 3	Digit 2	Digit 1					
<ul style="list-style-type: none"> • Compressor and outdoor fans are off • Low pressure switch trip 3 times within same thermostat demand • Thermostat demand is present • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message 	BLANK	L	1	• Low Pressure Cut Out Lockout (3 Trips)	LPS LOCKOUT	01	<ul style="list-style-type: none"> • Low refrigerant charge • Restriction in liquid line • Indoor blower motor failure • Indoor thermostat set extremely low 	<ul style="list-style-type: none"> • Verify refrigerant charge; adjust as needed • Check for restricted liquid line; repair/replace as needed • Check indoor blower motor; repair/replace as needed • Check low pressure switch; repair/replace as needed • Check indoor thermostat setting
<ul style="list-style-type: none"> • Four consecutive compressor protector trips with average run time between trips greater than 1 minute and less than 15 minutes • Low pressure and high pressure switches are closed • Integrated control module diagnostic/status LED display shows the indicated code 	BLANK	0	2	• High Side Fault	HIGH SIDE FAULT	02	<ul style="list-style-type: none"> • Blocked condenser coil • Outdoor fan not running 	<ul style="list-style-type: none"> • Check and clean condenser coil • Check outdoor fan motor; repair/replace as needed • Check outdoor fan motor wiring; repair/replace as needed • Check outdoor fan motor capacitor; replace as needed
<ul style="list-style-type: none"> • Compressor and outdoor fan are off • Thermostat demand is present • Integrated control module diagnostic/status LED display shows the indicated code 	BLANK	0	2	• High Pressure Cut Out Trip	HPS OPEN	02	<ul style="list-style-type: none"> • Blocked condenser coil • Outdoor fan not running 	<ul style="list-style-type: none"> • Check and clean condenser coil • Check outdoor fan motor; repair/replace as needed • Check outdoor fan motor wiring; repair/replace as needed • Check outdoor fan motor capacitor; replace as needed
<ul style="list-style-type: none"> • Compressor and outdoor fan are off • Low pressure switch trip 3 times within same thermostat demand • Thermostat demand is present • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message 	BLANK	L	2	• High Pressure Cut Out Lockout (3 Trips)	HPS LOCKOUT	02	<ul style="list-style-type: none"> • Blocked condenser coil • Outdoor fan not running 	<ul style="list-style-type: none"> • Check and clean condenser coil • Check outdoor fan motor; repair/replace as needed • Check outdoor fan motor wiring; repair/replace as needed • Check outdoor fan motor capacitor; replace as needed

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

UNITARY DIAGNOSTIC CODES

Symptoms of Abnormal Operation (Legacy & Daikin Communicating Thermostat)	Diagnostic/Status LED Display Codes			Fault Description	Daikin Communicating Thermostat Only		Possible Causes	Corrective Actions	Notes & Cautions
	Digit 3	Digit 2	Digit 1		Message	Code			
• Run time for last 4 cycles is less than 3 minutes each • Compressor protector has not tripped • Low pressure and high pressure switches are closed • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	0	3	• Short Cycling	CMPR SHRT CYCLE	03	• Intermittent thermostat demand • Faulty compressor relay	• Check thermostat and thermostat wiring; repair/replace as needed • Check compressor relay operation; replace control as needed	• Turn power OFF prior to repair • Fault will clear after 4 consecutive normal cycles • Fault may be cleared by cycling 24VAC to control • Replace with correct replacement part(s) • Minimum compressor run time is changed from 30 seconds to 3 minutes
• Compressor and outdoor fan are off • Compressor protector trips four consecutive times • Average run time between trips is less than 15 seconds • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	0	4	• Locked Rotor	LOCKED ROTOR	04	• Compressor bearings are seized • Failed compressor run capacitor • Faulty run capacitor wiring • Low line voltage	• Check compressor operation; repair/replace as needed • Check run capacitor; replace as needed • Check wiring; repair/replace as needed • Verify line voltage is within range on rating plate; contact local utility if out of range	• Turn power OFF prior to repair • Must clear fault by cycling 24VAC to control • Replace with correct replacement part(s)
• Compressor and outdoor fan are off for greater than 4 hours • Low pressure and high pressure switches are closed • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	0	5	• Open circuit	OPEN CIRCUIT	05	• Power is disconnected • Failed compressor protector • Compressor not properly wired to control	• Check circuit breakers and fuses • Check wiring to unit; repair/replace as needed • Check compressor; repair/replace as needed • Check compressor wiring; repair/replace as needed	• Turn power OFF prior to repair • Fault will clear after 1 normal cycle • Fault may be cleared by cycling 24VAC to control • Replace with correct replacement part(s)
• Compressor and outdoor fan are off • Low pressure and high pressure switches are closed • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message	BLANK	0	6	• Open Start Circuit	OPEN START	06	• Compressor start winding is open • Failed compressor run capacitor • Faulty run capacitor wiring • Compressor not properly wired to control • Faulty compressor wiring	• Check compressor; repair/replace as needed • Check run capacitor; replace as needed • Check wiring; repair/replace as needed	• Turn power OFF prior to repair • Fault will clear after 1 normal cycle • Fault may be cleared by cycling 24VAC to control • Replace with correct replacement part(s)

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

UNITARY DIAGNOSTIC CODES

Symptoms of Abnormal Operation (Legacy & Daikin Communicating Thermostat)	Diagnostic/Status LED Display Codes			Fault Description	Daikin Communicating Thermostat Only	Possible Causes	Corrective Actions	Notes & Cautions
	Digit 3	Digit 2	Digit 1					
<ul style="list-style-type: none"> • Compressor and outdoor fan are off • Low pressure and high pressure switches are closed • Open start circuit has been detected 4 times with 5 minute delay between each detection • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message 	BLANK	L	6	• Open Start Circuit Lockout	OPEN START LOCK	06	<ul style="list-style-type: none"> • Compressor start winding is open • Failed compressor run capacitor • Faulty run capacitor wiring • Compressor not properly wired to control • Faulty compressor wiring 	<ul style="list-style-type: none"> • Check compressor; repair/replace as needed • Check run capacitor; replace as needed • Check wiring; repair/replace as needed <ul style="list-style-type: none"> • Turn power OFF prior to repair • Must clear fault by cycling 24VAC to control • Replace with correct replacement part(s)
<ul style="list-style-type: none"> • Compressor and outdoor fan are off • Low pressure and high pressure switches are closed • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message 	BLANK	0	7	• Open Run Circuit	OPEN RUN	07	<ul style="list-style-type: none"> • Compressor run winding is open • Compressor not properly wired to control • Faulty compressor wiring 	<ul style="list-style-type: none"> • Check compressor; repair/replace as needed • Check wiring; repair/replace as needed <ul style="list-style-type: none"> • Turn power OFF prior to repair • Fault will clear after 1 normal cycle • Fault may be cycling 24VAC to control • Replace with correct replacement part(s)
<ul style="list-style-type: none"> • Compressor and outdoor fan are off • Low pressure and high pressure switches are closed • Open run circuit has been detected 4 times with 5 minute delay between each detection • Integrated control module diagnostic/status LED display shows the indicated code • Daikin Communicating thermostat displays error message 	BLANK	L	7	• Open Run Circuit Lockout	OPEN RUN LOCK	07	<ul style="list-style-type: none"> • Compressor run winding is open • Compressor not properly wired to control • Faulty compressor wiring 	<ul style="list-style-type: none"> • Check compressor; repair/replace as needed • Check wiring; repair/replace as needed <ul style="list-style-type: none"> • Turn power OFF prior to repair • Must clear fault by cycling 24VAC to control • Replace with correct replacement part(s)
<ul style="list-style-type: none"> • Air conditioner/ heat pump may appear to be operating normally • Compressor protector may be open (compressor and outdoor fan off). • Integrated control module diagnostic/status LED display shows the indicated code 	BLANK	L	8	• Low Line Voltage	LOW LINE VOLT	08	• Low line voltage	<ul style="list-style-type: none"> • Check circuit breakers and fuses • Verify unit is connected to power supply as specified on rating plate • Correct low line voltage condition; contact local utility if needed <ul style="list-style-type: none"> • Turn power OFF prior to repair • Control detects line voltage less than 185VAC • Fault will clear if line voltage increases above 185VAC

TROUBLESHOOTING INFORMATION: UNITARY DIAGNOSTIC CODES

UNITARY DIAGNOSTIC CODES

Symptoms of Abnormal Operation (Legacy & Daikin Communicating Thermostat)	Diagnostic/Status LED Display Codes			Fault Description	Daikin Communicating Thermostat Only		Possible Causes	Corrective Actions	Notes & Cautions
	Digit 3	Digit 2	Digit 1		Message	Code			
• Air conditioner/heat pump may appear to be operating normally • Compressor protector may be open (compressor and outdoor fan off). • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	H	8	• High Line Voltage	HIGH LINE VOLT	08	• High line voltage	• Correct high line voltage condition; contact local utility if needed • Verify unit is connected to power supply as specified on rating plate	• Turn power OFF prior to repair • Control detects line voltage greater than 255VAC • Fault will clear if line voltage decreases below 255VAC
• Air conditioner/heat pump may appear to be operating normally • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	0	9	• Low Pilot Voltage	LOW SECOND VOLT	09	• Control detects secondary voltage less than 18VAC • Transformer overloaded • Low line voltage	• Check fuse • Correct low secondary voltage condition • Check transformer; replace if needed	• Turn power OFF prior to repair • Fault will clear if secondary voltage rises above 21VAC • Replace with correct replacement part(s)
• Compressor is off • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	P	0	• Comp Protector Open	Not displayed	Not displayed	• No current through run or start windings • Compressor run winding is open • Compressor not properly wired to control • Faulty compressor wiring • Failed compressor run capacitor • Faulty run capacitor wiring	• Check compressor; repair/replace as needed • Check wiring; repair/replace as needed • Check run capacitor; replace as needed	• Turn power OFF prior to repair • Fault will clear after 1 normal cycle • Fault may be cleared by cycling 24VAC to control • Replace with correct replacement part(s)
• Air conditioner/heat pump may appear to be operating normally • Compressor protector may be open (compressor and outdoor fan off). • Integrated control module diagnostic/status LED display shows the indicated code	BLANK	0	8	• No Line Voltage	NO LINE VOLTAGE	08	• No Line Voltage	• Check circuit breaker to fuses • Verify unit is connected to power supply as specified on rating plate	• Turn power OFF prior to repair • Control detects line voltage less than 185VAC • Fault will clear if line voltage increases above 185VAC

THIS PAGE IS INTENTIONALLY LEFT BLANK

CUSTOMER FEEDBACK

Daikin is very interested in all product comments.

Please fill out the feedback form on the following link:

<https://daikincomfort.com/contact-us>

You can also scan the QR code on the right to be directed to the feedback page.

**PRODUCT REGISTRATION**

Thank you for your recent purchase. Though not required to get the protection of the standard warranty, registering your product is a relatively short process, and entitles you to additional warranty protection, except that failure by California and Quebec residents to register their product does not diminish their warranty rights.

For Product Registration, please register by following this link:

<https://daikincomfort.com/owner-support/product-registration>

You can also scan the QR code on the right to be directed to the Product Registration page.



Our continuing commitment to quality products may mean a change in specifications without notice.

©2013 - 2020 **DAIKIN MANUFACTURING COMPANY, L.P.**

19001 Kermier Rd. Waller, Tx 77484

www.daikincomfort.com