WALL-MOUNT FAUCET

SKU: 919045

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, sink, wall, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

TOOLS AND MATERIALS:







Plumber's Tape

Drill

Thread Sealant







Tape Measure

Level

Hex Wrench (provided)





Pipe Clamps

For Warranty information, please visit: signaturehardware.com/services/warranty

REVISED: 07/15/2020 CODES: 507676, 507673, 507672

ROTUNDA


WALL-MOUNT FAUCET

SKU: 919045

INSTALLATION


1. Prepare for installation by installing wood blocking between the two studs where the faucet will mount.

Important: Take into consideration the thickness of your finished wall materials, such as tile, when calculating measurements.

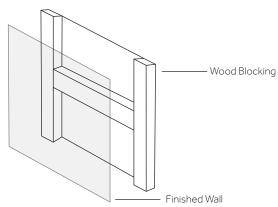


2. Mount the valve body in its prepared location. Attach the valve body to the wood blocking using pipe clamps. Use a level to ensure that the valve is mounted straight.


Important: Leave the protective plastic sleeves on the valve until your finished wall is completed.

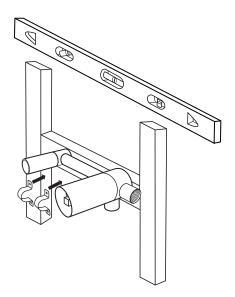

3. Attach your existing water lines to the valve body. Apply thread sealant or plumber's tape to the threaded connection to ensure a watertight seal.

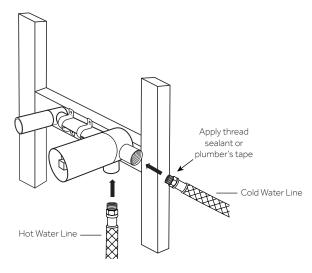

4. Once your finished wall has been completed, remove the protective plastic sleeves from the valve body.

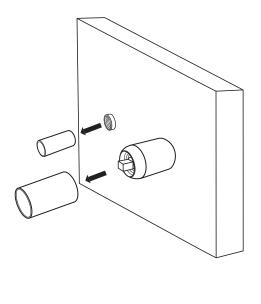


ROTUNDA


WALL-MOUNT FAUCET

SKU: 919045


5. Slide the decorative escutcheons onto the installed valve body, as shown.

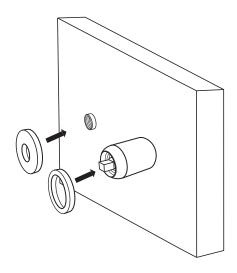

6. Attach the spout to the valve by threading it into its outlet, as shown. Apply plumber's tape or a small amount of thread sealant to the threads before attaching.

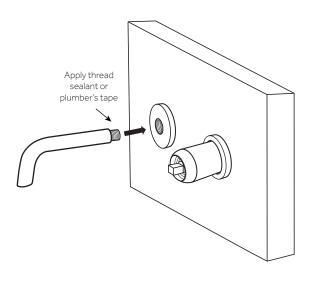

7. Attach the lever handle by sliding it onto the valve stem. Remove the screw cover located on the bottom of the handle, and tighten the set screw to secure. Reinsert the screw cover.

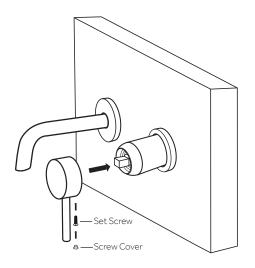

8. Once installation is complete, turn on the main water supply. Use the provided tool to remove the aerator from the spout. Turn the water on to allow any dust or loose sediment to clear the system. Allow the water to flow through the spout for approximately 60 seconds, and verify that hot and cold water are running properly. Reattach the aerator once testing is complete.

