


Victaulic® VicFlex™ Flexible Hose with Fittings for Fire Protection Service

Styles AB1, AB2, and AB10 Brackets

⚠ WARNING

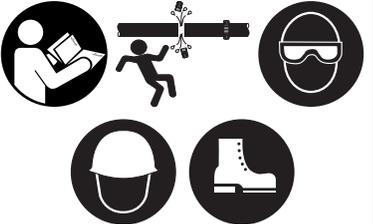

- Read and understand all instructions before attempting to install any Victaulic® VicFlex™ products.
- Always verify that the piping system has been completely depressurized and drained immediately prior to installation, removal, adjustment, or maintenance of any Victaulic® VicFlex™ products.
- Wear safety glasses, hardhat, and foot protection.

Failure to follow these instructions could result in death or serious personal injury and property damage.

- This Victaulic® VicFlex™ product shall be used only in fire protection systems that are designed and installed in accordance with current, applicable National Fire Protection Association (NFPA 13, 13D, 13R, etc.) standards, or equivalent standards, and in accordance with applicable building and fire codes. These standards and codes contain important information regarding protection of systems from freezing temperatures, corrosion, mechanical damage, etc.
- These installation instructions are intended for an experienced, trained installer. The installer shall understand the use of this product and why it was specified for the particular application.
- The installer shall understand common industry safety standards and potential consequences of improper product installation.
- It is the system designer's responsibility to verify suitability of stainless steel flexible hose for use with the intended fluid media within the piping system and external environment.
- The material specifier shall evaluate the effect of chemical composition, pH level, operating temperature, chloride level, oxygen level, and flow rate on stainless steel components to confirm system life will be acceptable for the intended service.

Failure to follow installation requirements and local and national codes and standards could compromise system integrity or cause system failure, resulting in death or serious personal injury and property damage.

Flexible Hose Listing and Approval Information

| Flexible Hose |  LISTED |  APPROVED |  6412024 |  1041 |  |
|---------------|---|---|--|---|---|
| AH1 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 |
| AH1-CC | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | - |
| AH2 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 |
| AH2-CC | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | With AB1, AB2, AB10 | - |
| AH2-300 | - | With AB1, AB2, AB10 | - | - | - |
| AH2-CC-300 | With AB2 | With AB1, AB2, AB10 | - | - | - |
| AH2-638 | - | With AB1, AB2, AB10 | - | - | - |
| AH3* | - | With AB2 | With AB2 | - | With AB1, AB2, AB10 |
| AH4* | - | With AB1, AB2, AB10 | With AB1, AB2, AB10 | - | With AB1, AB2, AB10 |

* SERIES AH3 AND AH4 – REGIONAL AVAILABILITY ONLY

NOTES: Victaulic® VicFlex™ flexible hoses are City of Los Angeles (RR5659) Approved, accepted for use by the City of New York Department of Buildings (MEA 60-05-E), and have the OSHPD Pre-Approval (OPA-2255-07). Flexible hoses are available in lengths from 31 - 72 inches/787 - 1829 mm with either ½-inch/DN15 or ¾-inch/DN20 NPT or BSPT threaded outlets.

Maximum Working Pressure Rating of Flexible Hose:

200 psi/14 Bar/1379 kPa (FM)
 175 psi/12 Bar/1207 kPa (UL)
 16 Bar/1600 kPa/232 psi (VdS and LPCB)
 1.4 MPa/1400 kPa/203 psi (CCC)
 300 psi/21 Bar/2068 kPa (FM – Series AH2-300, AH2-CC-300)
 300 psi/21 Bar/2068 kPa (UL – Series AH2-CC-300)

Maximum Ambient Temperature Rating of Flexible Hose:

225° F/107° C (UL, FM, VdS, LPCB)
 135° C/275° F (CCC – Series AH3, AH4)
 150° F/66° C (UL – Series AH2-CC-300)

Connection to Sprinkler Piping:

1 inch/DN25 NPT/BSPT (UL, FM, CCC)
 1 inch/DN25 IGS (UL, FM, VdS)
 DN20/¾ inch BSPT (VdS)
 DN32/1¼ inch BSPT (LPCB)

Minimum Bend Radius of Flexible Hose:

3 inch/76 mm (UL – Series AH1, AH1-CC, AH2-CC-300)
 2 inch/50 mm (UL – Series AH2, AH2-CC)
 7 inch/178 mm (FM – Series AH1, AH1-CC, AH2, AH2-CC, AH3, AH4, AH2-638)
 76 mm/3 inch (VdS – Series AH1, AH1-CC, AH2, AH2-CC, AH3, AH4)
 76 mm/3 inch (LPCB – Series AH1, AH1-CC, AH2, AH2-CC)
 178 mm/7 inch (CCC – Series AH1, AH2, AH3, AH4)
 8 inch/203 mm (FM – Series AH2-300, AH2-CC-300)

Maximum K-Factor of Sprinkler to be Connected to Sprinkler Reducing Nipple:


Refer to footnotes in the “Friction Loss Data” section

Maximum Number of 90° Bends Per Flexible Hose:

Refer to the “Friction Loss Data” section

Flexible Hose Bend Characteristics:

NOTE: Care shall be taken to avoid torquing the flexible hose.

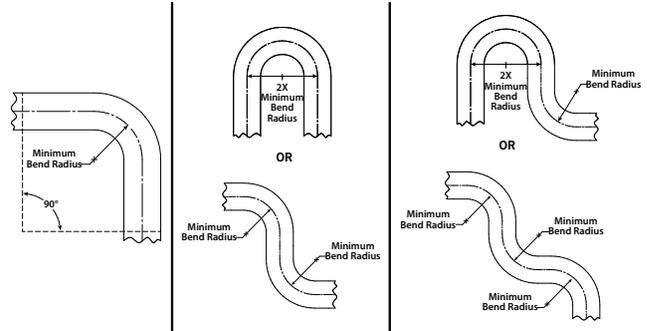

SCAN QR CODE FOR ACCESS TO THE FULL I-VICFLEX.BRG BEND RADIUS GUIDE INSTRUCTIONS ON VICTAULIC.COM

INTRODUCTION

Victaulic® VicFlex™ Sprinkler Fittings connect the sprinkler piping directly to the sprinkler using a flexible hose and fittings and are designed for use in ceiling suspension systems. Each drop assembly comes with one flexible hose, one adapter nipple or captured coupling, one sprinkler reducing nipple, and the Style AB1, AB2, or AB10 Bracket.

IMPORTANT INSTALLATION INFORMATION

- Victaulic® VicFlex™ products shall be installed according to current, applicable National Fire Protection Association (NFPA 13, 13D, 13R, etc.) standards or equivalent standards and in accordance with applicable building and fire codes. Victaulic® VicFlex™ products are intended to be installed in wet, dry, or preaction actuated systems. Deviations from these standards or alterations to Victaulic® VicFlex™ products or sprinklers will void any Victaulic warranty and will impact system integrity. Installations shall meet the provisions of the local authority having jurisdiction and local codes, as applicable, and shall comply with all design specifications.
- Drop ceiling construction shall meet the requirements of ASTM C635 and shall be installed in accordance with ASTM C636.
- Victaulic® VicFlex™ Sprinkler Fittings and Style AB1, AB2, or AB10 Brackets shall not be intermixed with other manufacturer’s flexible sprinkler products.
- **When using recessed sprinklers, the standard long elbow reducer is recommended.**
- **Refer to the specific Victaulic product publication for applications and listing information. In addition, when installing Victaulic FireLock® Automatic Sprinklers with Victaulic® VicFlex™ Sprinkler Fittings, refer to the I-40 Installation and Maintenance Instructions for details on sprinkler installation requirements. Product publications and installation instructions can be downloaded at victaulic.com.**
- Size the piping system to provide at least the minimum required flow rate for the sprinkler system.
- Per NFPA requirements, flush the system to remove foreign material. Continue to flush the system until water runs clear.
- **DO NOT** install sprinkler system piping through heating ducts.
- **DO NOT** connect sprinkler system piping to domestic hot water systems.
- **DO NOT** allow electrical wiring or other cabling to be hung or wrapped around the sprinkler piping system.
- **DO NOT** install sprinklers and sprinkler fittings where ambient conditions may fall below or exceed the maximum listed or approved temperature ratings.
- The flexible hose shall not be bent or fluctuated up-and-down or side-to-side when it is pressurized.
- **Flexible hose and fittings have limited flexibility* and are intended only to be installed with bends not less than their respective minimum bend radii. DO NOT install flexible hose in a straight configuration.**
- Protect wet piping systems from freezing temperatures.
- If construction is altered, the building owner or their representative is responsible for referencing applicable standards to determine if additional sprinklers or other system adjustments are required.
- The building owner or their representative is responsible for maintaining the fire protection system in proper operating condition.
- For minimum maintenance and inspection requirements, refer to NFPA 25 and any other applicable NFPA standards that describe the care and maintenance of sprinkler systems. In addition, the authority having jurisdiction may have additional maintenance, testing, and inspection requirements that shall be followed.



⚠ WARNING

- **Relocation of Victaulic® VicFlex™ products SHALL be performed by qualified personnel familiar with the system’s original design criteria, sprinkler listings/approvals, and state and local codes (including NFPA 13 standards).**

Failure to relocate this Victaulic® VicFlex™ product properly could affect its performance during a fire, resulting in death or serious personal injury and property damage.




* Reference UL 2443: Section 25.1

FLEXIBLE HOSE ASSEMBLY DRAWINGS - Refer to pages 14 – 19 of this manual for flexible hose technical data.

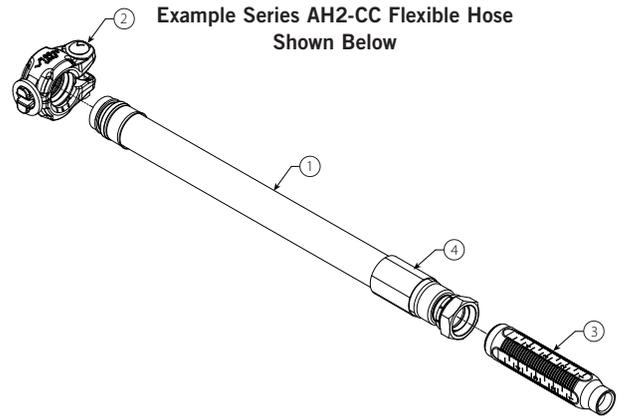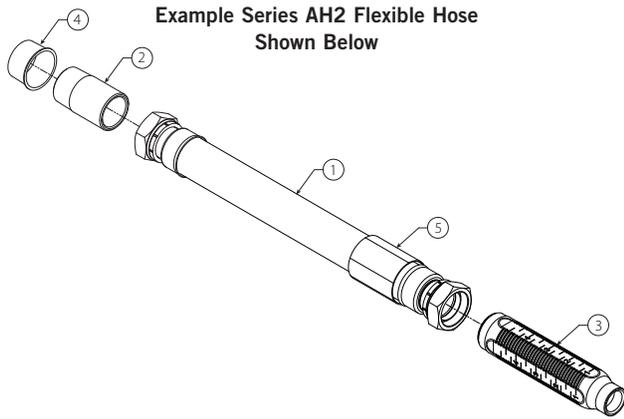

| Item | Example Series AH2 Description | Example Series AH2-CC Description |
|------|--------------------------------------|--------------------------------------|
| 1 | Flexible Hose Assembly | Flexible Hose Assembly |
| 2 | Adapter Nipple | Coupling Assembly |
| 3 | Reducer (Flexible Hose to Sprinkler) | Reducer (Flexible Hose to Sprinkler) |
| 4 | Shipping Cap | Identification Sleeve |
| 5 | Identification Sleeve | - |

BRACKET ASSEMBLY DRAWINGS - Refer to pages 8 – 12 of this manual for bracket installation instructions.

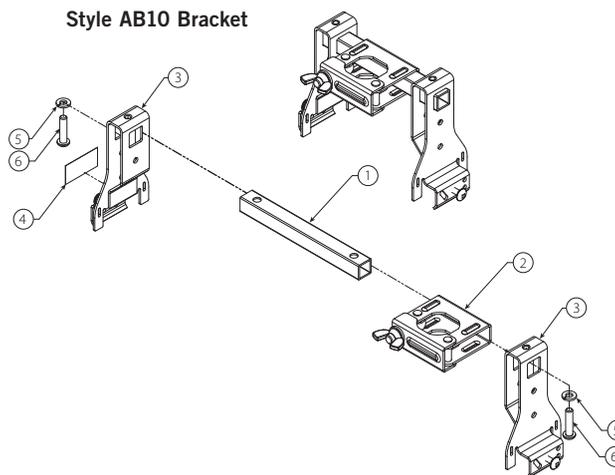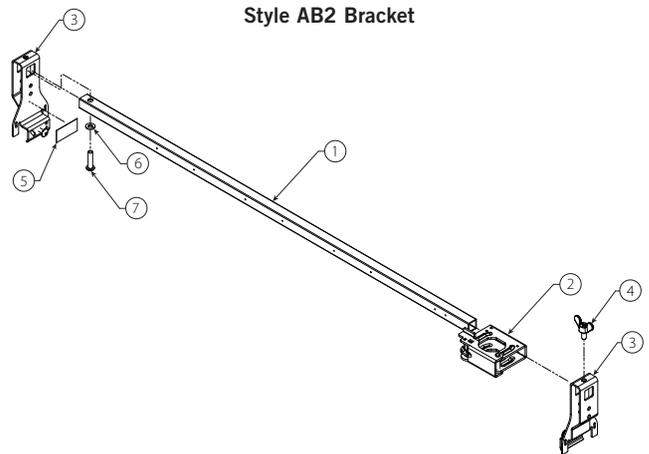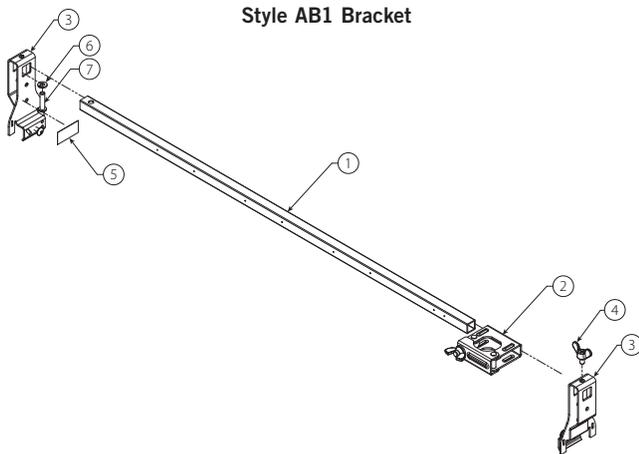

| Item | AB1 Description | AB2 Description | AB10 Description |
|------|---|---|------------------------------------|
| 1 | 24-inch/610-mm or 48-inch/1219-mm Square Bar* | 24-inch/610-mm or 48-inch/1219-mm Square Bar* | 6-inch/152-mm Square Bar* |
| 2 | Center Gate Assembly with Wing Nut | Center Gate Assembly with Adjustment Screw | Center Gate Assembly with Wing Nut |
| 3 | End Bracket with Sheet Metal Screw | End Bracket with Sheet Metal Screw | End Bracket with Sheet Metal Screw |
| 4 | Wing Screw | Wing Screw | Relocation Warning Label |
| 5 | Relocation Warning Label | Relocation Warning Label | Helical Spring-Lock Washer |
| 6 | Helical Spring-Lock Washer | Helical Spring-Lock Washer | Hex Socket Button Head Cap Screw |
| 7 | Hex Socket Button Head Cap Screw | Hex Socket Button Head Cap Screw | - |

* Reference publication 10.85 for listing information. Square bar length is in reference to nominal ceiling grid spacing.

1-INCH/DN25 IGS CONNECTION TO THE SPRINKLER PIPING USING A SERIES AH1-CC, AH2-CC, OR AH2-CC-300 FLEXIBLE HOSE

CORRECT - IGS Groove Profile



INCORRECT - Original Groove System (OGS) Groove Profile



Pipe and grooves are not shown to scale


The Style 108 Coupling of the Series AH1-CC, AH2-CC, and AH2-CC-300 shall be used **ONLY** with sprinkler piping connections that are prepared to Victaulic IGS proprietary groove specifications. **DO NOT** attempt to install the coupling on sprinkler piping connections that are prepared to any other groove specification. Refer to Victaulic publication 25.14 for the IGS groove specification, which can be downloaded at victaulic.com.

DO NOT use the Style 108 Coupling for sprinkler-piping-to-sprinkler connections. For sprinkler connections, the Style V9 shall be used.

WARNING

- The flexible hose shall not be bent or fluctuated up-and-down or side-to-side when it is pressurized for test.

Failure to follow this instruction could cause improper sprinkler operation, resulting in death or serious personal injury and property damage.

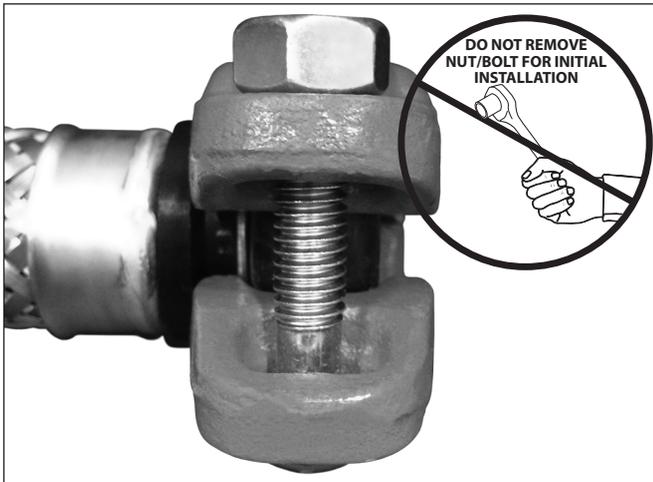

- DO NOT DISASSEMBLE THE COUPLING:** The Style 108 Coupling of the Series AH1-CC, AH2-CC, and AH2-CC-300 is designed so that the installer does not need to remove the nut, bolt, or linkage for installation. This facilitates installation by allowing the installer to directly insert the sprinkler piping's grooved end into the coupling.
- The outside surface of the sprinkler piping, between the groove and the end of the sprinkler piping, shall be generally free from indentations, projections, weld seam anomalies, and roll marks to ensure a leak-tight seal. All oil, grease, loose paint, dirt, and cutting particles shall be removed.

The sprinkler piping's outside diameter ("OD"), groove dimensions, and maximum allowable flare diameter shall be within the tolerances published in current Victaulic IGS specifications, publication 25.14, which can be downloaded at victaulic.com.

- Check the gasket to verify that it is suitable for the intended service. The color code identifies the material grade. Refer to Victaulic publication 05.01 for the color code chart, which can be downloaded at victaulic.com, and the "NOTICE" below for important gasket information.
- If any conditions listed in the "NOTICE" are met, apply a thin coat of a compatible lubricant, such as Victaulic Lubricant or silicone grease, only to the gasket sealing lips (silicone spray is not a compatible lubricant).

CAUTION

- If any conditions listed in the notice are met, a thin coat of a compatible lubricant shall be applied only to the gasket sealing lips to prevent pinching, rolling, or tearing during assembly.

Failure to use a compatible lubricant may cause gasket damage, resulting in joint leakage and property damage.

NOTICE

- Gaskets for Style 108 Coupling assemblies of Series AH1-CC, AH2-CC, and AH2-CC-300 Flexible Hoses are provided with *Vic-Plus*. Additional lubrication is not required for the initial installation of wet pipe systems that are installed at or continuously operating above 0°F/-18°C. Refer to Victaulic publication 05.03 for the *Vic-Plus* Safety Data Sheet (SDS), which can be downloaded at victaulic.com.

Supplemental lubrication is required only if any of the following conditions exist. Apply a thin coat of a compatible lubricant to the gasket sealing lips, as noted in step 3a on this page. It is not necessary to remove the gasket from the housings to apply additional lubricant to the exterior surface.

- If the installation or continuous operating temperature is below 0°F/-18°C
- If the gasket has been exposed to fluids prior to installation
- If the surface of the gasket does not have a hazy appearance
- If the gasket is being installed into a dry pipe system
- If the system will be subjected to air tests prior to being filled with water
- If the gasket was involved in a previous installation


Lubricated gaskets will not enhance sealing capabilities on adverse sprinkler piping conditions. Pipe condition and pipe preparation shall conform to the requirements listed in these product installation instructions (refer to step 2 on this page).

WARNING



- Never leave a Style 108 Coupling of a Series AH1-CC, AH2-CC, or AH2-CC-300 partially assembled on sprinkler piping. **ALWAYS TIGHTEN THE HARDWARE IMMEDIATELY.** A partially assembled coupling poses a drop or fall hazard during installation and a burst hazard during testing.
- Keep hands away from the sprinkler piping and the openings of the coupling when attempting to insert grooved mating component ends into the coupling.
- Keep hands away from coupling openings during tightening.

Failure to follow these instructions could result in death or serious personal injury and property damage.

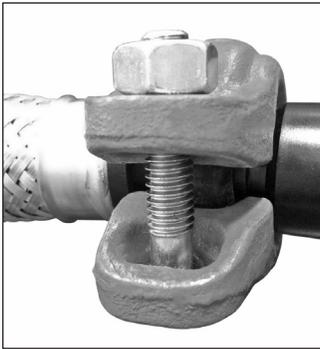


4. Assemble the joint by inserting the grooved end of the sprinkler piping into the opening of the coupling. The grooved sprinkler piping shall be inserted into the coupling until contact with the center leg of the gasket occurs. A visual check is required to verify that the coupling keys align with the groove in the sprinkler piping and engage with the spacer on the inlet end of the flexible hose.

WARNING

- The nut shall be tightened until metal-to-metal contact occurs at the bolt pads.

Failure to follow instructions for tightening coupling hardware could result in:



- Personal injury or death
- Bolt damage or fracture
- Damaged or broken bolt pads or coupling fractures
- Joint leakage and property damage
- A negative impact on system integrity

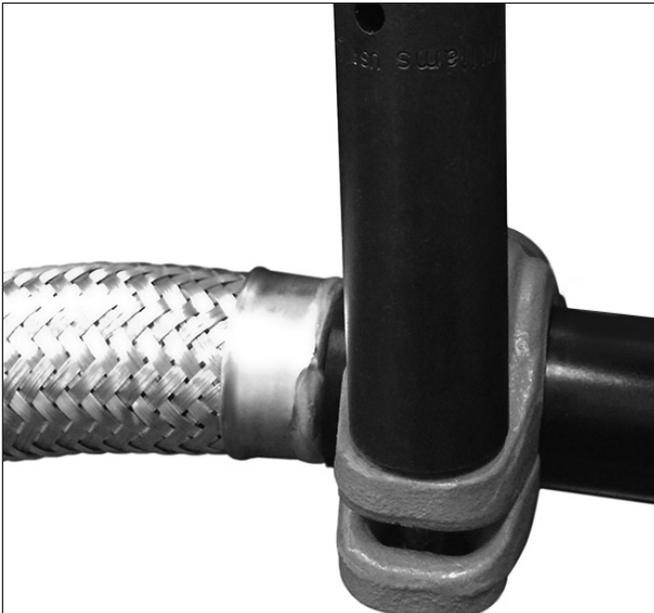

WARNING

- Visual inspection of each joint is required.
- Improperly assembled joints shall be corrected before the system is tested or placed into service.
- Any components that exhibit physical damage due to improper assembly shall be replaced before the system is tested or placed into service.

Failure to follow these instructions could cause joint failure, resulting in death or serious personal injury and property damage.

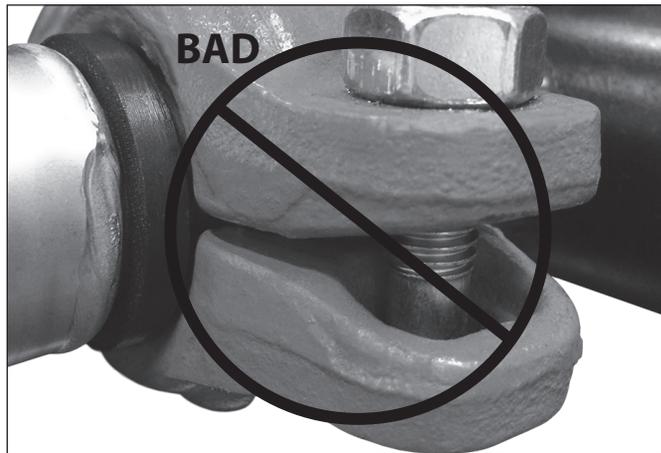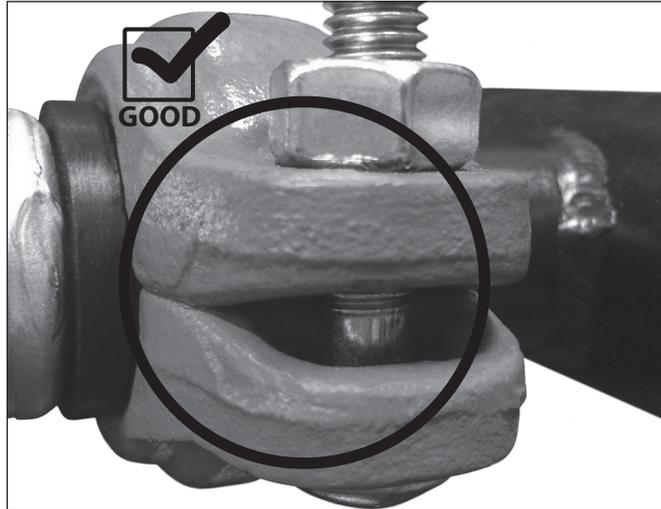

6. Visually inspect the bolt pads at each joint to verify that metal-to-metal contact is achieved, in accordance with step 5.



OVAL NECK OF BOLT SEATED PROPERLY



OVAL NECK OF BOLT NOT SEATED PROPERLY

5. Using an impact wrench or standard socket wrench with an 1¹/₁₆-inch/17-mm deep well socket, tighten the nut until metal-to-metal contact occurs at the bolt pads. Verify that the oval neck of the bolt seats properly in the bolt hole. DO NOT continue to tighten the nut after metal-to-metal bolt pad contact is achieved. **If you suspect that any hardware has been over-tightened (as indicated by a bend in the bolt, bulging of the nut at the bolt pad interface, or damage to the bolt pad, etc.), the entire coupling assembly shall be replaced immediately.** NOTE: During tightening, support the hose near the Style 108 Coupling to verify that the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose remains straight and aligned with the coupling.

NOTICE

- Refer to the instructions on page 13 for reassembly requirements.


INSTRUCTIONS FOR INITIAL USE OF A VICTAULIC® FIRELOCK™ NO. 101 90° ELBOW OR NO. 102 STRAIGHT TEE INSTALLATION-READY™ FITTING WITH A SERIES AH1-CC, AH2-CC, OR AH2-CC-300 FLEXIBLE HOSE (1-INCH/DN25 IGS CONNECTION)

NOTICE

- The following procedure applies only to 1-inch/DN25 No. 101 90° Elbows and No. 102 Straight Tees (IGS connection).
- No. 101 90° Elbows and No. 102 Straight Tees do not ship preassembled to the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose.
- The No. 101 or No. 102 does not need to be fully disassembled for initial installation onto the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose.




1. Loosen the nut of the Style 108 Coupling. Remove the Style 108 Coupling from the end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose.

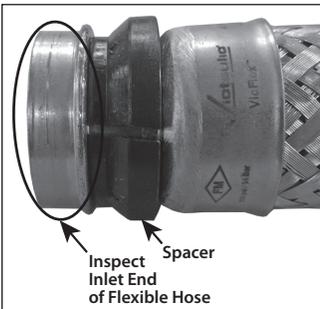


2. Inspect the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose to verify that there is no damage (dents, crushed edges, etc.). A new, Victaulic-supplied Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose shall be used if any damage is present.
3. Verify that the spacer is oriented on the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose, as shown to the left.

4. Loosen and remove the hardware from the side of the No. 101 90° Elbow or No. 102 Straight Tee that is intended to connect with the inlet of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose.

NO. 101

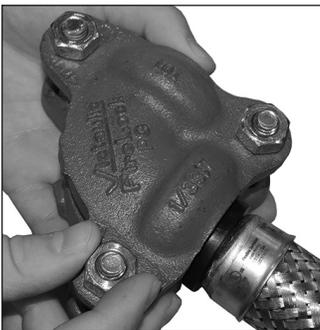

NO. 102

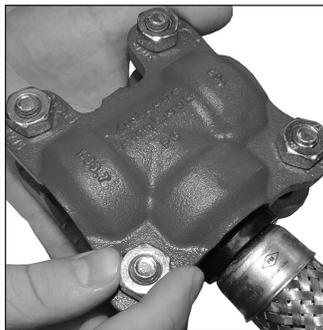

5. Insert the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose into the No. 101 90° Elbow or No. 102 Straight Tee. Verify that the gasket is seated fully in the gasket pocket of each housing and that the housings' keys engage with the spacer on the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose.
- 5a. Reinstall the two bolts and nuts that were removed in step 4.
NOTE: Verify that the oval neck of each bolt seats properly in the bolt holes. DO NOT tighten the nuts completely. The bolt pads need to be set at a gap for installation of the fitting. The nuts should be flush with the top of each bolt to provide the proper gap. Use caution when handling the fitting/hose assembly (the fitting may not be secured completely to the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose).

6. Follow the steps in the I-101/103 or I-102/104 installation instructions for the required tightening sequence. **NOTE:** During tightening, verify that the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose remains straight and aligned with the opening of the No. 101 90° Elbow or No. 102 Straight Tee. The I-101/103 or I-102/104 can be accessed and downloaded by scanning the applicable QR code below. In addition, these instructions contain important reassembly instructions and shall be referenced any time a No. 101 90° Elbow or No. 102 Straight Tee is removed from the sprinkler piping and reused.



SCAN QR CODE FOR ACCESS TO THE FULL I-101/103
INSTALLATION INSTRUCTIONS ON VICTAULIC.COM



SCAN QR CODE FOR ACCESS TO THE FULL I-102/104
INSTALLATION INSTRUCTIONS ON VICTAULIC.COM

CONNECTION TO THE SPRINKLER PIPING USING AN ADAPTER NIPPLE AND A SERIES AH1, AH2, AH3, AH4, AH2-300, OR AH2-638 FLEXIBLE HOSE

WARNING

- The flexible hose shall not be bent or fluctuated up-and-down or side-to-side when it is pressurized for test.

Failure to follow this instruction could cause improper sprinkler operation, resulting in death or serious personal injury and property damage.




1. Apply pipe joint compound or PTFE thread sealant tape to the tapered threads of the adapter nipple, in accordance with the pipe joint compound or tape manufacturer's instructions. Using a pipe wrench, tighten the adapter nipple into the sprinkler piping.



2. Confirm that the seal inside the nut of the flexible hose is in place and is free from damage prior to installation. Connect the nut to the adapter nipple, as shown above.
 - DO NOT use pipe joint compound or PTFE thread sealant tape on the threads of the adapter nipple. The seal inside the nut of the flexible hose provides the leak-proof connection.
 - Tighten the connection nut to a torque of 40ft-lbs/54 N•m (approximately ½ to ¾ of a turn past hand-tight). **NOTE:** To prevent damage to the seal, tighten the assembly by applying torque only to the connection nut and DO NOT exceed the specified torque.

INSTALLATION OF THE SPRINKLER REDUCING NIPPLE ONTO THE FLEXIBLE HOSE

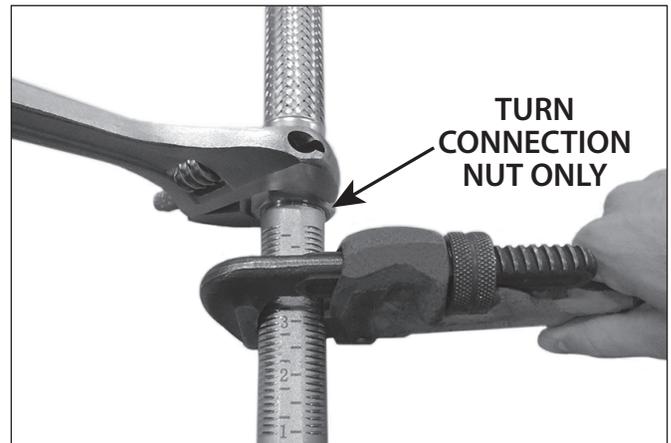

1. Confirm that the seal inside the nut of the flexible hose is in place and is free from damage prior to installation. Connect the nut to the sprinkler reducing nipple. **SHORT 90° ELBOW REDUCERS ARE TYPICALLY USED WITH CONCEALED SPRINKLERS.**
 - DO NOT use pipe joint compound or PTFE thread sealant tape on the fine threads of the sprinkler reducing nipple. The seal inside the nut of the flexible hose provides the leak-proof connection.
 - Tighten the connection nut to a torque of 40ft-lbs/54 N•m (approximately ½ to ¾ of a turn past hand-tight). **NOTE:** To prevent damage to the seal, tighten the assembly by applying torque only to the connection nut and DO NOT exceed the specified torque.


INSTALLATION OF STYLE AB1, AB2, AND AB10 BRACKETS FOR ASTM C635 CEILING SUSPENSION SYSTEMS INSTALLED IN ACCORDANCE WITH ASTM C636 STANDARDS



FOR STYLES AB1 AND AB2 BRACKETS ONLY: For adjustment purposes, the wing screw on top of the end bracket assembly can be loosened to allow the end bracket to slide on the square bar. Tighten the wing screw on top of the end bracket assembly to a torque of 36 inch-lbs/4 N•m (approximately ½ to ¾ of a turn past hand-tight) to secure the end bracket to the square bar.




1. Attach the end brackets of the Style AB1, AB2, or AB10 Bracket to the T-bar rails of an ASTM C635 ceiling suspension system installed in accordance with ASTM C636 standards. Verify that the ends of the Style AB1, AB2, or AB10 Bracket engage the rails.

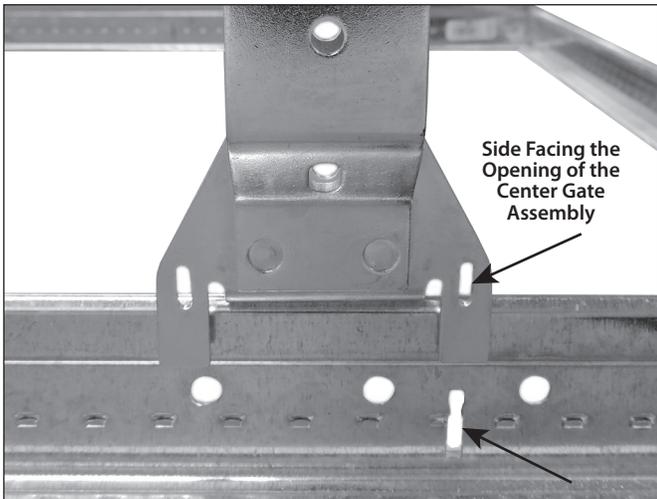


- 1a. For center-of-tile installations, align the end bracket with the center-of-tile slot of the T-bar rail (with the side facing the opening of the center gate assembly), as shown above.



- 1b. Apply light downward pressure, as shown above, to maintain the position of the end bracket flat against the T-bar rail. To secure the end brackets to the T-bar rails, tighten the pre-installed sheet metal screws using a T25 drive bit. Penetrate through the T-bar rail until the end bracket is seated fully against the T-bar rail, as shown above. **DO NOT over-tighten the screws. Over-tightening will cause the screw to strip, resulting in an unsecured bracket connection.**

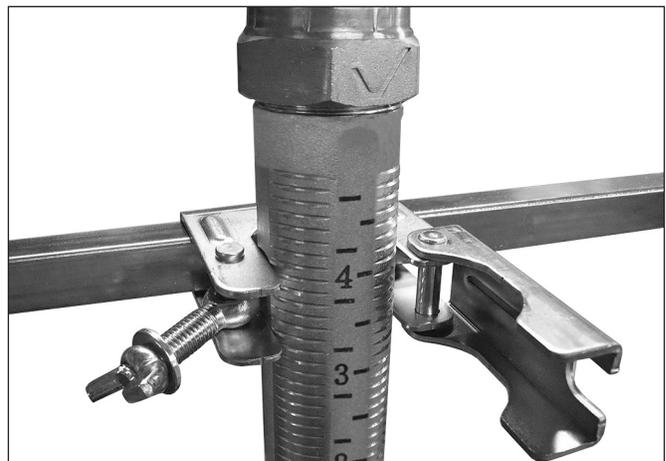


2. **FOR STYLES AB1 AND AB10 BRACKETS ONLY:** Move the center gate assembly of the Style AB1/AB10 Bracket to the desired location. Loosen the wing nut to open the center gate assembly, then slide the sprinkler reducing nipple into the center gate assembly. **NOTE:** The pivot screw of the center gate assembly is staked to resist removal of the wing nut.

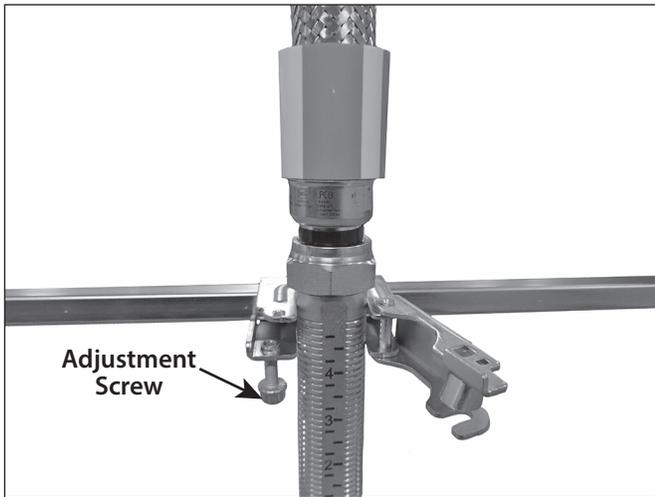


2a. FOR STYLE AB2 BRACKETS ONLY: Move the center gate assembly of the Style AB2 Bracket to the desired location. Using a T25 drive bit, loosen the adjustment screw, then push open the center gate assembly. Slide the sprinkler reducing nipple into the center gate assembly. **NOTE:** The adjustment screw of the center gate assembly is staked to resist removal.



For center-of-tile installations, position the center gate assembly between the two reference marks on the square bar, as shown above.

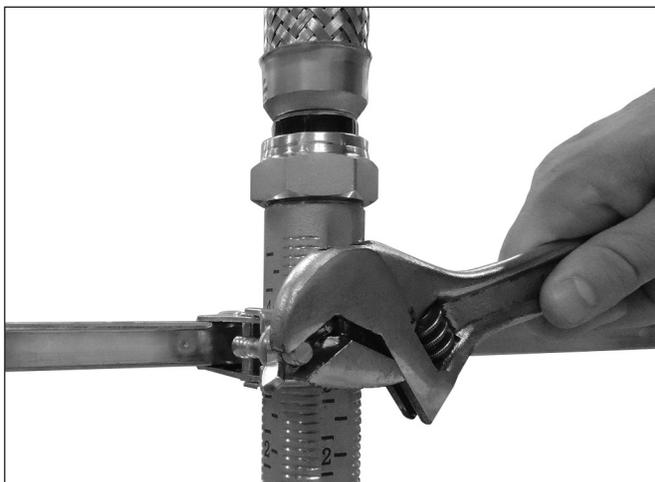

2b. FOR STYLES AB1 AND AB10 BRACKETS ONLY: Close the center gate assembly around the sprinkler reducing nipple. Swing the pivot screw and washer into the slot on the gate, and tighten the wing nut to a torque of 50 inch-lbs/6 N•m (approximately hand-tight, plus ½ to ¾ of a turn). **NOTE:** Verify that the washer is seated under the head of the wing nut.

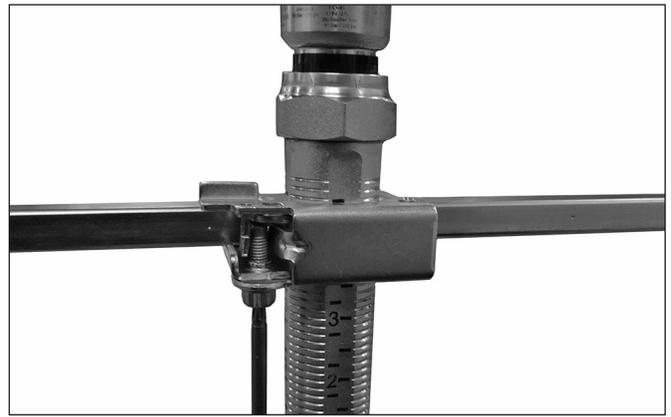

2c. FOR STYLE AB2 BRACKETS ONLY: Close the gate around the sprinkler reducing nipple. The gate will snap together tightly around the sprinkler reducing nipple. Using a T25 drive bit, tighten the adjustment screw to a torque of 75 inch-lbs/8.5 N•m (until adjustment screw makes metal-to-metal contact with bottom of gate). **NOTE:** The sprinkler reducing nipple can be adjusted after the drywall is installed by using the adjustment screw on the center gate assembly.

SPRINKLER INSTALLATION:

Install the sprinkler by following the manufacturer's installation instructions. For Victaulic sprinklers, refer to the I-40 Victaulic® FireLock™ Automatic Sprinklers Installation and Maintenance Instructions.

CEILING TILE INSTALLATION:


VicFlex Style AB1 and Style AB2 Brackets allow for the installation of most ceiling tiles after the bracket and VicFlex flexible hose have been installed. The following will aid in ceiling tile installation:

- Install bracket on main tee ceiling grid (or ceiling t-bar height that is greater than 1 ¾ inches/35 mm)
- Cut largest recommended hole, as stated in the sprinkler manufacturer's installation instructions
- Install sprinkler at its maximum extension


Ceiling tile installation shall be evaluated when utilizing concealed sprinklers in combination with ceiling tile thicknesses equal to or greater than ¾ inches/19 mm OR a ceiling t-bar height that is equal to or less than 1 ¾ inches/35 mm.

INSTALLATION FOR WOOD JOISTS/STUDS (FM ONLY FOR AB1 AND FM/UL FOR AB2)

1. Install the flexible hose into the sprinkler piping and the sprinkler reducing nipple onto the flexible hose by following the applicable instructions on pages 4 – 7.

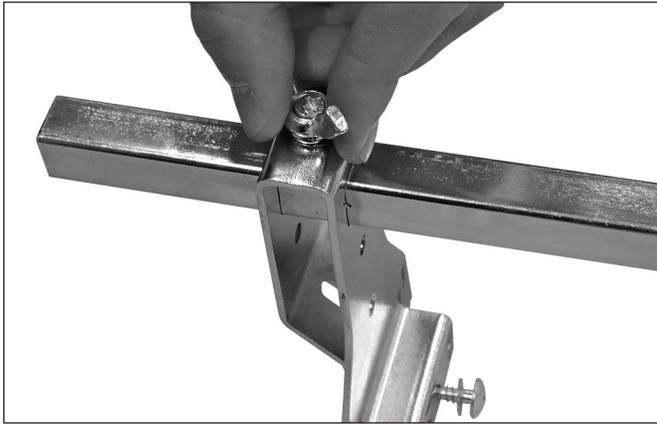

2. Loosen the wing screw of the Style AB1 or AB2 end bracket assembly.

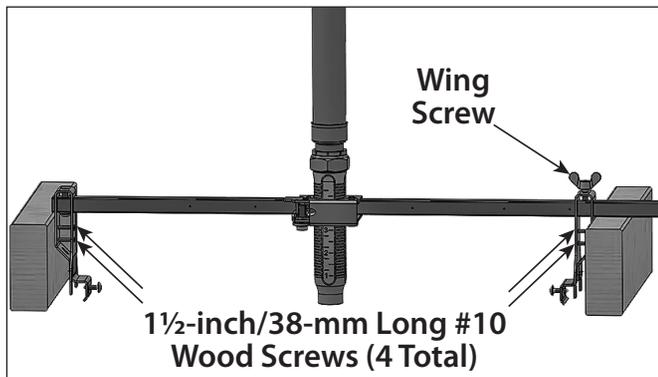


3. Place the end bracket assembly (without the wing screw) against the inside surface of the one wood joist/stud with the square bar resting on top of the wood joist/stud, as shown in the graphic above.
- 3a. Slide the end bracket assembly (with the wing screw) toward the inside surface of the opposite wood joist/stud, as shown in the graphic above.
4. Install the modified Style AB1 or AB2 Bracket to the wood joists/studs by using four, 1 1/2-inch/38-mm long #10 wood screws in the locations noted in the graphic shown above. **NOTE:** Install the top two wood screws first.
5. **Optional:** Tighten the wing screw on top of the end bracket assembly to a torque of 36 inch-lbs/4 N•m (approximately 1/2 to 3/4 of a turn past hand-tight).
6. Perform steps 2 – 2c on pages 8 – 9 to complete the installation.

NOTES:


- For wood joists/studs larger than 2 x 4, longer sprinkler reducing nipples shall be used, or one of the alternative installation methods on the following pages shall be followed.
- For the 24-inch/610-mm length Style AB2 Bracket, the maximum on-center spacing between wood joists/studs is 20 inches/508 mm.

INSTALLATION FOR ASTM C645 METAL JOISTS/ STUDS INSTALLED IN ACCORDANCE WITH ASTM C754 STANDARDS (FM ONLY FOR AB1 AND FM/UL FOR AB2)

1. Install the flexible hose into the sprinkler piping and the sprinkler reducing nipple onto the flexible hose by following the applicable instructions on pages 4 – 7.

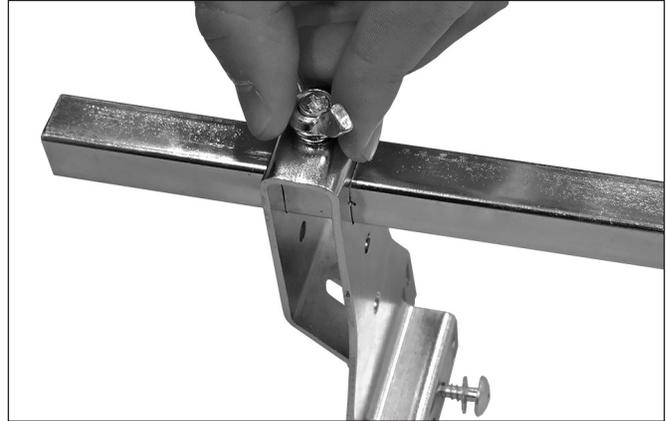

2. Loosen and remove the wing screw of the Style AB1 or AB2 end bracket assembly.

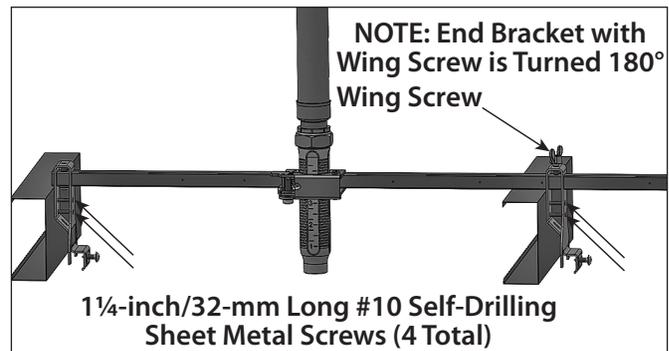


3. Rotate the end bracket assembly (side with the wing screw removed in step 2) 180°, as shown in the graphic above. Reinstall the wing screw loosely into the top of the end bracket assembly.
- 3a. Place the end bracket assembly (without the wing screw) against the outside surface of the metal joist/stud with the square bar resting on top of the metal joists/studs.
- 3b. Slide the end bracket assembly (with the wing screw) toward the outside, flat surface of the opposite metal joist/stud, as shown in the graphic above.
4. Install the modified Style AB1 or AB2 Bracket to the metal joists/studs by using four, 1 1/4-inch/32-mm long #10 self-drilling sheet metal screws in the locations noted in the graphic shown above. **NOTE:** Install the top two sheet metal screws first.
5. **Optional:** Tighten the wing screw on top of the end bracket assembly to a torque of 36 inch-lbs/4 N•m (approximately 1/2 to 3/4 of a turn past hand-tight).
6. Perform steps 2 – 2c on pages 8 – 9 to complete the installation.

NOTES:


- For metal joists/studs larger than 2 x 4, longer sprinkler reducing nipples shall be used, or one of the alternative installation methods on the following pages shall be followed.
- For the 24-inch/610-mm length Style AB2 Bracket, the maximum on-center spacing between metal joists/studs is 20 inches/508 mm.

ALTERNATIVE #1 – WOOD JOIST/STUD INSTALLATION (FM ONLY FOR AB1 AND AB2)

1. Install the flexible hose into the sprinkler piping and the sprinkler reducing nipple onto the flexible hose by following the applicable instructions on pages 4 – 7.

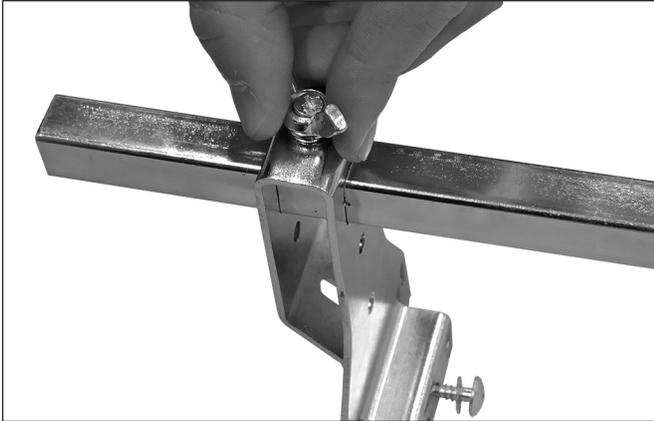


2. Loosen and remove the wing screw of the Style AB1 or AB2 end bracket assembly. Remove the end bracket assembly from the square bar.
3. Measure the distance between the wood joists/studs.
- 3a. Cut the square bar to the length needed to fit between the two wood joists/studs. This length shall be measured from the outside of the end bracket assembly to the point on the square bar that will butt against the other wood joist/stud.

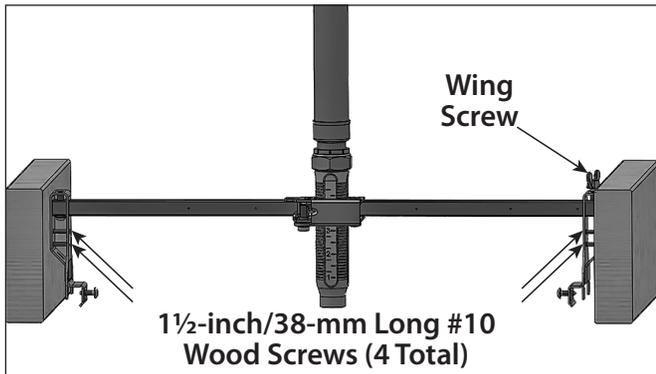


4. Place the end bracket assembly, removed in step 2, onto the end of the square bar so that the square bar is flush with the outside of the end bracket assembly. Reinstall the wing screw loosely into the top of the end bracket assembly.
5. Install the modified Style AB1 or AB2 Bracket between the wood joists/studs by using four, 1 1/2-inch/38-mm long #10 wood screws in the locations noted in the graphic shown above. **NOTE:** Install the top two wood screws first.
6. Tighten the wing screw on top of the end bracket assembly to a torque of 36 inch-lbs/4 N•m (approximately 1/2 to 3/4 of a turn past hand-tight).
7. Perform steps 2 – 2c on pages 8 – 9 to complete the installation.

ALTERNATIVE #1 – METAL JOIST/STUD INSTALLATION (FM ONLY FOR AB1 AND AB2)

1. Install the flexible hose into the sprinkler piping and the sprinkler reducing nipple onto the flexible hose by following the applicable instructions on pages 4 – 7.

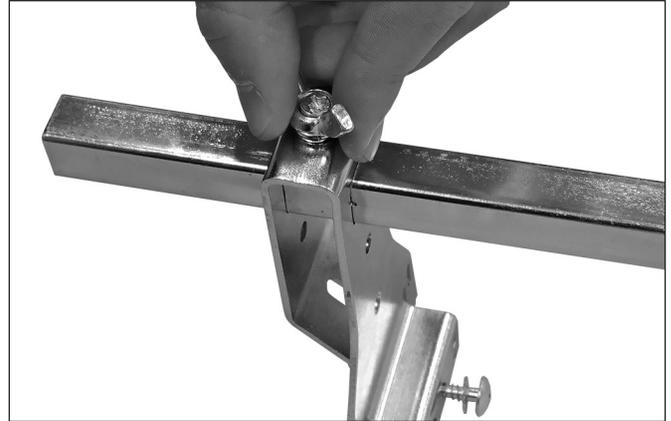


2. Loosen and remove the wing screw of the Style AB1 or AB2 end bracket assembly. Remove the end bracket assembly from the square bar.
3. Measure the distance between the metal joists/studs.
- 3a. Cut the square bar to the length needed to fit between the two metal joists/studs. This length shall be measured from the outside of the end bracket assembly to the point on the square bar that will butt against the other metal joist/stud.

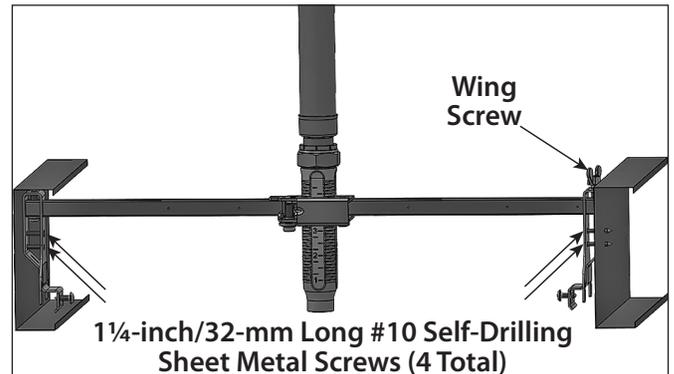


4. Place the end bracket assembly, removed in step 2, onto the end of the square bar so that the square bar is flush with the outside of the end bracket assembly. Reinstall the wing screw loosely into the top of the end bracket assembly.
5. Install the modified Style AB1 or AB2 Bracket between the metal joists/studs by using four, 1 1/4-inch/32-mm long #10 self-drilling sheet metal screws in the locations noted in the graphic shown above. **NOTE:** Install the top two sheet metal screws first.
6. Tighten the wing screw on top of the end bracket assembly to a torque of 36 inch-lbs/4 N•m (approximately 1/2 to 3/4 of a turn past hand-tight).
7. Perform steps 2 – 2c on pages 8 – 9 to complete the installation.

ALTERNATIVE #2 – WOOD JOIST/STUD INSTALLATION (FM ONLY FOR AB1 AND AB2)

1. Install the flexible hose into the sprinkler piping and the sprinkler reducing nipple onto the flexible hose by following the applicable instructions on pages 4 – 7.

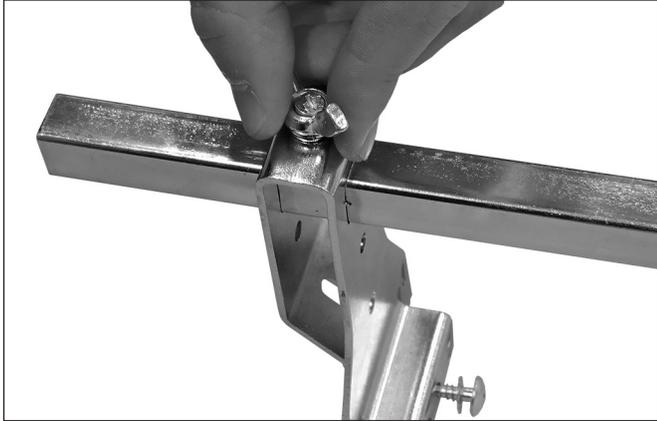


2. Loosen and remove the wing screw of the Style AB1 or AB2 end bracket assembly. Remove the end bracket assembly from the square bar.
- 2a. **FOR STYLE AB2 BRACKETS ONLY:** Remove and turn the center gate assembly 180° so that the adjustment screw is facing downward when the bracket is installed in the orientation shown below.
3. Measure the distance between the wood joists/studs.
- 3a. Cut the square bar to the length needed to fit between the two wood joists/studs. This length shall be measured from the outside of the end bracket assembly to the point on the square bar that will butt against the other wood joist/stud.

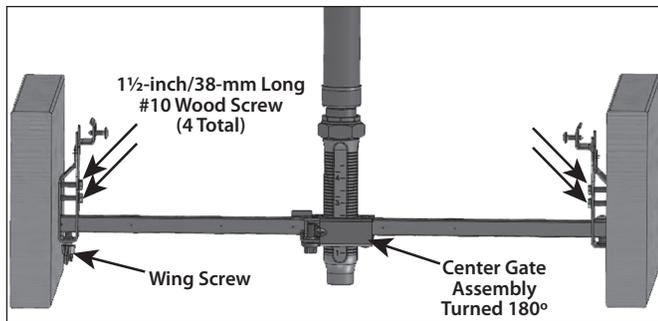


4. Place the end bracket assembly, removed in step 2, onto the end of the square bar so that the square bar is flush with the outside of the end bracket assembly. Reinstall the wing screw loosely into the top of the end bracket assembly.
5. Install the modified Style AB1 or AB2 Bracket between the wood joists/studs by using four, 1 1/2-inch/38-mm long #10 wood screws in the locations noted in the graphic shown above. **NOTE:** Install the top two wood screws first.
6. Tighten the wing screw on top of the end bracket assembly to a torque of 36 inch-lbs/4 N•m (approximately 1/2 to 3/4 of a turn past hand-tight).
7. Perform steps 2 – 2c on pages 8 – 9 to complete the installation.

ALTERNATIVE #2 – METAL JOIST/STUD INSTALLATION (FM ONLY FOR AB1 AND AB2)

1. Install the flexible hose into the sprinkler piping and the sprinkler reducing nipple onto the flexible hose by following the applicable instructions on pages 4 – 7.

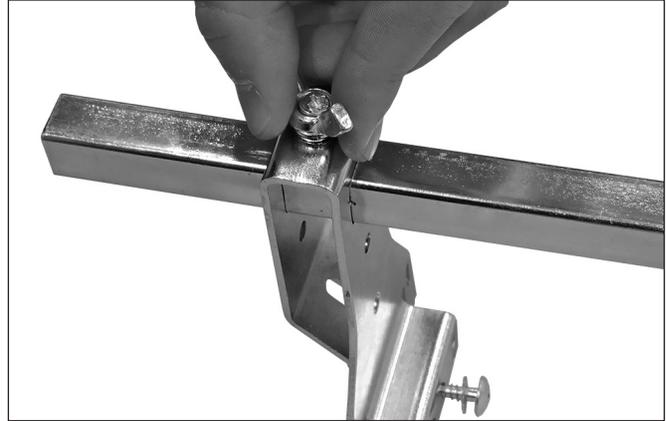

2. Loosen and remove the wing screw of the Style AB1 or AB2 end bracket assembly. Remove the end bracket assembly from the square bar.
- 2a. **FOR STYLE AB2 BRACKETS ONLY:** Remove and turn the center gate assembly 180° so that the adjustment screw is facing downward when the bracket is installed in the orientation shown below.
3. Measure the distance between the metal joists/studs.
- 3a. Cut the square bar to the length needed to fit between the two metal joists/studs. This length shall be measured from the outside of the end bracket assembly to the point on the square bar that will butt against the other metal joist/stud.

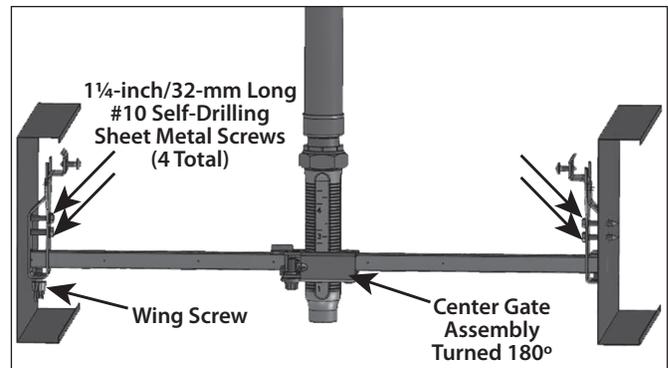

4. Place the end bracket assembly, removed in step 2, onto the end of the square bar so that the square bar is flush with the outside of the end bracket assembly. Reinstall the wing screw loosely into the top of the end bracket assembly.
5. Install the modified Style AB1 or AB2 Bracket between the metal joists/studs by using four, 1 1/4-inch/32-mm long #10 self-drilling sheet metal screws in the locations noted in the graphic shown above. **NOTE:** Install the top two sheet metal screws first.
6. Tighten the wing screw on top of the end bracket assembly to a torque of 36 inch-lbs/4 N•m (approximately 1/2 to 3/4 of a turn past hand-tight).
7. Perform steps 2 – 2c on pages 8 – 9 to complete the installation.

INSTRUCTIONS FOR REASSEMBLY OF A SERIES AH1-CC, AH2-CC, OR AH2-CC-300 FLEXIBLE HOSE

⚠ WARNING




- Always verify that the piping system has been completely depressurized and drained immediately prior to installation, removal, adjustment, or maintenance of any Victaulic products.

Failure to follow this instruction could result in death or serious personal injury and property damage.

- Verify that the system is depressurized and drained completely before attempting to remove a Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose from the sprinkler piping.
- While supporting the Style 108 Coupling, loosen the nut until backed off no further than flush with the end of the bolt. Carefully remove the flexible hose/coupling assembly from the sprinkler piping.
- Fully disassemble the Style 108 Coupling from the inlet end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose by removing the nut, bolt, gasket, and linkage from the housings. Inspect all components for any damage or wear. If any damage or wear is present, use a new Victaulic-supplied coupling assembly.
- Verify that the outside surface of the sprinkler piping, between the groove and the end of the sprinkler piping, is generally free from indentations, projections, weld seam anomalies, and roll marks to ensure a leak-tight seal. All oil, grease, loose paint, dirt, and cutting particles shall be removed.

The sprinkler piping's outside diameter ("OD"), groove dimensions, and maximum allowable flare diameter shall be within the tolerances published in current Victaulic IGS specifications, publication 25.14, which can be downloaded at victaulic.com.

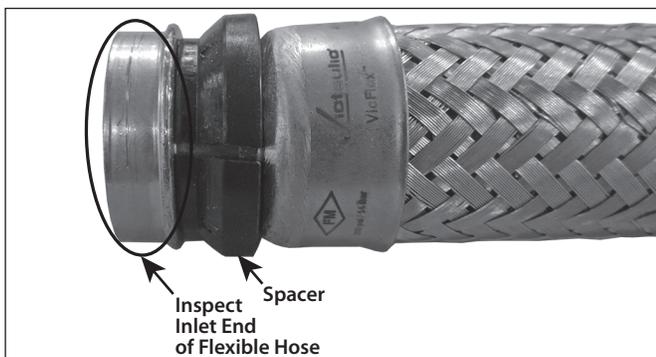

- Inspect the end of the Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose to verify that there is no damage (dents, crushed edges, etc.). A new, Victaulic-supplied Series Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose shall be used if any damage is present.
- Verify that the spacer is oriented on the inlet end of the Series Series AH1-CC, AH2-CC, or AH2-CC-300 Flexible Hose, as shown above.

⚠ CAUTION

- A thin coat of a compatible lubricant shall be used to prevent the gasket from pinching, rolling, or tearing during reassembly.

Failure to use a compatible lubricant may cause gasket damage, resulting in joint leakage and property damage.



- Apply a thin coat of a compatible lubricant, such as Victaulic Lubricant or silicone grease, to the gasket sealing lips and exterior (silicone spray is not a compatible lubricant). For gaskets that are being reused, it is normal for the gasket surface to have a hazy white appearance after it has been in service.



- Place the lubricated gasket onto the inlet end of the flexible hose, then place the Style 108 Coupling housings over the gasket. Verify that the gasket is seated fully in the gasket pocket of each housing and that the housings' keys engage with the spacer.



- Install the linkage onto the housings, as shown to the left.



- Install the bolt, and thread a nut onto the bolt.
NOTE: Verify that the oval neck of the bolt seats properly in the bolt hole. DO NOT tighten the nut completely. The bolt pads need to be set at a gap for reinstallation of the coupling. The nut should be flush with the top of the bolt to provide the proper gap.

- Follow all steps on page 5.

TECHNICAL DATA FOR FLEXIBLE HOSES

The following section provides friction loss information for flexible hoses that can be used with Style AB1, AB2, and AB10 Brackets.

WARNING

- It is the system designer's responsibility to verify suitability of stainless steel flexible hose for use with the intended fluid media within the piping system and external environment.
- The material specifier shall evaluate the effect of chemical composition, pH level, operating temperature, chloride level, oxygen level, and flow rate on stainless steel components to confirm system life will be acceptable for the intended service.

Failure to follow these instructions could cause product failure, resulting in death or serious personal injury and property damage.

SERIES AH1 AND AH1-CC FLEXIBLE HOSE FRICTION LOSS DATA (FM AND UL)

| Model | Length of Flexible Hose inches/mm | Outlet Size# inches/Metric | Equivalent Length of 1-inch/DN25 Schedule 40 Pipe feet/meters | | Maximum Number of 90° Bends§ | |
|---------------------|--------------------------------------|-------------------------------|--|---------------|---------------------------------|----|
| | | | FM* | UL‡ | FM | UL |
| AH1-31 AH1-CC-31 | 31 790 | ½ DN15 | 53.8 16.4 | 52.0 15.9 | 2 | 3 |
| | | ¾ DN20 | 44.3 13.5 | 55.0 16.8 | | |
| | | ½ DN15 | 63.7 19.4 | 63.0 19.2 | | |
| AH1-36 AH1-CC-36 | 36 915 | ¾ DN20 | 55.5 16.9 | 66.0 20.1 | 2 | 4 |
| | | ½ DN15 | 87.9 26.8 | 78.0 23.8 | | |
| | | ¾ DN20 | 83.0 25.3 | 80.0 24.4 | | |
| AH1-48 AH1-CC-48 | 48 1220 | ½ DN15 | 112.2 34.1 | 88.0 26.8 | 4 | 4 |
| | | ¾ DN20 | 110.4 33.6 | 90.0 27.4 | | |
| | | ½ DN15 | 136.5 41.6 | 112.0 34.1 | | |
| AH1-72 AH1-CC-72 | 72 1830 | ¾ DN20 | 137.9 42.0 | 118.0 36.0 | 4 | 5 |

* 7-inch/178-mm minimum bend radius (tested with standard 5 ¾-inch/146-mm length straight reducer)
 ‡ 3-inch/76-mm minimum bend radius (tested and UL Listed only with standard 5 ¾-inch/146-mm length straight reducer)
 # ¾-inch/DN20 outlet data shown with K14.0 - For other K-factor friction loss data, refer to Victaulic publication 10.95
 For the UL Listing, when the 48-inch/1220-mm length bracket is used with the Series AH1 or AH1-CC Flexible Hose, the maximum sprinkler K-factor is K8.0 and the maximum spacing is 30 inches/762 mm
 § A higher number of bends may be permitted, provided the sum of degrees is equal to or less than the total maximum allowable degrees of bends (e.g. Two 90° bends equal 180°. Three 90° bends equal 270°). The minimum bend radius and maximum number of 90° offset (bends), stated in these installation instructions, refer to the final installed condition of the hose.
 For friction loss data for elbows, refer to Victaulic publication 10.95.
NOTE: Differences in equivalent lengths are due to varying test methods, per UL 2443 and FM 1637 standards. Refer to these standards for additional information regarding friction loss test methods.
When using a No. 101 90° Elbow or a No. 102 Straight Tee in place of a Style 108 Coupling on the end of a Series AH1-CC Flexible Hose, the friction loss data shown above shall be added to the No. 101 or No. 102 friction loss data published in Victaulic publication 10.54.

SERIES AH2 AND AH2-CC FLEXIBLE HOSE FRICTION LOSS DATA (FM AND UL)

| Model | Length of Flexible Hose inches/mm | Outlet Size# inches/Metric | Equivalent Length of 1-inch/DN25 Schedule 40 Pipe feet/meters | | Maximum Number of 90° Bends§ | |
|---------------------|--------------------------------------|-------------------------------|--|--------------|---------------------------------|----|
| | | | FM* | UL‡ | FM | UL |
| AH2-31 AH2-CC-31 | 31 790 | ½ DN15 | 13.8 4.2 | 16.0 4.9 | 2 | 4 |
| | | ¾ DN20 | 14.9 4.5 | 18.0 5.5 | | |
| | | ½ DN15 | 16.6 5.1 | 21.0 6.4 | | |
| AH2-36 AH2-CC-36 | 36 915 | ¾ DN20 | 19.4 5.9 | 23.0 7.0 | 2 | 5 |
| | | ½ DN15 | 23.4 7.1 | 32.0 9.8 | | |
| | | ¾ DN20 | 30.3 9.2 | 37.0 11.3 | | |
| AH2-48 AH2-CC-48 | 48 1220 | ½ DN15 | 30.2 9.2 | 46.0 14.0 | 4 | 10 |
| | | ¾ DN20 | 33.9 10.3 | 46.0 14.0 | | |
| | | ½ DN15 | 37.0 11.3 | 55.0 16.8 | | |
| AH2-72 AH2-CC-72 | 72 1830 | ¾ DN20 | 37.5 11.4 | 60.0 18.3 | 4 | 12 |

* 7-inch/178-mm minimum bend radius (tested with standard 5 ¾-inch/146-mm length straight reducer)
 ‡ 2-inch/50-mm minimum bend radius (tested and UL Listed only with standard 5 ¾-inch/146-mm length straight reducer)
 # ¾-inch/DN20 outlet data shown with K14.0 - For other K-factor friction loss data, refer to Victaulic publication 10.85
 For the UL Listing, when the 48-inch/1220-mm length bracket is used with the Series AH2 or AH2-CC Flexible Hose, the maximum sprinkler K-factor is K8.0 and the maximum spacing is 30 inches/762 mm
 § A higher number of bends may be permitted, provided the sum of degrees is equal to or less than the total maximum allowable degrees of bends (e.g. Two 90° bends equal 180°. Three 90° bends equal 270°). The minimum bend radius and maximum number of 90° offset (bends), stated in these installation instructions, refer to the final installed condition of the hose.
 For friction loss data for elbows, refer to Victaulic publication 10.85.
NOTE: Differences in equivalent lengths are due to varying test methods, per UL 2443 and FM 1637 standards. Refer to these standards for additional information regarding friction loss test methods.
When using a No. 101 90° Elbow or a No. 102 Straight Tee in place of a Style 108 Coupling on the end of a Series AH2-CC Flexible Hose, the friction loss data shown above shall be added to the No. 101 or No. 102 friction loss data published in Victaulic publication 10.54.

SERIES AH2-300 AND AH2-CC-300 FLEXIBLE HOSE FRICTION LOSS DATA (FM)

| Model | Length of Flexible Hose inches/mm | Outlet Size# inches/Metric | Equivalent Length of 1-inch/DN25 Schedule 40 Pipe feet/meters* | Maximum Number of 90° Bends§ |
|-----------------------------|--------------------------------------|-------------------------------|---|---------------------------------|
| AH2-300-31 AH2-CC-300-31 | 31 790 | 1/2 DN15 | 13.8 4.2 | 2 |
| | | 3/4 DN20 | 14.9 4.5 | |
| AH2-300-36 AH2-CC-300-36 | 36 915 | 1/2 DN15 | 16.6 5.1 | 2 |
| | | 3/4 DN20 | 19.4 5.9 | |
| AH2-300-48 AH2-CC-300-48 | 48 1220 | 1/2 DN15 | 23.4 7.1 | 3 |
| | | 3/4 DN20 | 30.3 9.2 | |
| AH2-300-60 AH2-CC-300-60 | 60 1525 | 1/2 DN15 | 30.2 9.2 | 4 |
| | | 3/4 DN20 | 33.9 10.3 | |
| AH2-300-72 AH2-CC-300-72 | 72 1830 | 1/2 DN15 | 37.0 11.3 | 4 |
| | | 3/4 DN20 | 37.5 11.4 | |

* 8-inch/203-mm minimum bend radius (tested with standard 5 3/4-inch/146-mm length straight reducer)
 # 3/4-inch outlet data shown with K14.0 - For other K-factor friction loss data, refer to Victaulic publication 10.84
 § A higher number of bends may be permitted, provided the sum of degrees is equal to or less than the total maximum allowable degrees of bends (e.g. Two 90° bends equal 180°. Three 90° bends equal 270°). The minimum bend radius and maximum number of 90° offset (bends), stated in these installation instructions, refer to the final installed condition of the hose.
 For friction loss data for elbows, refer to Victaulic publication 10.84.
NOTE: Differences in equivalent lengths are due to varying test methods, per the FM 1637 standard. Refer to this standard for additional information regarding friction loss test methods.

SERIES AH2-CC-300 FLEXIBLE HOSE FRICTION LOSS DATA (UL)

| Model | Length of Flexible Hose inches/mm | Outlet Size# inches/Metric | Equivalent Length of 1-inch/DN25 Schedule 40 Pipe feet/meters* | Maximum Number of 90° Bends§ |
|---------------|--------------------------------------|-------------------------------|---|---------------------------------|
| AH2-CC-300-31 | 31 790 | 1/2 DN15 | 17.0 5.2 | 3 |
| | | 3/4 DN20 | 16.0 4.9 | |
| AH2-CC-300-36 | 36 915 | 1/2 DN15 | 25.0 7.6 | 4 |
| | | 3/4 DN20 | 22.0 6.7 | |
| AH2-CC-300-48 | 48 1220 | 1/2 DN15 | 30.0 9.1 | 4 |
| | | 3/4 DN20 | 28.0 8.5 | |
| AH2-CC-300-60 | 60 1525 | 1/2 DN15 | 32.0 9.8 | 4 |
| | | 3/4 DN20 | 31.0 9.4 | |
| AH2-CC-300-72 | 72 1830 | 1/2 DN15 | 40.0 12.2 | 5 |
| | | 3/4 DN20 | 36.0 11.0 | |

* 8-inch/203-mm minimum bend radius (tested with standard 5 3/4-inch/146-mm length straight reducer)
 # 3/4-inch outlet data shown with K14.0 - For other K-factor friction loss data, refer to Victaulic publication 10.84
 § A higher number of bends may be permitted, provided the sum of degrees is equal to or less than the total maximum allowable degrees of bends (e.g. Two 90° bends equal 180°. Three 90° bends equal 270°). The minimum bend radius and maximum number of 90° offset (bends), stated in these installation instructions, refer to the final installed condition of the hose.
 For friction loss data for elbows, refer to Victaulic publication 10.84.
NOTE: Differences in equivalent lengths are due to varying test methods, per the UL 2443 standard. Refer to these standards for additional information regarding friction loss test methods.

SERIES AH2-638 FLEXIBLE HOSE FRICTION LOSS DATA (FM)

| Model | Length of Flexible Hose inches/mm | Outlet Size# inches/Metric | Equivalent Length of 1-inch/DN25 Schedule 40 Pipe feet/meters* | Maximum Number of 90° Bends |
|---------|--------------------------------------|-------------------------------|---|--------------------------------|
| AH2-638 | 28 711 | 1/2 DN15 | 22.2 6.8 | 1 |
| | | 3/4 DN20 | 13.1 3.9 | |

* 7-inch/178-mm minimum bend radius (tested with standard 5 3/4-inch/146-mm length straight reducer)
 # 3/4-inch outlet data shown with K14.0 - For other K-factor friction loss data, refer to Victaulic publication 10.85
 For friction loss data for elbows, refer to Victaulic publication 10.85.
NOTE: Differences in equivalent lengths are due to varying test methods, per the FM 1637 standard. Refer to this standard for additional information regarding friction loss test methods.



SERIES AH3 FLEXIBLE HOSE FRICTION LOSS DATA (FM) – REGIONAL AVAILABILITY ONLY

| Model | Length of Flexible Hose inches/mm | Outlet Size# inches/Metric | Equivalent Length of 1-inch/DN25 Schedule 40 Pipe feet/meters* | Maximum Number of 90° Bends§ |
|--------|--------------------------------------|-------------------------------|---|---------------------------------|
| AH3-31 | 31 790 | 1/2 DN15 | 33.8 10.3 | 2 |
| | | 3/4 DN20 | 34.2 10.4 | |
| AH3-36 | 36 915 | 1/2 DN15 | 43.0 13.1 | 2 |
| | | 3/4 DN20 | 44.1 13.4 | |
| AH3-48 | 48 1220 | 1/2 DN15 | 65.2 19.9 | 3 |
| | | 3/4 DN20 | 67.8 20.7 | |
| AH3-60 | 60 1525 | 1/2 DN15 | 87.4 26.6 | 4 |
| | | 3/4 DN20 | 91.6 27.9 | |
| AH3-72 | 72 1830 | 1/2 DN15 | 109.7 33.4 | 4 |
| | | 3/4 DN20 | 115.5 35.2 | |

* 7-inch/178-mm minimum bend radius (tested with standard 5 3/4-inch/146-mm length straight reducer)
 # 3/4-inch/DN20 outlet data shown with K14.0 - For other K-factor friction loss data, refer to Victaulic publication 10.94
 § A higher number of bends may be permitted, provided the sum of degrees is equal to or less than the total maximum allowable degrees of bends (e.g. Two 90° bends equal 180°. Three 90° bends equal 270°). The minimum bend radius and maximum number of 90° offset (bends), stated in these installation instructions, refer to the final installed condition of the hose.
 For friction loss data for elbows, refer to Victaulic publication 10.94.
 NOTE: Differences in equivalent lengths are due to varying test methods, per the FM 1637 standard. Refer to this standard for additional information regarding friction loss test methods.

SERIES AH4 FLEXIBLE HOSE FRICTION LOSS DATA (FM AND CCC) – REGIONAL AVAILABILITY ONLY

| Model | Length of Flexible Hose inches/mm | Outlet Size# inches/Metric | Equivalent Length of 1-inch/DN25 Schedule 40 Pipe feet/meters* | Maximum Number of 90° Bends§ |
|--------|--------------------------------------|-------------------------------|---|---------------------------------|
| AH4-31 | 31 790 | 1/2 DN15 | 20.6 6.3 | 2 |
| | | 3/4 DN20 | 16.3 5.0 | |
| AH4-36 | 36 915 | 1/2 DN15 | 29.7 9.0 | 2 |
| | | 3/4 DN20 | 21.8 6.7 | |
| AH4-48 | 48 1220 | 1/2 DN15 | 27.5 8.3 | 3 |
| | | 3/4 DN20 | 28.3 8.6 | |
| AH4-60 | 60 1525 | 1/2 DN15 | 35.7 10.9 | 4 |
| | | 3/4 DN20 | 34.9 10.6 | |
| AH4-72 | 72 1830 | 1/2 DN15 | 45.9 14.0 | 4 |
| | | 3/4 DN20 | 41.5 12.6 | |

* 7-inch/178-mm minimum bend radius (tested with standard 5 3/4-inch/146-mm length straight reducer)
 # 3/4-inch/DN20 outlet data shown with K14.0 - For other K-factor friction loss data, refer to Victaulic publication 10.82
 § A higher number of bends may be permitted, provided the sum of degrees is equal to or less than the total maximum allowable degrees of bends (e.g. Two 90° bends equal 180°. Three 90° bends equal 270°). The minimum bend radius and maximum number of 90° offset (bends), stated in these installation instructions, refer to the final installed condition of the hose.
 For friction loss data for elbows, refer to Victaulic publication 10.82.
 NOTE: Differences in equivalent lengths are due to varying test methods, per the FM 1637 standard. Refer to this standard for additional information regarding friction loss test methods.

Series AH4 Flexible Hose Assembly Model Number Correlation

| Series AH4 Hose Assembly Designation | Outlet Size | Series AQB Hose Assembly Designation | Series AFB Hose Assembly Designation |
|--------------------------------------|-------------|--------------------------------------|--------------------------------------|
| AH4-31 | 1/2 | AQB31HLD | AFB31HLD |
| | 3/4 | AQB31TLD | AFB31TLD |
| AH4-36 | 1/2 | AQB36HLD | AFB36HLD |
| | 3/4 | AQB36TLD | AFB36TLD |
| AH4-48 | 1/2 | AQB48HLD | AFB48HLD |
| | 3/4 | AQB48TLD | AFB48TLD |
| AH4-60 | 1/2 | AQB60HLD | AFB60HLD |
| | 3/4 | AQB60TLD | AFB60TLD |
| AH4-72 | 1/2 | AQB72HLD | AFB72HLD |
| | 3/4 | AQB72TLD | AFB72TLD |

SERIES AH1, AH1-CC, AH2, AH2-CC, AH3*, AND AH4 FLEXIBLE HOSE FRICTION LOSS DATA (VDS)

| Length of Flexible Hose mm/inches | Outlet Size Metric/inches | Maximum Number of 90° Bends at 76.2-mm/3-inch Bend Radius | Series AH1 and AH1-CC | Series AH2 and AH2-CC | Series AH3* | Series AH4 |
|-----------------------------------|---------------------------|---|--|--|--|--|
| | | | Equivalent Length of Steel Pipe in meters/feet According to EN 10255 DN 20 (26,9 x 2,65) | Equivalent Length of Steel Pipe in meters/feet According to EN 10255 DN 25 (33,7 x 3,25) | Equivalent Length of Steel Pipe in meters/feet According to EN 10255 DN 20 (26,9 x 2,65) | Equivalent Length of Steel Pipe in meters/feet According to EN 10255 DN 25 (33,7 x 3,25) |
| 790 31 | DN15/1/2 | 3 | 4.0 | 5.5 | 5.9 | 5.5 |
| | DN20/3/4 | | 12.9 | 18.0 | 19.4 | 18.0 |
| 915 36 | DN15/1/2 | 3 | 4.6 | 6.4 | 6.9 | 6.4 |
| | DN20/3/4 | | 15.0 | 21.0 | 22.5 | 21.0 |
| 1220 48 | DN15/1/2 | 3 | 6.1 | 8.5 | 9.2 | 8.5 |
| | DN20/3/4 | | 20.0 | 27.9 | 30.0 | 27.9 |
| 1525 60 | DN15/1/2 | 4 | 7.6 | 10.7 | 11.4 | 10.7 |
| | DN20/3/4 | | 25.0 | 35.1 | 37.5 | 35.1 |
| 1830 72 | DN15/1/2 | 4 | 9.2 | 12.8 | 13.7 | 12.8 |
| | DN20/3/4 | | 30.0 | 42.0 | 45.0 | 42.0 |

* SERIES AH3 – REGIONAL AVAILABILITY ONLY

Series AH1, AH1-CC, AH2, AH2-CC, AH3, and AH4 Flexible Hoses are VdS Approved for use in wet systems only.

Only VdS Approved pendent spray sprinklers of 10-mm, 15-mm, and 20-mm nominal diameters with K-factors of 57, 80, and 115 shall be used.

Tested with a 5 3/4-inch/146-mm length straight reducer.

When using a No. 101 90° Elbow or a No. 102 Straight Tee in place of a Style 108 Coupling on the end of a Series AH1-CC or AH2-CC Flexible Hose, the friction loss data shown above shall be added to the No. 101 or No. 102 friction loss data published in Victaulic publication 10.54.

The VdS Approval applies only for use with the following manufacturers' suspended ceiling systems:

| Ceiling Suspension Systems for Styles AB1, AB2, and AB10 Brackets | | | | | |
|---|---------|----------------|----------|---------------|------------------|
| AMF | Dipling | Gema-Armstrong | Lafarge | Richter | Suckow & Fischer |
| Armstrong | Durlum | Hilti | Lindner | Rigips | USG Donn |
| Chicago Metallic | Geipel | Knauf | Odenwald | Rockfon Pagos | |

Other manufacturers' ceiling systems, with comparable or better performance, can be considered for approval. VdS standards for safety include, but are not limited to: pressure cycling, corrosion resistance, flow characteristics, vibration resistance, leakage, mechanical strength, and hydrostatic strength. Differences in equivalent lengths are due to varying test methods, per FM 1637 and VdS standards. Refer to these standards for additional information regarding friction loss test methods.

SERIES AH1, AH1-CC, AH2, AND AH2-CC FLEXIBLE HOSE FRICTION LOSS DATA (LPCB)

| Length of Flexible Hose mm/inches | Outlet Size Metric/inches | Maximum Number of 90° Bends at 76.2-mm/3-inch Bend Radius | Series AH1 and AH1-CC* | Series AH2 and AH2-CC** |
|-----------------------------------|---------------------------|---|--|--|
| | | | Equivalent Length of Steel Pipe in meters/feet According to EN 10255 DN 25 (33,7 x 3,25) | Equivalent Length of Steel Pipe in meters/feet According to EN 10255 DN 25 (33,7 x 3,25) |
| 790 31 | DN15/1/2 | 2 | 13.6 | 1.8 |
| | DN20/3/4 | | 44.6 | 6.0 |
| 915 36 | DN15/1/2 | 3 | 16.9 | 3.6 |
| | DN20/3/4 | | 55.4 | 11.9 |
| 1220 48 | DN15/1/2 | 3 | 19.9 | 4.3 |
| | DN20/3/4 | | 65.1 | 14.0 |
| 1525 60 | DN15/1/2 | 3 | 24.5 | 4.1 |
| | DN20/3/4 | | 80.2 | 13.6 |
| 1830 72 | DN15/1/2 | 3 | 28.5 | 5.5 |
| | DN20/3/4 | | 93.4 | 18.1 |

* Hose Type 2 and Size: DN20/0.8-inch Nominal ID, per LPS 1261

** Hose Type 2 and Size: DN25/1-inch Nominal ID, per LPS 1261

Series AH1 (104I/0I), Series AH2 (104I/02), Series AH1-CC (104I/03), and Series AH2-CC (104I/04) Flexible Hoses are LPCB Approved for use in wet systems only.

Only LPCB Approved pendent spray sprinklers of 10-mm, 15-mm, and 20-mm nominal diameters with K-factors of 57 and 80 shall be used.

Tested with a 5 3/4-inch/146-mm length straight reducer.

When using a No. 101 90° Elbow or a No. 102 Straight Tee in place of a Style 108 Coupling on the end of a Series AH1-CC or AH2-CC Flexible Hose, the friction loss data shown above shall be added to the No. 101 or No. 102 friction loss data published in Victaulic publication 10.54.

SERIES AH1 FLEXIBLE HOSE FRICTION LOSS DATA (CCC)

| Model | Length of Flexible Hose mm/inches | Equivalent Length – meters/feet | |
|--------|--------------------------------------|---------------------------------|--------------------|
| | | Straight Configuration | Bend Configuration |
| AH1-31 | 790 | 4.78 | 5.80 |
| | 31 | 15.7 | 19.0 |
| AH1-36 | 915 | 5.59 | 10.15 |
| | 36 | 18.3 | 33.3 |
| AH1-48 | 1120 | 9.75 | 16.25 |
| | 48 | 32.0 | 53.3 |
| AH1-60 | 1525 | 12.15 | 22.94 |
| | 60 | 39.9 | 75.3 |
| AH1-72 | 1830 | 14.26 | 25.98 |
| | 72 | 46.8 | 85.2 |

178-mm/7-inch minimum bend radius
Friction loss data is in accordance with GB5135.16. Corresponding flow rate is 113.55 liters per minute/30 gallons per minute.

SERIES AH2 FLEXIBLE HOSE FRICTION LOSS DATA (CCC)

| Model | Length of Flexible Hose mm/inches | Equivalent Length – meters/feet | |
|--------|--------------------------------------|---------------------------------|--------------------|
| | | Straight Configuration | Bend Configuration |
| AH2-31 | 790 | 0.87 | 2.70 |
| | 31 | 2.9 | 8.9 |
| AH2-36 | 915 | 1.00 | 2.80 |
| | 36 | 3.3 | 9.2 |
| AH2-48 | 1120 | 2.23 | 4.66 |
| | 48 | 7.3 | 15.3 |
| AH2-60 | 1525 | 2.90 | 6.50 |
| | 60 | 9.5 | 21.3 |
| AH2-72 | 1830 | 3.31 | 7.16 |
| | 72 | 10.9 | 23.5 |

178-mm/7-inch minimum bend radius

SERIES AH3 FLEXIBLE HOSE FRICTION LOSS DATA (CCC) – REGIONAL AVAILABILITY ONLY

| Model | Length of Flexible Hose mm/inches | Equivalent Length – meters/feet | |
|--------|--------------------------------------|---------------------------------|--------------------|
| | | Straight Configuration | Bend Configuration |
| AH3-31 | 790 | 5.19 | 7.91 |
| | 31 | 17.0 | 26.0 |
| AH3-36 | 915 | 6.17 | 9.92 |
| | 36 | 20.2 | 32.6 |
| AH3-48 | 1120 | 8.93 | 14.55 |
| | 48 | 29.3 | 47.7 |
| AH3-60 | 1525 | 11.10 | 20.03 |
| | 60 | 36.4 | 65.7 |
| AH3-72 | 1830 | 13.43 | 23.64 |
| | 72 | 44.1 | 77.6 |

178-mm/7-inch minimum bend radius

Victaulic® VicFlex™ Flexible Hose with Fittings for Fire Protection Service

Styles AB1, AB2, and AB10 Brackets

For complete contact information, visit victaulic.com

I-VICFLEX.AB1/AB2/AB10 6829 REV Q UPDATED 03/2020 Z000AB1000

VICTAULIC AND VICFLEX ARE REGISTERED TRADEMARKS OR TRADEMARKS OF VICTAULIC COMPANY AND/OR ITS AFFILIATED ENTITIES
IN THE UNITED STATES AND/OR OTHER COUNTRIES. © 2020 VICTAULIC COMPANY. ALL RIGHTS RESERVED.

