
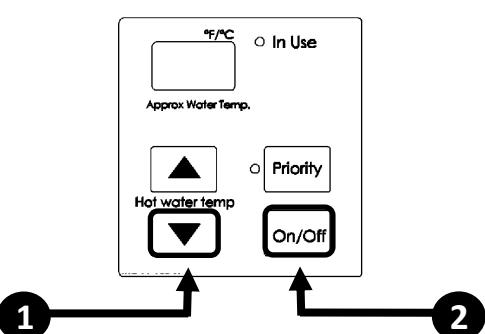


PERFORMANCE DATA**To obtain Performance Data:**

1. Press and hold the ▼ (Down) button.
2. While holding the ▼ (Down) button for 2 seconds, press and hold the "On/Off" button (hold both buttons simultaneously).

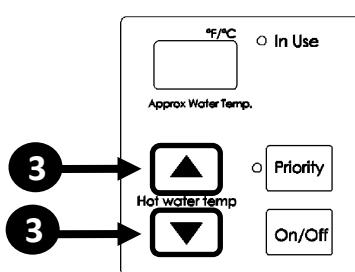

3. Use the ▲ (Up) and ▼ (Down) buttons to scroll to the desired performance information described below.

**Performance Data Table**

#	DATA	UNIT
01	Water Flow Rate	x0.1 gal/min
02	Outgoing Temperature	°F
03	Combustion Hours	x100 Hours
04	Combustion Cycles	See following information
05	Fan Frequency	Hz
06	Additional Controllers Connected	See following information
07	Water Flow Control Position	0=mid, 1=Open, 2=Closed
08	Inlet Temperature	°F
09	Fan Current	x10 mA
10	Total Bath Fill Amount	gallons
11	HEX Outlet Temperature	°F
12	By-Pass Flow Control Position	Degrees of opening
15	Freeze Protection Temperature (Indoor Unit Only)	°F
17	Freeze Protection Temperature (Outdoor Unit Only)	°F
19	Pump Hours	x100 Hours
20	Pump Cycles	See following information
21	Exhaust Temperature	°F

04 Combustion Cycles**20 Pump Cycles**

DISPLAY	CYCLE COUNT
000 to 999	x100 (0 to 99,900)
10- to 99-	x10,000 (100,000 to 990,000)
1-- to 6--	x1,000,000 (1,000,000 to 6,000,000)


06 Controllers Connected

CONTROLLER MODEL	CONNECTED	NOT CONNECTED
MC	—	—
BC	—	—
BSC & BSC2	1—, 2— (QTY2)	0—


Default display is 000.
— depends on connection status of another controller.

PARAMETER SETTINGS**To adjust the parameters:**

1. Press the "A" button for 1 second.

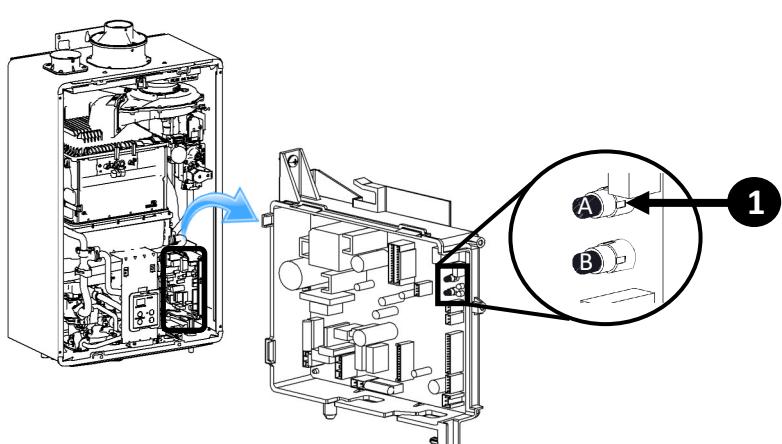


2. Use the ▲ (Up) and ▼ (Down) button on the controller to select a setting number (See Parameter Settings Table).

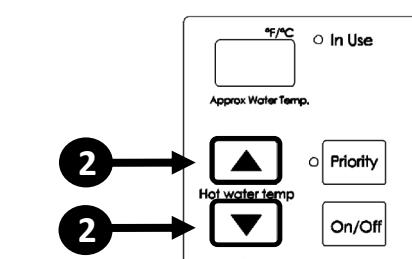

3. Once the desired setting number is selected, use the "On/Off" button on the controller to change the selection for the setting number.

Example: Display will change from 01A to 01b for Maximum Temperature setting (as shown below).

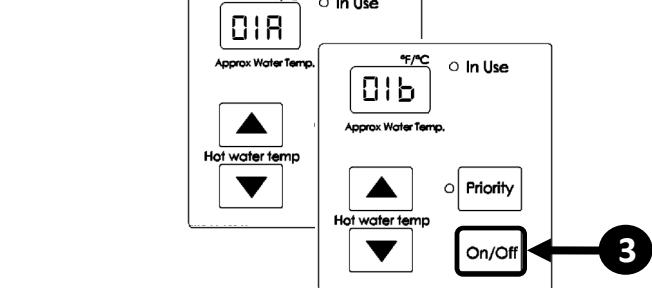

4. To exit the parameters, press the "A" button on the PC board for 1 second.

Parameter Settings Table

Default is A for all settings below except i0, i2, i3, and i4 which are factory set.

SETTING #	SETTING DESCRIPTION	SELECTION			
		R	b	c	d
01	Maximum Set Temperature	Residential: 120°F	Residential: 140°F		
02	High Altitude (Installation Location)	0-2,000 ft (0-610 m)	2,001-5,400 ft (610-1,646 m)	5,401-7,700 ft (1,646-2,347 m)	7,701-10,200 ft (2,347-3,109 m)
03	Service Soon ¹	Disabled	0.5 Year	1 Year	2 Years
04	Recirculation Settings	No Recirculation	Dedicated Mode	Crossover Mode	
				Long Loop	Short Loop
		Recirculation Mode ²	Economy	Comfort	
05	Control Switch	BMS ³	Air Handler (AH)		
07	Units in Standby (EZ Connect)	2	1		
10	Gas Type (Factory Set)	NG	LPG		
11	Maximum Flow Rate ⁴	Standard	High		
12	Water Heater Model	Without Pump	With Pump		
13	(Factory set values and not adjustable)	199 (3237)		160 (2530)	
14	Internal (Indoor)	External (Outdoor)			

¹ See section "Service Soon, 55" in the Installation and Operation Manual for more information.

² Setting 05 is available only if setting 04b, 04c, or 04d is selected.

Economy mode cycles the pump less often, using less energy to maintain the circulation loop temperature.

Comfort mode cycles the pump more frequently, ensuring the loop temperature remains higher (but also uses more energy).

³ BMS = Building Management System

⁴ Selecting "High" will increase the water flow rate to the maximum capacity.

ELECTRICAL DIAGNOSTICS

NOTE: Wiring diagram is available in manual and on the inside front cover.

Important Safety Notes

There are a number of (live) tests required when performing electrical diagnostics on this product. Proceed with caution at all times to avoid contact with energized components inside the water heater. Only trained and qualified service technicians should attempt to repair this product. Before checking for resistance readings, disconnect the power source to the unit and isolate the item from the circuit (unplug it).

Freeze Protection

This unit has freeze protection heaters mounted at different points to protect the water heater from freezing. All of them should display a positive resistance reading.

Flame Rod

Place one lead of your meter to the flame rod and the other to ground. With the unit running you should read between 5 - 150 VAC. Set your meter to the micro (μ) amp scale and arrange meter leads in line with the flame rod. You should read 1 μ amp or greater for proper flame circuit. In the event of low flame circuit, remove the flame rod and check for carbon or damage.

Amp Fuses

This unit has two glass fuses located on the PC Board, one inline (10) amp and one (4) amp glass fuse. Remove the fuses and check continuity through it. If you have continuity through each fuse then it is functioning. Otherwise the fuse is blown and must be replaced.

Thermistors

Check all thermistors by inserting meter leads into each end of the thermistor plug. Set your meter to the 20 K scale and read resistance. Applying heat to the thermistor bulb should decrease the resistance. Applying ice to the thermistor bulb should increase the resistance.

Below are examples of typical temperatures and resistance readings.

Temperature	Resistance Readings
59°F	11.4 - 14KΩ
86°F	6.4 - 7.8KΩ
113°F	3.6 - 4.5KΩ
140°F	2.2 - 2.7KΩ
221°F	0.6 - 0.8KΩ


Electrical Circuit Table

COMPONENT	WIRE COLOR	VOLTAGE	RESISTANCE	COMPONENT CONNECTOR	PCB CONNECTOR	PIN
Spark Electrode	Red-Black	11~13VDC*	34 K ~ 40 K ohms	D2	D	12-21
Combustion Fan	Red-Black	7~48VDC*	N/A	D3	D	4-6
	White-Black	10~12VDC*	N/A	D3	D	10-6
	Yellow-Black	11~13VDC*	N/A	D3	D	8-6
Water Flow Control Device	Red-Pink	N/A	44~52 ohms	D4	D	18-20
	White-Blue			D4	D	16-14
	Grey-Orange	12~14VDC	N/A	D4	D	30-12
	Blue-White	N/A	35~41 ohms	D5	D	5-7
	Yellow-Red			D5	D	11-9
Venturi Control Device	Black-Red	12~14 VDC	N/A	D5	D	30-12
	Black-Brown	less than 1VDC*		D5	D	30-25
	Black-Grey	less than 1VDC*		D5	D	30-23
By-Pass Flow Control Device	Red-Pink	N/A	44~52 ohms	D6	D	15-13
	White-Blue			D6	D	17-19
Gas Solenoid Valve	Yellow-Black	11~13VDC*	18~22 ohms	D7	D	29-27
Outgoing Thermistor	White-White			H1	H	3-2
	Blue-Blue					8-11
Inlet Thermistor	White-White			H2	H	4-2
Exhaust Thermistor	White-White			H3	H	2-5
Heat Exchanger Thermistor	White-White			H4	H	2-6
Freeze Protection Thermistor	Yellow-Black			H5	H	2-7
Overheat Switch	Black-Black	11~13 VDC	less than 1 ohm	H6	H	28-14
Water Flow Sensor	Black-Red	11~13 VDC	N/A	H7	H	30-12
	Yellow-Black	4~7 VDC*		H7	H	12-30
Additional Controller(s)	White-White	10~13 VDC	N/A	K	-	-






(* Value to be measured while unit is in operation)

DIAGNOSTIC CODES**To display diagnostic codes:**

1. Turn off the water heater by pressing the "On/Off" button.
2. Press and hold the "On/Off" for 2 seconds and then the ▲ (Up) button simultaneously.
3. The last 9 maintenance codes display and flash one after the other.
4. To exit diagnostic codes and return the water heater to normal operation, press and hold the "On/Off" button for 2 seconds and then the ▲ (Up) button simultaneously.
5. Turn on the water heater by pressing the "On/Off" button.

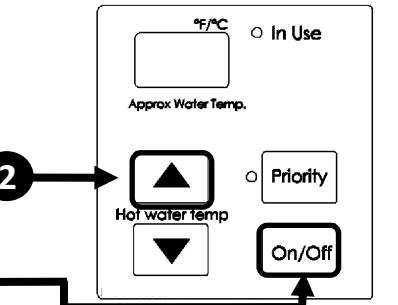

ITEM	DESCRIPTION	PART NUMBER	RUR199i	RUR199e	RUR160i	RUR160e
003 Lower Wall Mount Bracket	109000381 1 2 1 2	140 Secondary Heat Exchanger	107000266 1 1 1 1	433 Pipe Bracket	109000637 1 1 1 1	433 Pipe Bracket
004 Upper Wall Mount Bracket	109000394 1 1 1 1	141 Secondary Heat Exchanger Bracket	109000615 1 1 1 1	434 Retention Clip	109000496 2 2 2 2	434 Retention Clip
007 Connection Reinforcement Plate	109000395 1 1 1 1	142 Commercial Heat Exchanger Gasket	109000616 1 1 1 1	435 Hot Water Connection Fitting	107000275 1 1 1 1	435 Connection Pipe Assembly-Small
008 Rubber Bushing	109000394 1 1 1 1	145 Condensate Trap	107000267 1 1 1 1	442 Clip	107000276 1 1 1 1	442 Clip
010 Residential Screw and Washer-Black	106000445 4 4 4 4	147 Condensate Drain tube	107000268 1 1 1 1	443 Retention Clip	109000638 1 1 1 1	801 Screw
011 Commercial Screw and Washer-Black	109000396 8 8 8 8	150 Electrode/Flame Rod Assembly	105000232 1 1 1 1	443 Retention Clip	U211-322X01 1 1 1 1	802 Screw
012 Combustion Chamber Support Plate	109000597 2 2 2 2	151 Electrode	105000233 1 1 1 1	445 Hot Water Supply Connection Pipe (pair)	107000296 1 1 1 1	803 Screw
013 Truss Screw	109000598 14 12 14 12	152 Flame Rod	105000234 1 1 1 1	452 Clip	109000639 1 1 1 1	804 Screw
015 Igniter Bracket	109000599 1 1 1 1	153 Electrode Packing	105000297 1 1 1 1	455 Bypass Tube (set) - P	109000648 3 3 3 3	805 Screw
016 Igniter Assembly	105000230 1 1 1 1	154 Electrode Plate	109000618 1 1 1 1	460 Hot Water Servo Valve Assembly	109000649 8 8 8 8	806 Screw
017 Grounding Screw	CP-80452 1 1 1 1	155 Electrode Heater Bracket	109000619 1 1 1 1	465 Thermistor	U217-449 5 5 5 5	807 Screw
018 Controller Bracket FF	109000500 1 1 1 1	156 Electrode Sleeve	109000620 1 1 1 1	466 Hot Water Supply Connection Port	109000641 12 12 12 12	808 Screw
019 Controller	105000260 1 1 1 1	200 Exhaust Duct Assembly FF	108000082 1 1 1 1	467 Seal Plug Set for Crossover mode	109000648 4 4 4 4	809 Screw
020 Thermistor Sensor	105000261 1 1 1 1	202 O-Ring	108000018 2 2	468 O-Ring	109000217 4 4 4 4	810 Screw
021 TH Packing	109000490 1 1 1 1	203 Exhaust Duct Packing	109000621 1 1 1 1	469 O-Ring	109000650 9 9 9 9	811 Screw
033 Rubber Bush	CF79-4120-A 1 1 1 1	204 Thermistor	105000235 1 1 1 1	471 O-Ring	ZAD0408UK 1 1 1 1	812 Screw
034 Controller Bracket W	109000503 1 1 1 1	205 O-Ring	107000323 4 4 4 4	472 Clip	109000651 6 4 6 4	813 Screw
040 Front Cover Panel Assembly FF	109000504 1 1 1 1	206 Exhaust Packing	109000646 1 1 1 1	475 Pressure Relief Valve Connection	107000329 1 1 1 1	814 Screw
042 Front Cover Panel Assembly W	109000506 1 1 1 1	207 Thermistor Screw	109000622 1 1 1 1	478 Relief Pipe Assembly	109000807 1 1 1 1	815 Screw
044 Screw Cover	109000230 2 2 2 2	210 Flue Connection Assembly	108000083 1 1 1 1	500 Circulation Pump Assembly	109000456 1 1 1 1	816 Screw
045 Front Panel Packing-Top	109000120 2 2 2 2	212 Exhaust Pipe Connection Port - 2"	108000084 1 1 1 1	502 Pump Connection Elbow	CP-20883-4 2 2 2 2	817 Screw
046 Front Panel Packing-Side FF	109000508 2 2 2 2	213 Exhaust Gasket - 2 inch	108000084 1 1 1 1	504 Circular Joint Connection w/Check Valve	ZFD04105Z 1 1 1 1	818 Screw
047 Front Panel Packing-Side W	109000121 2 2 2 2	215 Air supply pipe seal ring	108000017 1 1 1 1	507 Water Supply Connection w/Check Valve	ZFA0408SZ 1 2 1 2	819 Screw
100 Burner Case-Large	106000113 1 1 1 1	220 Air supply box	108000085 1 1 1 1	509 Check valve	109000284 1 1 1 1	820 Screw
101 Burner Gasket-Large	109000509 1 1 1 1	221 Air supply filter	108000086 1 1 1 1	512 Drain plug	410UK 2 2 2 2	821 Vent Screen Set
102 Burner Plate Assembly-Large	106000114 1 1 1 1	222 Air Supply Connection	108000087 1 1 1 1	513 O-Ring	109000628 1 1 1 1	822 Wall Bracket
103 Combustion Check Valve Assembly	107000262 1 1 1 1	223 Air Supply Gasket - 2 inch	109000624 1 1 1 1	515 Internal Circulation Pipe Assembly	107000306 1 1 1 1	860 Vent Screen Set
105 Burner Case-Small	106000115 1 1 1 1	230 Exhaust Duct Assembly W	108000088 1 1 1 1	520 Pump Outlet Connection Pipe Assembly	107000307 1 1 1 1	861 Vent Screen Set
106 Burner Gasket-Small	109000510 1 1 1 1	233 Front Exhaust Seal W	108000094 1 1 1 1	523 O-Ring	107000309 1 1 1 1	862 Vent Screen Set
107 Burner Plate Assembly-Small	106000116 1 1 1 1	234 Thermistor	108000063 1 1 1 1	529 PCB Assembly	107000314 2 2 2 2	863 Vent Screen Set
110 Combustion Fan Assembly	108000081 1 1 1 1	401 Water Supply Filter Plug Assembly	107000317 1 1 1 1	701 PCB Electrical Cover	107000303 1 1 1 1	864 Vent Screen Set
111 Fan Mounting Packing	109000511 1 1 1 1	403 Water Flow Sensor Assembly	107000669 1 1 1 1	702 PCB EC Cover	107000304 1 1 1 1	865 Vent Screen Set
112 O-Ring	109000512 1 1 1 1	404 Clip	108000094 1 1 1 1	710 Power Cord Assembly FF	107000305 1 1 1 1	866 Vent Screen Set
113 Hexagon Head Screw	106000117 1 1 1 1	405 O-Ring	107000063 1 1 1 1	711 Power Cord Assembly W	107000313 1 1 1 1	867 Vent Screen Set
114 Gas Valve Assembly With Orifice	106000117 1 1 1 1	406 Bypass Servo Assembly	107000324 9 9 9 9	712 Sensor Harness	105000236 1 1 1 1	868 Vent Screen Set
115 O-Ring	109000252 2 2 2 2	407 Cover	107000063 1 1 1 1	713 Ceramic Valve heater FF	105000238 1 1 1 1	869 Vent Screen Set
116 Gas Connection Pipe	106000118 1 1 1 1	408 Inlet Water Thermistor	107000318 1 1 1 1	719 Igniter Ground Harness	105000239 1 1 1 1	870 Vent Screen Set
117 Gas Tube Bracket	109000264 1 1 1 1	409 Flow Turbine Assembly	107000319 1 1 1 1	723 HEX Freeze Protection Heater Assembly	105000240 1 1 1 1	871 Vent Screen Set
118 Inlet Gas Supply/Connection	106000119 1 1 1 1	410 O-Ring	M10B-2-14 8 8 8 8	724 SEC HEX Freeze Protection Heater Assy	105000247 1 1 1 1	872 Vent Screen Set
119 Inlet Gas Test Port Screw	106000138 2 2 2 2	412 Retention Clip	AH69-310 3 3 3 3	730 Heater Clip A	AU224-618X01 1 1 1 1	873 Vent Screen Set
120 O-Ring	M10B-34 2 2 2 2	413 Clip	109000244 3 3 3 3	731 Heater Clip C	U250-625 3 4 3 4	874 Vent Screen Set
121 Noise Filter	106000120 1 1 1 1	414 Plug Band	109000018 1 1 1 1	732 Ceramic Valve Heater W	105000255 1 1 1 1	875 Vent Screen Set
130 Heat Exchanger Assembly-large	107000263 1 1 1 1	415 3/4" Water Supply Connection Port B	107000400 1 1 1 1	733 Freeze Protection Heater Bracket	109000647 1 1 1 1	876 Vent Screen Set
131 Heat Exchanger Assembly-Small	107000264 1 1 1 1	416 Water Supply Connection Pipe (pair)	107000291 1 1 1 1	741 Freeze Protection Heater (set) -2	105000246 1 1 1 1	877 Vent Screen Set
133 Heater Bracket	109000513 2 2 2 2	420 Secondary Connecting Pipe Assembly	107000272 1 1 1 1	742 Freeze Protection heater (set) -3	105000257 1 1 1 1	878 Vent Screen Set
135 Over Heat Sensor (OHS)	105000231 1 1 1 1	430 Connection Pipe Assembly-Large	107000273 1 1 1 1	746 Heater Harness-2	105000258 1 1 1 1	879 Vent Screen Set
136 OHS Bracket	109000514 1 1 1 1	431 Heat Exchanger Pipe Connection	107000274 1 1 1 1	747 Heater Harness -3	105000259 1 1 1 1	880 Vent Screen Set
137 Heat Exchanger Insulator	107000265 1 1 1 1	432 O-Ring	107000325 3 3 3 3	750 Remote Control Harness	105000249 1 1 1 1	881 Vent Screen Set
139 Clip	105000090 1 1 1 1					

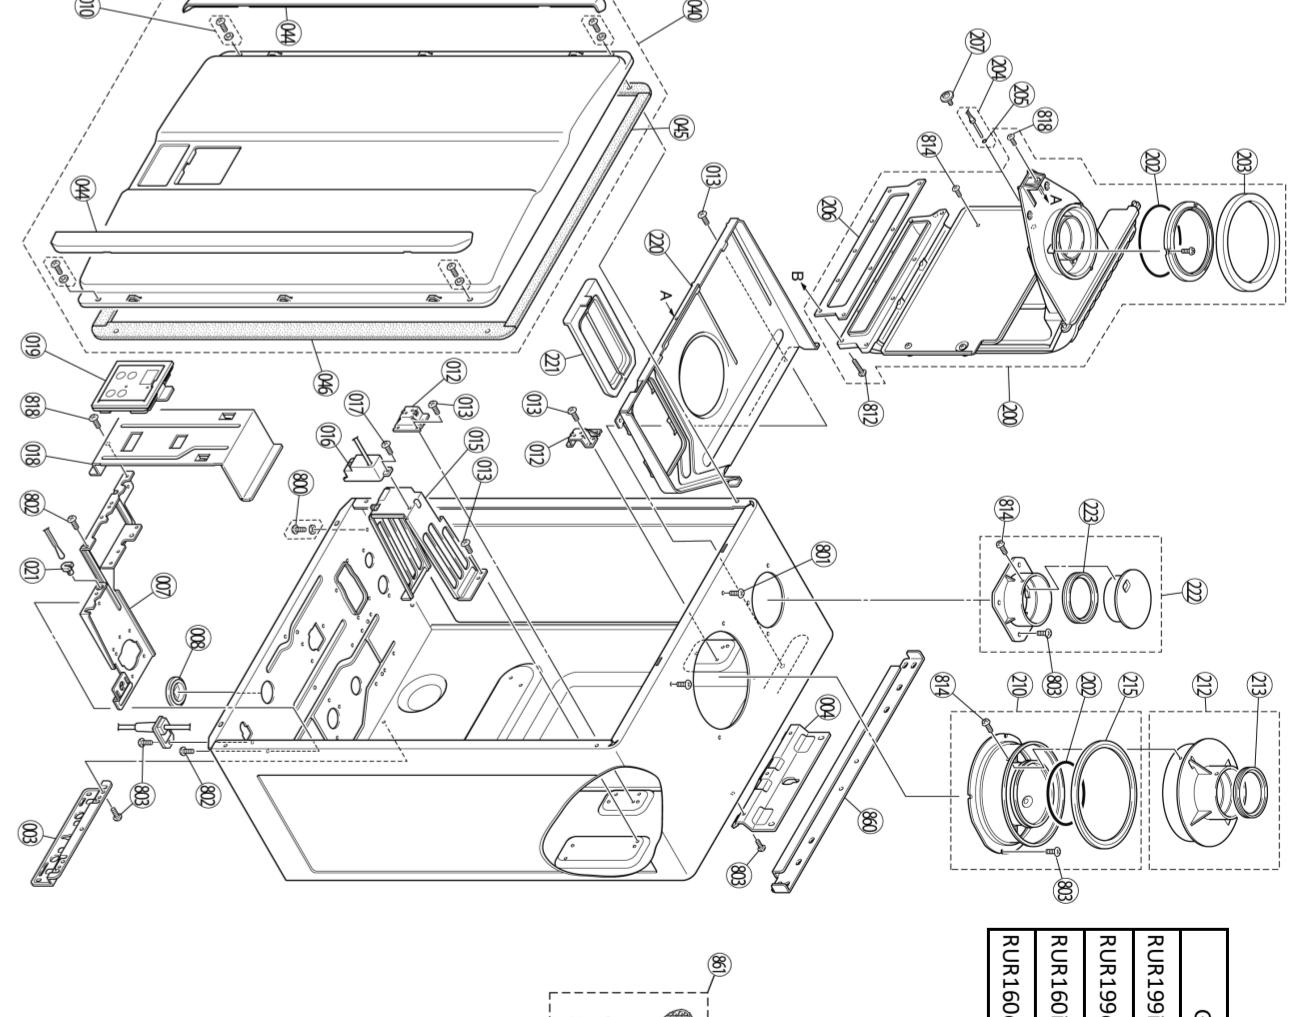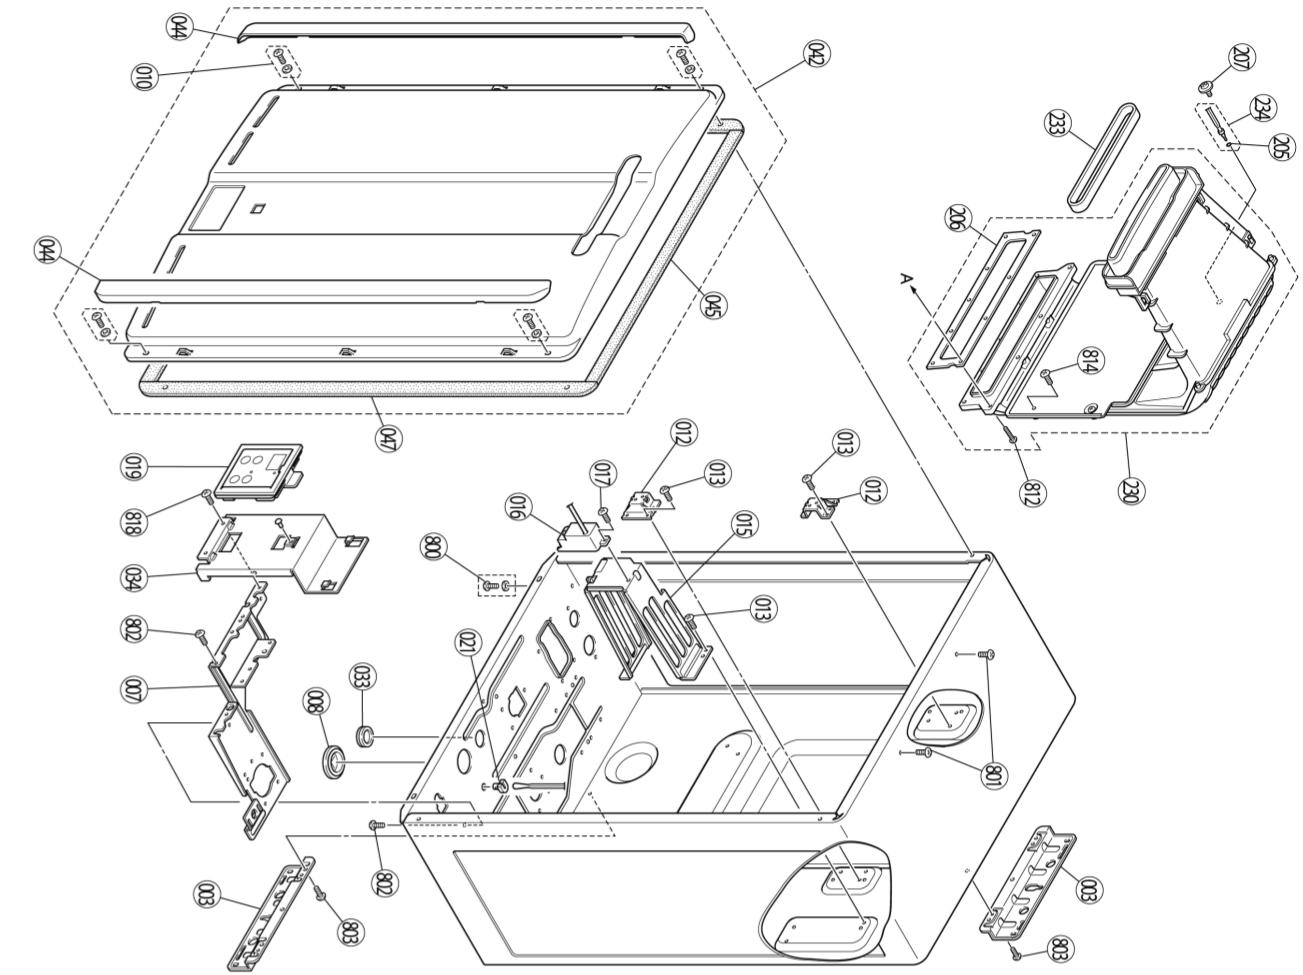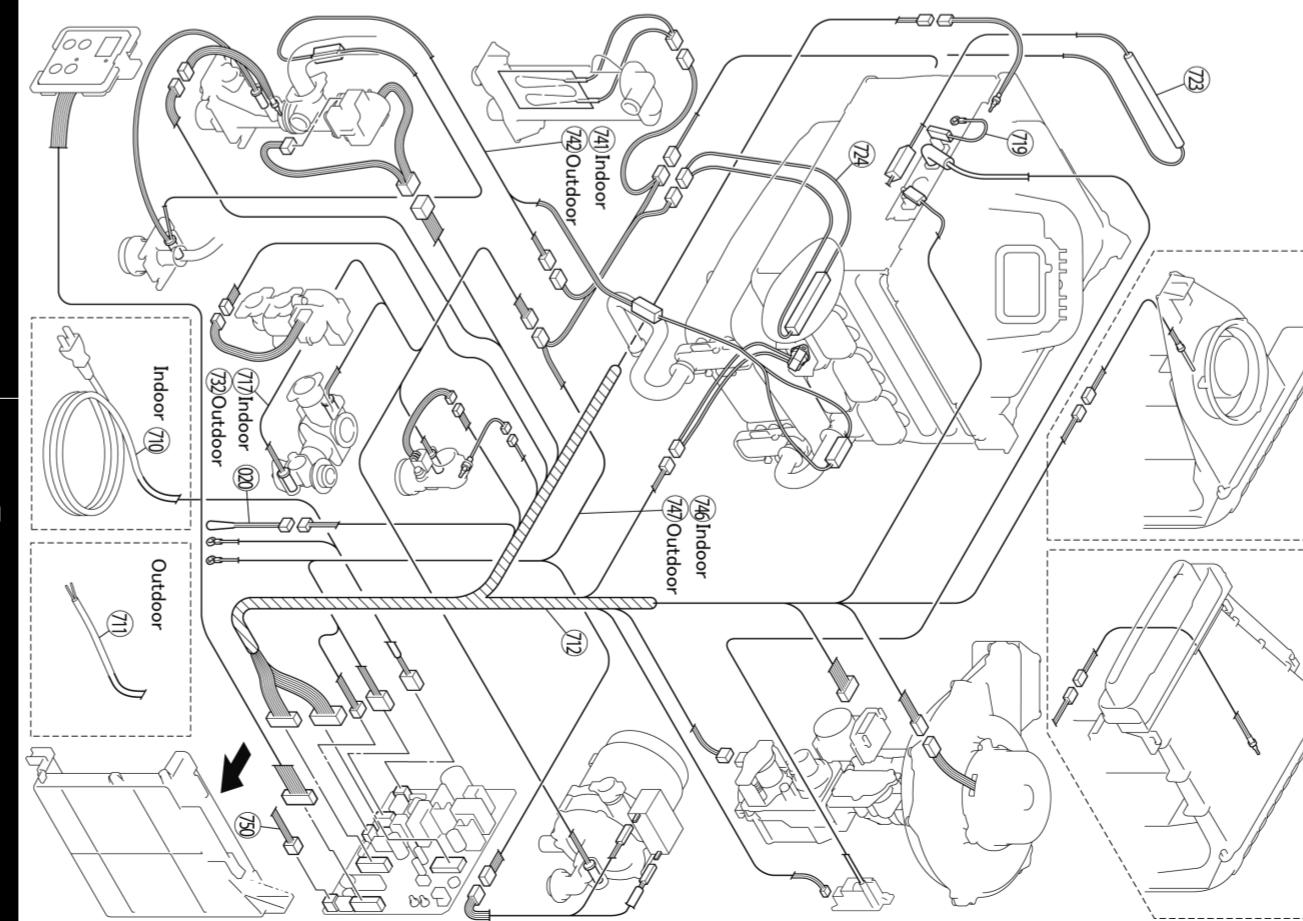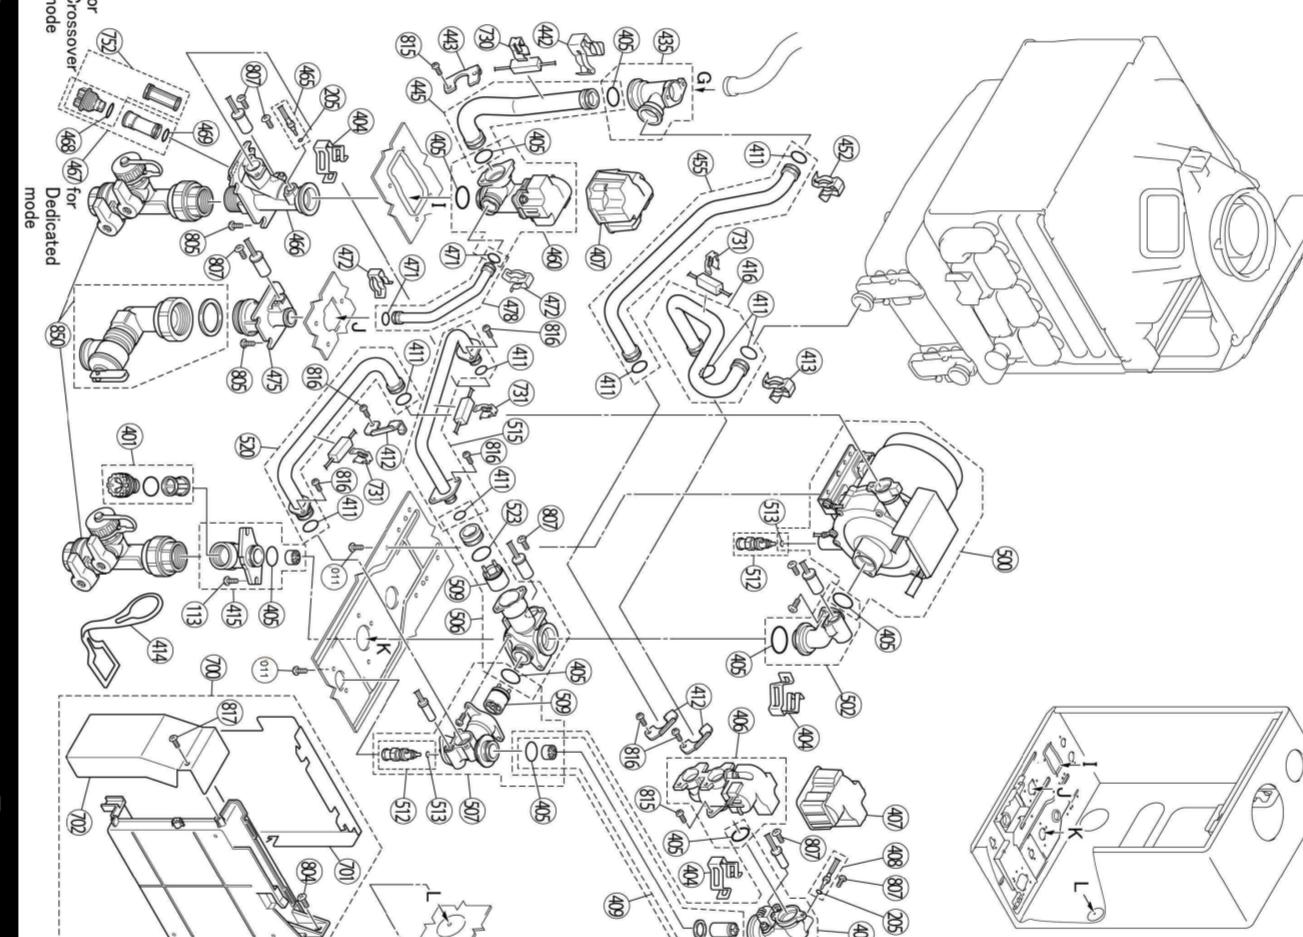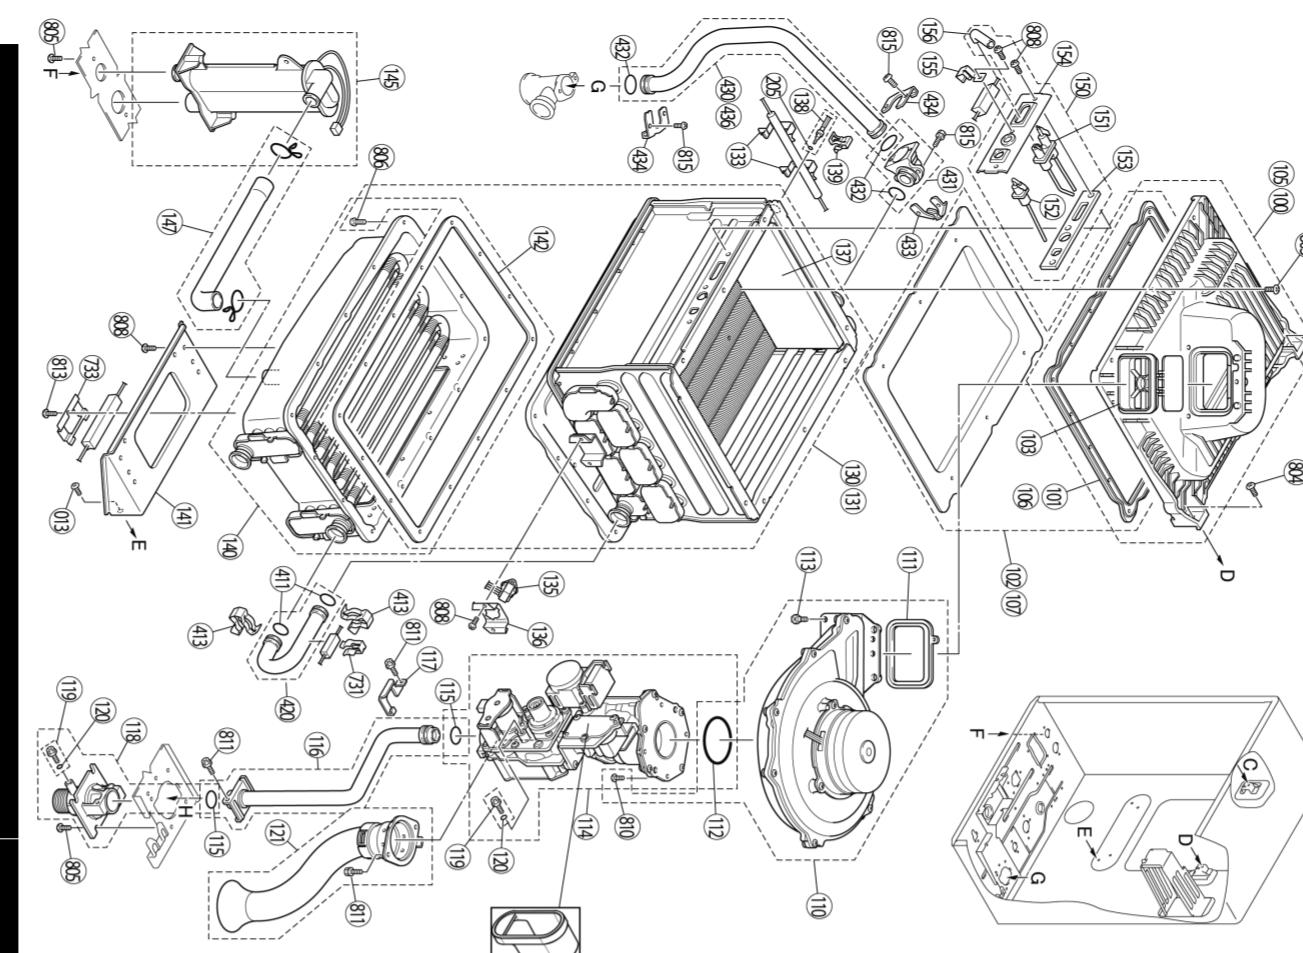

Gas Conversion Kits

RUR199i	103000076
RUR199e	103000077
RUR160i	103000080
RUR160e	103000081

Rinnai America Corporation continually updates materials, and as such, content is subject to change without notice. For further information, contact Rinnai at 1-800-521-9419 or visit www.rinnai.us.